

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
81	LAMP, EMGCY		Y	
251	Page/CHIME AMP			Y
308	LAMP		Y	
313	LAMP, COCKPIT FLOOR		Y	
328	Lamp, Aux Float Panel			Y
685	BULB		Y	
927	PULLER		Y	
1309	LAMP		Y	
1385	LAMP		Y	
1495	LAMP		Y	
1683	LAMP	Y	Y	
1814	FITTING	Y		
1820	LAMP		Y	
1873	LAMP		Y	
2342	PRESS SWITCH		Y	
2820	PRESS SWITCH		Y	
4180	Ram and Pump Set			Y
4201	HANDLE			Y
4314	PRESS SWITCH		Y	
4555	LAMP		Y	
4582	LAMP		Y	
4594	LAMP		Y	
4596	LAMP		Y	
4608	VALVE, PRIOR		Y	
5699	ACCESSORY KI		Y	
6832	LAMP, LDG CONTROL PANEL		Y	
6838	LAMP		Y	
7052	COUPLING		Y	
7341	LAMP		Y	
7610	Tape, photo-reflective, Rolls			Y
007923	Photo-cell			Y
8058	STEP PLATE ADAPTER		Y	
008407	Adapter, Torque Wrench			Y
8872	TRANSFORMER		Y	
10191	FMS Configuration Module			Y
10705	GPS ANTENNA			Y
11373	SHAFT PINION	Y		
14039	ANTENNA TEE		Y	
15000	HOBBS HOUR		Y	
16600	Leak Detector, Refrigerant R-134a			Y
17461	SEAL	Y		
18500	BULB		Y	
12-50	Antenna, VHF			Y
20706	Junction Box Assembly			Y
25171	RING	Y		
27152	SPRING	Y		
30191	LENS-GREEN		Y	
34615	PLUG, BYPASS			Y
43240	Thermometer, Digital Temp.			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
62615	FILTER HOUS.		Y	
8-2125	PULLEY		Y	
99138	SLEEVE		Y	
99174	SLEEVE		Y	
99199	SLEEVE		Y	
99372	SLEEVE SPEED		Y	
99837	SLEEVE, Speedi			Y
99844	SLEEVE, Speedi			Y
124282	CALPROM AHRS Memory Module			Y
140691	INST TRAY W/		Y	
208249	DECAL	Y		
238126	VALVE		Y	
316090	GASKET		Y	
323177	Lug			Y
324693	Repair Emergency Lights Switch Panel			Y
3061-01-02	UCD ADV Data Loader			Y
473051	Smoke Detector		Y	
473155	FLAME DET.		Y	
600047	NDI Penetrant Kit			Y
656767	COMPENSATOR	Y		
722376	Replace Main Rotor Contactor			Y
839308	CONTACT		Y	
839332	HOUSING		Y	
939564	SEAL		Y	
972596	Valve, Depressurization, Pump			Y
974214	Valve, Bleed Relief, Pump Modules 1&2			Y
974573	BACKUP RING, INBRD PRESS QD			Y
974574	BACKUP RING PRESS INBRD QD			Y
978008	GASKET, GASK-O-SEAL T/R SERVO			Y
1109460	COVER	Y		
9074-1-11	Gage, Rotor Brake Master Cylinder			Y
2686380	FILTER ASSY.			Y
3004904	RING		Y	
3200207	SEAL		Y	
5003424	PISTON		Y	
5011250	INSULATOR		Y	
5012144	PISTON STOP		Y	
05290107	Tailed Plug Assembly			Y
5900102	DISPLAY LCD		Y	
07156001	Adapter, Pressure Relief Valve			Y
8517883	HEAD BOLT	Y		
9510375	CLIP	Y		
9510895	COLLAR SPLIT	Y		
9523993	SEAL	Y		
9534512	O-RING		Y	
11307019	Manometer			Y
20598604	ASH TRAY		Y	
20603001	Valved Socket			Y
20944001	Adapter, Inflate/Deflate Valve			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
29333306	RADS, BASIC SET		Y	
0401270390	NUT JAM		Y	
0401270400	NUT		Y	
0401270560	LEVER		Y	
0401270570	LEVER		Y	
0401270650	WASHER		Y	
0401270690	SHAFT		Y	
0401270710	LEVER		Y	
0401270750	CABLE STOP		Y	
0401270760	SEAL COVER		Y	
0401270970	FIREWALL-UPP		Y	
0401270980	SUPPORT		Y	
0401271090	BRACKET-PLUG		Y	
0401271150	PLATE-CORNER		Y	
0401271170	PLATE		Y	
0401271210	PLATE-COVER		Y	
0401271300	WASHER		Y	
0401271320	SUPPORT		Y	
0401271330	CLAMP		Y	
0401271350	CLAMP SUPPORT		Y	
0401271420	BRACKET-LH		Y	
0401271430	BRACKET-RH		Y	
0401271530	TUBE ASSY		Y	
0401271650	SPACER		Y	
0401271660	SPACER		Y	
0401271690	SHAFT FIREWAL		Y	
0401271750	STOP		Y	
0401271850	BRACKET		Y	
0401271860	BRACKET		Y	
0401271990	FLANGE		Y	
0401272080	Seal		Y	
0401272300	WASHER		Y	
0401272310	WASHER		Y	
0401272320	WASHER		Y	
0401272330	PLATE-DEFLCT		Y	
0401272340	BRACKET 5V		Y	
0401272350	PLATE DEFLCT		Y	
0401272420	AIR DUCT FWD		Y	
0401272430	AIR DUCT FWD		Y	
0401272530	AIR DUCT		Y	
0401272540	WASHER		Y	
0401272600	TUBE ASSY		Y	
0401272610	TUBE ASSY		Y	
0401272640	RH PLUG		Y	
0401272680	ELBOWLH		Y	
0401272740	SHOULDER BUS		Y	
0401272760	FWD JUNCTION		Y	
0401272770	DUCT		Y	
0401272790	PANEL		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
0401272800	PANEL		Y	
0401272810	ELBOWRH		Y	
0401272820	AIRDUCT		Y	
0401272830	SLEEVE		Y	
0401273020	BEARING		Y	
0401273070	AIR INTAKE		Y	
0401273160	CUP		Y	
0401273170	FLANGE		Y	
0401273280	FITTINGSPRIN		Y	
0401273330	CAP		Y	
0401273380	STIFFINER_OTR		Y	
0401273410	DUCT		Y	
0401273420	AIR DUCT		Y	
0401273710	BOLT		Y	
0401273750	COVERSEAL		Y	
0401273760	ADAPTER		Y	
0401273820	DUCT		Y	
0401274020	L.H.TRIGGER		Y	
0401274040	SUPPORT ASSY		Y	
0401274060	PIN		Y	
0401274080	STOP-IDLE LH		Y	
0401274090	PIPE, OIL RE		Y	
0401274100	TUBE ASSY		Y	
0401274110	OIL PIPE		Y	
0401274120	TUBE		Y	
0401274130	STOP-FLY		Y	
0401274240	PIPE, TANK		Y	
0401274250	TANK VENT L.H.		Y	
0401274260	HEATSHIELD		Y	
0401274510	DEFLECTORLH		Y	
0401274530	SUPPORT ASSY		Y	
0401274560	STOP-IDLE RH		Y	
0401274580	TUBE ASSY		Y	
0401274610	SPRING	Y	Y	
0401274620	ELBOW		Y	
0401274640	SPRINGS		Y	
0401274660	PROTECTION		Y	
0401274700	SPACER		Y	
0401274720	HOSE		Y	
0401274730	HOSE		Y	
0401274760	Hose		Y	
0401274770	HOSE		Y	
0401274780	LH HOSE		Y	
0401274800	HOSE		Y	
0401274910	ELBOW		Y	
0401275180	SPRING		Y	
0401275210	BRG ASY CENT		Y	
0401275230	BEARING ASSY		Y	
0401275260	LH CONTROL CABLE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
0401275270	RH CONTROL CABLE		Y	
0401275430	STIFFINER		Y	
0401275500	PIPE		Y	
0401275740	SHIELD		Y	
0401275750	SHIELD		Y	
0401275850	WASHER		Y	
0401275860	NUT		Y	
0401275870	BRACKET		Y	
0401275880	SHIM		Y	
0401277050	ENG.MT OUTBD		Y	
0401277060	TRIPOD		Y	
0401277070	BIPOD		Y	
0401277080	ENS SUP INTE		Y	
0401277090	DRAG STRUT		Y	
0401277640	BOX,OVERSPD.		Y	
0401277660	SENSOR		Y	
0401277670	DUCT		Y	
0401277880	INLET DUCT		Y	
0401277930	AFT STRUT		Y	
0401277940	PIPE		Y	
0401277950	PIPE		Y	
0401278140	5V PWR SUPPLY		Y	
0401278390	GROUND BRAID		Y	
0401280010	PIN		Y	
0401280040	STRUT ASSY		Y	
0401280170	RH FIREWALL		Y	
0401280200	BASE		Y	
0401280230	WASHER		Y	
0401280730	THREADED END		Y	
0401280740	BOLT		Y	
0401280750	PIN		Y	
0401280760	ROD END		Y	
0401280780	OTBD LWR FWD LH		Y	
0401280790	OTBD LWR FWD RH		Y	
0401280800	FITTING FWD		Y	
0401280810	FITTING FWD		Y	
0401280820	DRAG STRUT L		Y	
0401280830	DRAG STRUT R		Y	
0401280840	SIDE FTG ENG		Y	
0401280850	SIDE FTG ENG		Y	
0401280860	REAR FTG ENG		Y	
0401280960	PIN		Y	
0401281180	Ring, Teflon		Y	
0401281280	SPACER		Y	
0401281630	WASHER		Y	
0401281950	STIRRUP		Y	
0401282210	RT EJECTOR F		Y	
0401282220	LFT EJECT FR		Y	
0401282410	SUPPORT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
0401282530	SLEEVE		Y	
0401287170	DUCT		Y	
0401287190	CUP		Y	
0401287200	PLATEREAR		Y	
0401287250	TUBE		Y	
0401287260	TUBE		Y	
0401287280	P2 TUBE		Y	
0401287330	SEAL		Y	
0401287410	L/H PROLONGATOR		Y	
0401287420	EXHAUST PROL		Y	
0401287450	ADAPTER RH		Y	
0401287460	ADAPTER,LH		Y	
0401287470	VALVE-CONTRO		Y	
0401287480	VALVE-CONTRO		Y	
0401287610	FLANGE		Y	
0401287650	SUPPORT		Y	
0401287660	LH EJECTOR		Y	
0401287670	RH EJECTOR		Y	
0401287690	HEAT SHIELD		Y	
0401287700	HEAT SHIELD		Y	
0401287730	L/H PROLONGATOR		Y	
0401287740	R/H PROLONGATOR		Y	
0401288250	LABEL		Y	
0401288260	LABEL		Y	
0401288270	LABEL		Y	
0401288280	LABEL		Y	
0401288350	DECAL		Y	
0401288360	DECAL		Y	
0401288750	DUCT ASSYAIR		Y	
0443700010	ENGINE BACK UP BOX		Y	
1001540042	Spring			Y
2302020062	Washer			Y
2323020003	Washer			Y
2323020004	Washer			Y
2401270240	PLATEEND		Y	
2401282170	SEAL	Y	Y	
9550144990	SEAL		Y	
9550160260	BND		Y	
9560117630	CLAMP		Y	
9560127140	CLAMP		Y	
9560152550	STUD		Y	
9560153820	CLAMP		Y	
9560153890	CLAMP		Y	
9560157430	LOCK		Y	
9560157520	HEAT SHIELD		Y	
9560157530	HEAT SHIELD		Y	
9560157810	HOSE		Y	
9560157850	HOSE ASSY		Y	
9560157990	TUBE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
9560158180	FILTER		Y	
9562830030	CLIP		Y	
9564090070	NUT		Y	
9682001951	O-RING		Y	
9727081254	INSERT		Y	
9740050022	WASHER		Y	
9741040000	WASHER		Y	
9741060000	WASHER		Y	
9744011200	CIRCLIP		Y	
9744012200	CIRCLIP		Y	
9752005044	WASHER		Y	
9794190253	PACKING		Y	
9794236323	O-RING		Y	
9801041214	SCREW		Y	
9801051214	SCREW		Y	
9801052014	SCREW		Y	
9801054614	SCREW		Y	
9801055614	SCREW		Y	
9801061214	SCREW		Y	
9848301429	SCREW		Y	
9867100500	NUT		Y	
9907025002	BOLT		Y	
9907064006	BOLT		Y	
9907088001	UNION		Y	
9980040022	WASHER		Y	
9984200020	WASHER		Y	
00033096-7	LIGHT ASSY		Y	
00033096-8	LIGHT		Y	
00033106-1	GASKET ASSY.		Y	
01-0599-0000	Towbar, Standard Head			Y
01-0790101-04	STROBE PWR S		Y	
01-1127-0000	TOW BAR, STD		Y	
01-1127-0006	TOW BAR, TELESCOPIC		Y	
01-1202-0000	Towbar, Aircraft			Y
015-10306-001	ANTENNA, SAT			Y
02017-0133-0007	Air Data Computer			Y
02-0517-0140	Tripod Jack, Aircraft			Y
02-7813-0100	Axle Jack			Y
030620-11	Control Box Assembly			Y
031-1007-000	CONTACT		Y	
0414-3008	CASE ASSY		Y	
062-10400	Piston			Y
06-4035-0500	Hydraulic Fluid Service Cart			Y
06-5056-1D00	Shimmy Servicing Unit			Y
066-01177-0101	KTA-970 TCAS I			Y
066-14002	Pads, Rotor Brake			Y
07-00JXP10	LAMP SOCKET		Y	
071-00112-0200	TCAS Configuration Module			Y
071-01599-0100	TCAS Antenna			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
0711311-132-1	SWITCH		Y	
07-3006-6900	Fuel Sample Bottle			Y
07-3009-6900	Unit, Fuel Sample			Y
082-13800	Spring			Y
08-4049-1012	Wash Cart, Turbine Engine Compressors			Y
088-03300	Insulator			Y
091-21302	Subassembly, Housing			Y
094-14900	Nut, 12 pt.			Y
100-0325-01	DRAIN VALVE			Y
100CR-ND	LED BLUE		Y	
10109DAP	TRANSIPAD		Y	
10125-149-1-8	CABLE		Y	
10125-176-7-8	Cable	Y		
101-35100	Packing Assembly			Y
101-61100	Packing Assembly			Y
10195-5	TUBE	Y		
102PK4	MOUNT	Y		
10371-150	Connector			Y
10371-178	Connector			Y
10371-179	Connector			Y
10-393740-1	SWITCH		Y	
10420-11968E	INDICATOR		Y	
106111-10617514	CALL MODULE		Y	
107-02400	Ring, Scraper			Y
10E93-3	SHAFT		Y	
10E97-1	SPACER		Y	
1101550-05	BUCKLE		Y	
1101756-01	LAP BELT AY		Y	
1101757-01	CROTCH STRAP		Y	
110-338	Antenna, ELT			Y
113-009-1671	BACKUP RING			Y
113-010-1671	BACKUP RING			Y
113-014-1671	BACKUP RING			Y
113-111-1671	BACKUP RING			Y
113-113-1671	BACKUP RING			Y
113-119-1671	BACKUP RING			Y
113-129-1671	BACKUP RING			Y
116231-7	BYPASS VALVE		Y	
11-6602-1000	DC Ground Power Cart			Y
11692-02G80	EXTRUSION		Y	
11767-14	CLAMP,LOOP			Y
11800-3	Blade Tracker, Optical			Y
11HSX295	Relay		Y	
11SM701T	SWITCH		Y	
12079-20E012	Diode Block			Y
12-137E	Antenna,			Y
12-190-222P4	Antenna, VHF/UHF # 1			Y
125810-11	HSI		Y	
12J16-150	Clamp			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
12J68-1410	Clamp			Y
12J70-1	Coupling			Y
12S1-18-1AA	STUD ASSY		Y	
12S1-8-1AA	STUD		Y	
130-4004	BUZZER		Y	
130496-000	SPRING STYLU		Y	
1-322325-0	SPLICE-TC		Y	
1-322325-1	SPLICE-TC		Y	
136352-1	SWITCH,FRANGBLE			Y
13889CP	BEARING	Y		
139-32700	Pin			Y
139-32800	Retainer, Spring, Outer			Y
139-32900	Retainer, Spring, Inner			Y
139790-2	Battery Pack Assembly			Y
13J30-3-0800-1	Remove/Install APU Generator			Y
140059-1	SPAR Emergency Beacon			Y
1406-01-2	FMS Data Loader			Y
140844-1	Pressure Cartridge			Y
140855-0010	Compass Control Unit			Y
141063-2	Beacon Airfoil Unit			Y
141065-1	Energy Storage Unit			Y
141066-1	ELB Control Panel(CCU-35)			Y
142185-1110	AHRS Processor			Y
145K41-1	TIRE		Y	
14-6801-0120	Tire Bead Breaker			Y
14-6806-6011	Pressure Gage, Tire			Y
150052-1	Comp Low Press Sensr			Y
150052-2	Comp High Press Sensr			Y
150514-1	Cabin Evap Fan			Y
150515-1	Cockpit Evap Fan			Y
150516-1	Condenser Fan			Y
150773-1	CKPT Evap Duct			Y
151510-1	Comp Flex Hose			Y
151537-1	CBN Evap Flexible Hose			Y
151802-1	Comp High Press Switch			Y
15226-1-30	TUBE ASSY	Y		
1531453-17	SHAFT ASSY	Y		
1550LOCK	LOCK		Y	
156800-1	Subcooler			Y
1592-00088	Thermometer, Self-Indicating			Y
15R10-1AC	NUT, Receptacle Attach			Y
16065-012	Cap, Dust (Vent tubes)			Y
16065-015	Cap, Dust (Studs)			Y
16128-026	Washer, Belleville			Y
16163-028	Receptacle Assembly			Y
16L16F	BEARING	Y		
170-001-125	C/BREAKER		Y	
17185A51	STL SPRING C		Y	
1730BEARING	CONE BEARING		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
17801B	Recovery/Recycling/Recharging Unit			Y
18-4208-0010	Nitrogen Servicing Unit			Y
187-00300	Adaptor			Y
1-8X10-32	FITTING	Y		
1944B74	INSERT		Y	
1944D226	NAME PLATE		Y	
1944D69	PIN		Y	
1945B64B	STRAP		Y	
195-81003-64	AC Ground Power Cart			Y
1B7300-2	CHIP DETECTOR SENSOR			Y
1B8616-1	SELF CLOSING VALVE, Chip Detector			Y
1N5334B	DIODE		Y	
1N5550	DIODE		Y	
1S-AL4C67G	ELBOW	Y		
20020-11293	AIRSPPEED IND		Y	
20020-11327	A.S.I. (CAA MOD)		Y	
2007500-4	LAMP ASSY		Y	
2-011C557-70	Packing			Y
2-014C1124-70	Packing			Y
2-015C557-70	Packing			Y
2-016C557-70	Packing			Y
2019-32-201	FMS/GPS #2 CDU(UNS-1Esp)			Y
2019-42-201	FMS/GPS #1 CDU(UNS-1Esp)			Y
2-019C557-70	Packing			Y
203-022-017	INDICATOR		Y	
2-034N674-70	O-RING		Y	
20595-23	LIGHT ASSY	Y		
211-577-9002	CLAMP LOOP			Y
211-577-9003	CLAMP LOOP			Y
211-577-9005	CLAMP-LOOP			Y
214405-1	GAUGE		Y	
21C7082G02	Adapter, Engine Transport			Y
21C7109G02	NO. 1 CARBON SEAL			Y
21C7239G02	Mechanical Puller, Shaft			Y
21C7370G01	OUTER BALANCE PISTON SEAL PULLER			Y
21C7399G01	BAR, GG ROTOR ANTI ROTATION			Y
21C7478G01	SET, STAGE 1 BLISK L/E BENCHING			Y
21C7702G01	PULLER, AXIS G MATING RING			Y
21C7765G01	Igniter Removal Fixture, Engine			Y
21C7779P03	Boroscope Set, engine			Y
21SM284T2	SWITCH		Y	
2231230-10A1	MFDAU		Y	
2233-14	SWITCH		Y	
22521-54	PANEL, FTG.		Y	
22521-56SP	PAN FITTING		Y	
227510-1	BRACKET	Y		
22FH428	NUT		Y	
22FH524	NUT		Y	
22NM26	NUT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
23032-1586	CLAMP		Y	
23084-001	Screw, Flat Head			Y
2311M135-3	MOTOR	Y		
2312M41-3	CONVERTER	Y		
2314M13-16	LINK ASSY	Y		
2314M22-14	WIPER ARM AY	Y		
2314M22-15	WIPER ARM	Y		
2315M35-1	BLADE ASSY	Y		
2315M7-5	BLADE	Y		
2317M9-3	FLEX DRIVE S	Y		
2-325S455-70	O RING		Y	
2335-6	PRESS SWITCH		Y	
2342-218	Switch, Pressure			Y
234-511-9059	COUPLING / AP /			Y
2392-0814-003	INDICATOR PIN			Y
2392-0815-001	KEY			Y
2392-0819-001	SPRING			Y
2392-0820-001	LEVER			Y
2392-0821-001	SEAT			Y
2392-0824-001	PRESSURE VESSEL, Retract Actuator			Y
2392-0832-001	CONNECTOR, Electrical, Actuator			Y
2392-0834-001	PRESSURE GAGE, Retract Actuator			Y
2392-0835-001	NLG Blowdown Bottle Solenoid Valve			Y
2392-0840-001	BURST DISC			Y
2392-0841-001	O-RING			Y
2392-0846-001	LOCKING RING			Y
2392-0849-001	RING RETAINING			Y
2392-0858-001	LOCKING RING			Y
2392-0867-001	Nut			Y
2392-2003-401	WHEEL/TIRE ASSY			Y
2392-2014-005	TORQUE PIN			Y
2392-2045-001	Snap Ring			Y
2392-2046-003	Bushing			Y
2392-2047-001	Bushing			Y
2392-2047-003	Bushing			Y
2392-2063-001	Bushing			Y
2392-2063-003	Bushing			Y
2392-2063-005	Bushing			Y
2392-2063-007	Bushing			Y
2392-2067-001	Switch, Landing Gear Position			Y
2392-2069-003	Switch, Landing Gear Position			Y
2392-2071-001	BUSHING			Y
2392-2072-001	WASHER			Y
2392-2076-001	BUSHING			Y
2392-2086-001	Bolt			Y
2392-2311-003	PIN, Inboard MLG Attach			Y
2392-2312-003	PIN, Outboard MLG Attach			Y
2392-2313-001	CROSSBOLT			Y
2392-2317-001	PIN ACTUATOR			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
2392-2317-005	PIN ACTUATOR			Y
2392-2320-001	Bushing			Y
2392-2331-001	WASHER			Y
2392-2332-001	Support			Y
2392-2333-001	Support			Y
2392-2361-901	BRAKE LINE			Y
2392-2400-401	CAP ASSY, STRUT CUTTER			Y
2392-4020-001	PIN, TRUNNIION, nose gear			Y
2392-4029-001	SPACER WHEEL			Y
2392-4036-001	POPPET, INDICATOR, Shimmy Damper			Y
2392-4054-005	WASHER			Y
2392-4054-901	WASHER			Y
23SX39T2	SWITCH		Y	
2401-0035-001	Shimmy Damper			Y
24096-150C	GASKET		Y	
24346-150C	GASKET		Y	
244-627-1	LINING ASSY		Y	
2452-108RET	RETAINER		Y	
2452-126	NUT	Y		
24583-001	RING, RECTANGULAR			Y
250-515-16	Seal	Y		
250-515-20	LOCK SEAL	Y		
250-515-32	SEAL	Y		
255-01-05	Mount, Processor			Y
25635-013	Screw, slotted			Y
257-011-01	RN6 map generator			Y
257-07-14	DIGMAP NVIS Control Unit			Y
2587193-43	GYRO DIRECTI		Y	
25908-001	Spring, Shortout			Y
2593379-001	COMPENSATOR		Y	
2600-13W	STUD		Y	
2600-9SW	STUD		Y	
2600LW	Repair Center Ceiling Panel			Y
2600SW	Replace Cargo Liner CEI			Y
2600SW2	WASHER			Y
26020-1123	AIRSPEED IND		Y	
2670890-4	PACKING			Y
26916-001	Cover, Dust			Y
26S51-3	STUD		Y	
26S8-11	Panel Assembly Ceiling Station 3			Y
26S8-3	Lower Sidewall Panel Assembly			Y
26S8-6	Lower Sidewall Panel Assembly			Y
2700-7	STUD		Y	
270-2723-060	Maintenance Data Computer (MDC)			Y
278-101B	DOWEL PIN		Y	
28E25-2	THERMOSTAT		Y	
291400-1	Stand, Portable Maintenance, APU			Y
291964-5	Seal Puller/Installer, Carbon Seal			Y
291978-1	Adapter, Portable Maintenance Stand			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
2978-9001-2	VALVE KIT		Y	
298854-1	Torque Reactor, Shaft Support			Y
298876-1	Wrench, Torque Adapter Socket			Y
299430-0100	MIC REMOTE			Y
2B6813A	Breather, MGB			Y
2C5040	VALVE		Y	
2C90523G01	SUPPORT, COMPRESSOR CASING			Y
2D7914	IGB/TGB Sight Gage			Y
2G7176	PLUG, DRAIN			Y
2G7884	Oil Drain Attachment IGB and TGB			Y
2LA003849-01	STROBE LT AS		Y	
2P5260	Valve, Bleed & Low Press Relief, Supply			Y
2TP1-1	SWITCH		Y	
2TP1-10	SWITCH		Y	
2TP1-21	SWITCH		Y	
2TP1-3	SWITCH		Y	
2TP1-31	SWITCH		Y	
2TP1-5	SWITCH		Y	
2TP1-50	SWITCH		Y	
2TP1-61	SWITCH		Y	
2TP1-7	SWITCH		Y	
2Z7400	REPAIR KIT		Y	
3001-01-100-4	Accelerometer, Vertical			Y
300-2194-000	MOUNTING PL		Y	
300SSDRML2410	LINER		Y	
30130C6	Bulb			Y
30213-0202	Mounting Tray, HUMS Processor			Y
30295SY2-12	LIGHT		Y	
30295SY2-13	LIGHT		Y	
3029644-001	ROTALIP ASSY			Y
30300-1383	BRUSH		Y	
3030444-001	Switch Harness, Level			Y
3030468-001	RETAINER, SEAL			Y
3030495-001	Shaft, Spline Coupling Pump Mod 1&2			Y
3030497-014	PACKING, SPLINE COUPLING			Y
3030497-904	PACKING, BLEED / RELIEF VALVE			Y
3030S20	Tail Rotor Sensor			Y
3031727-001	SEAL			Y
3040-01-00	COMPUTER,UCD			Y
304-00102	PRESS GAUGE	Y		
3040-70	RACK KIT,UDC			Y
304760-1	Hourmeter/Start Counter			Y
305-4334	SWITCH		Y	
305-4383	SWITCH		Y	
3055-00-22	Display,UCD 8IN			Y
30596-001	BATTERY		Y	
3103347-01	GASKET		Y	
31-1601-1	DECAL		Y	
31-203	RECEPTACLE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
31276-02C	Assy Cell, 18H120C			Y
31400-108	Barometric Altimeter			Y
31400-118	Milli Barometric Altimeter			Y
315-4350REVA	SWITCH		Y	
31958-001	PB Ind. Momentar			Y
31958-002	PB Ind. Maintain			Y
3200-4	COUPLING	Y		
32123-001	BARRIER CELL			Y
3224600-3	RELAY		Y	
32562-001	SPACER			Y
325-75-300S	Clamp	Y		
325-75-325S	CLAMP	Y		
332A22-1301BJ01	PULL TAB		Y	
33776-44132-042	SWITCH ASSY		Y	
33776-44261-050	COMP CONTROL		Y	
33776-44295-110	SWITCH GUARD		Y	
33776-44295-111	GUARD PERSPE		Y	
33776-44302-054	ASSY		Y	
33776-44650-101	LDG LT CAPSU		Y	
33776-44742-042	RAD MSTR PNL		Y	
33776-44824-041	PNL ASSYCPLT		Y	
33776-44867-102	PLACARD		Y	
33776-44867-104	PLACARD		Y	
33776-44867-106	PLACARD		Y	
33776-44877-043	WARN PNL ASSY		Y	
33776-44929-102	VNE PLACARD		Y	
33776-45000-041	PANEL		Y	
33776-46229-041	BD ASSY LED		Y	
33776-46320-041	SWITCHING UNIT		Y	
33776-52133-101	DOOR SILL LH		Y	
33776-52133-102	DOOR SILL RH		Y	
33776-52133-103	DOOR SILL LH		Y	
33776-52133-104	DOOR SILL RH		Y	
33776-52575-105	COVER		Y	
33776-54210-041	SUPPRESSOR		Y	
33776-54221-110	INNER WINDOW		Y	
33776-54413-103	HANDLE		Y	
33776-54903-102	BEZEL		Y	
33776-54985-101	PAN		Y	
33776-57091-110	SHIM		Y	
33776-57117-103	2 MAN SEAT		Y	
33776-57533-101	VENT KIT		Y	
33776-58901-101	INT. GEAR OIL		Y	
33776-58901-102	TAIL GEAR OIL		Y	
33776-58901-103	MAIN GEAR OIL		Y	
33776-58901-104	PLACARD		Y	
33776-64046-101	LEGEND		Y	
33776-64258-101	TUBE		Y	
33776-64305-041	BRACE ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
33776-64570-101	LH WINDOW		Y	
33776-64570-102	WINDOW		Y	
33776-64678-102	CLIP		Y	
33776-64732-104	WEIGHT		Y	
33776-64821-101	METCAL		Y	
33776-64888-041	GUARD ASSY		Y	
33776-64953-012	PULSE LGT RE		Y	
33776-70002-044	CLEVIS ASSY		Y	
33776-70015-101	LINK		Y	
33776-70017-101	LINK		Y	
33776-70021-101	CLAMP, TRIM		Y	
33776-70022-101	PIN		Y	
33776-70026-102	PLATE		Y	
33776-70027-101	PLATE		Y	
33776-70033-101	PIN		Y	
33776-82670-042	FUEL XFEED A		Y	
33776-84092-047	CAP FILLER		Y	
33776-84205-044	TUBE		Y	
33776-84205-050	LINE ASSYGAU		Y	
33776-84252-042	HOSE ASSY		Y	
33776-84268-109	RUBBER STRIP		Y	
33776-84269-101	VENT TUBE		Y	
33776-84269-102	AFT TUBE		Y	
33776-84269-103	AFT TUBE		Y	
33776-84272-105	SPACER		Y	
33776-84272-106	SPACER		Y	
33776-84272-108	SPACER		Y	
33776-84373-101	RAIN GUTTER		Y	
33776-84389-101	SHIM		Y	
33776-84389-102	SHIM		Y	
33776-84389-103	SHIM		Y	
33776-84389-104	SHIM LAMINATE		Y	
33776-84389-105	SHIM		Y	
33776-84389-106	SHIM LAMINATE		Y	
33776-84389-109	SEAL		Y	
33776-84419-101	TOOL LATCH		Y	
33776-84446-107	HINGE PIN		Y	
33776-84553-041	TUBE ASSY BR		Y	
33776-84553-043	TUBE ASSY L.		Y	
33776-84553-045	TUBE ASSY EM		Y	
33776-84553-086	BLEED ASSY		Y	
33776-84554-101	BLOCK		Y	
33776-84554-102	CLAMP		Y	
33776-84554-104	CLIP		Y	
33776-84555-123	NUT		Y	
33776-84555-124	NUT		Y	
33776-84605-108	ADAPTER		Y	
33776-84676-041	SHROUD ASSY		Y	
33776-84676-042	WELD ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
33776-84676-043	BRACKET ASSY		Y	
33776-84676-044	BRACKET ASSY		Y	
33776-84676-045	BRACKET ASSY		Y	
33776-84704-041	TUBE ASSY LH		Y	
33776-84704-042	TUBE ASSY RH		Y	
33776-84724-106	DECAL		Y	
33776-84724-110	DECAL		Y	
33776-84790-012	INTERLOCK KT		Y	
33776-84790-101	PLATE		Y	
33776-84790-102	SUPPORT PLAT		Y	
33776-84793-011	BAT/OFF C-1		Y	
33776-84793-012	KIT		Y	
33776-84793-013	MOD KIT		Y	
33776-84885-101	METCAL,FUEL		Y	
33776-84907-042	CURTAIN ASSY.		Y	
342-83012-1	CUTTER ASSY PILOT			Y
342-83013-1	DEFLECT. WIRE STRIKE			Y
342-83013-2	DEFLECT. WIRE STRIKE			Y
342-83030-1	CUTTER ASSY			Y
345-6196-04	ELT Switch			Y
346400-1003	Solenoid Valve, SAS/Boost Manifold			Y
35000-5	FIRE DETECT	Y		
3515-14-12	SPRING WASHE		Y	
35235VN08	SLEEVE		Y	
35301-7	CABLE ASSY	Y		
35302-61	CABLE ASSY	Y		
35421A	ELEMENT	Y		
3591-3CN0285	HELICOIL	Y		
3608765-1	Oil Filter Element, APU			Y
3610004-5	Fuel Atomizers, Primary			Y
3610004-6	Fuel Atomizers, Secondary			Y
3610877-5	STUD / AP /			Y
3612517-1	GASKET, THERMOCOUPLE			Y
36170R	LIGHT COCKPI		Y	
3617333-1	APU Inlet Plenum			Y
3617370-1	GASKET			Y
36950-212	Airspeed Indicator			Y
380-014	Audio Selector Panel			Y
382542S	SCREW		Y	
3860797-2	Vespel Spline Adapter, Generator, APU			Y
3876001-8	Low Oil Pressure Switch			Y
3876003-3	EGT Thermocouple			Y
3876104-1	Monopole Speed Sensor			Y
3883978-1	Fuel Manifold			Y
3888000-5	Unit-Ignition (Low Voltage)			Y
3888302-6	LEAD, IGNITER PLUG			Y
3888434-1	Wiring Harness, ESU			Y
3888436-1	Wiring Harness, FCU			Y
38950-00901-103	BEARING		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
38950-00901-104	Bearing			Y
38950-00902-102	BEARING		Y	
38950-00902-103	BEARING		Y	
38950-00902-105	BEARING		Y	
38950-00903-103	BEARING		Y	
38950-00903-104	BEARING		Y	
38950-00905-101	BEARING		Y	
38950-00906-102	BEARING		Y	
38950-00906-103	BEARING	Y	Y	
38950-00906-104	Bearing			Y
38950-00907-102	BEARING		Y	
38950-00907-103	BEARING		Y	
38950-00907-104	BEARING		Y	
38950-00908-101	BEARING		Y	
38950-00910-103	BEARING	Y	Y	
38950-00912-101	BEARING	Y	Y	
38950-00913-102	BEARING		Y	
38950-00914-101	BEARING		Y	
38950-00914-103	BEARING	Y		
38950-00915-101	INNER RING	Y	Y	
38950-00916-101	BEARING	Y		
38950-00917-101	BEARING	Y	Y	
38950-00921-101	ROD END	Y		
38C37	Remove/Install Cabin Heat Ducting			Y
3-903S455-70	O-RING		Y	
3-905S455-70	PACKING		Y	
3-910E515-8	PACKING		Y	
400-10680-001	TRANSCIEVER,SAT			Y
4002-5SW	Camlock			Y
4002-8SW	Camlock			Y
4002SN	Retainer			Y
400WCS4	CLAMP		Y	
4057697-901	ANTENNA			Y
407-4305	SWITCH		Y	
4101FD5A	COLOR FILTER		Y	
4131022-2	Oil Pump Assy			Y
42315-161	CABLE-RESCUE HOIST			Y
42315-281	Squib, Rescue Hoist			Y
42325-298	CABLE RES HO		Y	
42A12D	Ultrasonic Test Set			Y
43062A	FILTER		Y	
4344-145-104	TEMP SWITCH		Y	
4367-06	SPHERICAL WA		Y	
4402-6	O2 VALVE SOL		Y	
442042-1	Fuel Control Unit			Y
44311-524	Remove/Install Rescue Hoist			Y
444-581-000-121	Accelerometer, HUMS Cockpit			Y
444-582-000-121	Accelerometer Bi axial			Y
444-583-000-121	Accelerometer Triaxial			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
44F4525	TERM HOUSING		Y	
452-0133	Battery Pack 406 Lithium			Y
452-5050	Mounting Tray			Y
452-5066	End Cap			Y
457-1965	CAP,FILL-FUEL			Y
460-1-4	CONRLLR LIGT		Y	
473597-2	SMOKE DETECTOR			Y
499-4860-007	ICS CNTRL PNL			Y
4C2640-2	CHECK VALVE & ADAPTER			Y
4C2680-2	CHECK VALVE & ADAPTER			Y
4E5150-05-0019	FUSE 3 AMP		Y	
4L4F	NYLONBEARING		Y	
4S9-2	WASHER		Y	
50-0024-5	LIGHT ASSY		Y	
5000549-1	INSULATOR		Y	
5009455-1	LINING		Y	
501-1197-32	Attitude Indicator			Y
501-1712-02	POWER SUPPLY		Y	
501-1712-03	Standby Attitude Indicator Battery			Y
504T41-2	NOSE TIRE		Y	
50A45-01-1-08N	ROTARY SWITC		Y	
511431-3	DISC	Y		
526000A	SCRAPER	Y		
53402CS6BEKQR	Hydraulic Power Cart, 5000 psi			Y
5448-712-91-10	N1 INDICATOR		Y	
55-0283-3	FLASHTUBE		Y	
55-0834-641L2D2	CAP.		Y	
55-1110-1	INSERT,WIPER		Y	
566-0292-1	BY PASS VALVE			Y
571-0013-1	Oil Cooler Blower Bearing			Y
58550-10242-105	STUD		Y	
59-028-125-0875	PIN	Y		
5F224-000	GASKET		Y	
5L5F	BEARING		Y	
600-015-1-4	SEAL		Y	
60-3027-1	GASKET		Y	
60-3274-5	POWER SUPPLY		Y	
604-04-3-003B	SIGN,EXIT		Y	
604-04-3-003C	EXIT SIGN LT		Y	
61-0478-9	BATTERY PACK		Y	
61070-36118-044	HOSE	Y		
61070-36118-045	TUBE	Y		
61070-36118-049	PITOT LINE	Y		
61070-36118-052	TUBE	Y		
61070-36118-057	TUBE	Y		
61070-36118-107	FITTING	Y		
61070-98013-101	SPACER	Y		
61080-55041-012	CABLE ASSY.	Y		
61088-20222-128	CLEVIS PIN	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
61088-20222-129	CLEVIS	Y		
61088-20222-130	CLAMP ROD	Y		
61088-20222-132	BRACE ROD	Y		
61100-23130-101	PLUG	Y		
61100-23516-114	SPACER	Y		
61100-24089-101	SPACER	Y		
61100-24090-101	SHIM	Y		
61100-26092-101	COVER	Y		
61100-26093-041	TRUNNION ASSY	Y		
61100-26093-101	TRUNNION	Y		
61120-23052-101	RETAINER	Y		
6112-049-2-041	RETAINER	Y		
6112-049-2-047	RETAINER	Y		
61150-20176-101	STRIP ABRASI	Y		
61150-20176-102	ABR. STRIP	Y		
61150-20177-101	STRIP	Y		
61150-20576-042	BRACKET	Y		
61150-20576-106	WASHER	Y		
61150-30323-101	CAP	Y		
61170-20222-043	TIP CAP	Y		
61170-20240-102	CAP	Y		
61170-20240-103	ABR. STRIP	Y		
61170-918	NUT	Y		
61200-72537-102	CLEVIS	Y		
61200-72537-109	PLATE	Y		
61200-72539-052	TRACK	Y		
61200-75164-101	BOLT	Y		
61201-13002-105	RATCHET WHEEL	Y		
61201-13002-108	WHEEL	Y		
61250-51233-041	TUBE ASSY	Y		
61250-51233-043	TUBE ASSY	Y		
61250-51234-041	TUBE ASSY	Y		
61250-51235-042	SPONSON TUBE	Y		
61300-63247-041	ACCESS COVER	Y		
61350-20435-101	BELT SET	Y		
61350-20436-051	SUMP ASSY	Y		
61350-20438-041	FILLER ASSY	Y		
61350-20442-101	WASHER	Y		
61350-20457-101	ROLLER RET.	Y		
61350-20458-101	SPACER	Y		
61350-20459-101	BUSHING	Y		
61350-20459-102	BUSHING	Y		
61350-20700-101	NUT	Y		
61350-20878-103	NUT	Y		
61350-20879-101	WASHER	Y		
61350-20886-101	SHIM	Y		
61350-20886-102	Shim	Y		
61350-20886-103	SHIM	Y		
61350-20886-104	SHIM	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
61350-20886-114	SHIM	Y		
61350-20891-103	BOLT	Y		
61350-24010-102	PIN	Y		
61350-24013-102	SPRING	Y		
61350-24021-102	WASHER	Y		
61350-24025-102	SPACER	Y		
61350-24027-104	SPACER	Y		
61350-24047-101	SPRING	Y		
61350-24052-042	CAM SHAFT AY	Y		
61350-24055-101	NUT	Y		
61350-24063-102	SPRING	Y		
61350-24064-103	SPACER	Y		
61350-24073-102	SUPPORT	Y		
61350-24081-101	SUPPORT	Y		
61350-24084-102	PIN	Y		
61350-24099-102	SLEEVE	Y		
61350-24108-041	LINER ASSY	Y		
61350-24703-102	NUT	Y		
61350-24901-101	THRUST WASHER	Y		
61350-366-2-102	LINER	Y		
6135-342-133	BEARING	Y		
6135-342-141	SLEEVE	Y		
61550-61358-103	HARNESS ASSY	Y		
61550-66028-101	CABLE	Y		
61650-02701-101	SEAL	Y		
61650-20288-101	PISTON	Y		
61650-20295-145	TUBE	Y		
62070-524	INSERT, ANTI-FLAP STOP ATTACH			Y
62070-720	INSERT, VIBRATION ABSORBER			Y
622-2855-001	RADAR ALTIMETER		Y	
622-5212-003	Mount, VIR-432			Y
622-5213-003	Mount, DME Model 442			Y
622-7194-201	Receiver, VIR-432			Y
622-7382-101	ADF Receiver			Y
622-7383-001	Antenna, ADF (ANT-462A)			Y
622-8761-007	Control Panel (C-11898A)			Y
622-9210-007	Transponder, Mode S #1/#2			Y
622-9672-003	Mount, Transponder			Y
624AG5HD	NUT	N		
6254M20	Accelerometer, Active Vibration Control			Y
6259M36-120	Accelerometer, Gearbox, HUMS			Y
626-514-9012	LOCK RING		Y	
631-100	Aural Warning Generator Instal			Y
645024-2	BRUSH		Y	
645447-4	SHAFT		Y	
645449-6	I.D. PLATE		Y	
65101-11002-101	NUT	Y		
65101-11002-102	NUT	Y		
65101-11003-101	PLATE	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
65106-11523-101	SPRING	Y	Y	
65301-01058-101	CLIP	Y		
65302-12561-101	SPRING	Y		
65317-03006-109	VALVE		Y	
65317-03006-110	VALVE		Y	
65361-04005-101	DISC	Y		
65375-04315-101	GROMMET	Y		
65550-01040-102	WARNING LIGHT		Y	
65550-04031-101	RELAY	Y		
65560-09900-103	Rotor Head Inspection Light			Y
65610-03031-105	Accelerometer, Long, Lat, Vertical			Y
65651-03011-103	VALVE & BOTTLE	Y		
65652-09022-105	PRESS SWITCH	Y		
65901-02322-103	FILTER		Y	
65901-02458-103	RELAY	Y	Y	
67680S7MOD	JACK SCREW K		Y	
685-0365-001	Amplifier/Coupler HF-9040			Y
69494K902	O RING		Y	
6958-2	POWER SUPPLY		Y	
6958-8	HEELS Power Supply			Y
699-1000-004	Audio Junction Box			Y
6A16FN1D16M0786	HOSE ASSY			Y
6A16FN6A16M0813	.HOSE ASSY			Y
7000466-914	ATT. IND.		Y	
7000466-935	ADI		Y	
700-1710-020	CONFIGURATION M			Y
7001840-934	R/T RADIO AL			Y
7008471-418	WC-880 CONT			Y
7008471-668	Control Panel, Weather Radar (P-660)			Y
7008471-702	Radar, WX			Y
7009330-911	WR-700AR/T			Y
70104-11110-104	Clip			Y
70107-08407-101	WASHER, TAPERED			Y
7011822-904	PROCESSOR LP860			Y
7011839-901	MOUNT LP850			Y
7016954-906	Instrument Remote Control			Y
7021450-601	Receiver/Transmitter, WX (P-660)			Y
7021450-801	Receiver/Transmitter, WX (P-880)			Y
7021451-412	Antenna, Weather Radar (12 inch)			Y
7021451-415	15 Inch Antenna Kit			Y
702-201-1	CAP ASSY		Y	
702C000-41	AIR SPEED BG		Y	
70302-10915-104	Ice Detector			Y
70306-03005-101	Nipple Grind			Y
70306-03006-101	Gasket			Y
70307-23908-103	PUMP FUEL SYS DUMP			Y
70307-23910-101	GAUGE			Y
70307-83805-103	VALVE, AUX. FUEL SYS			Y
70307-83805-104	VALVE, AUX. FUEL SYS			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
70308-10001-048	Tail Pipe Assembly			Y
7031800-901	WR700A/701A MT			Y
70-3-2G2	KNOB		Y	
70-33	INDICATOR		Y	
70351-08011-104	Packing Assembly			Y
70351-08013-101	PLATE, Grease Ret			Y
70351-08091-101	Nr #1 Speed Sensor, Accesory Module			Y
70351-08091-102	Switch, Oil Pressure			Y
70351-38801-102	Filter, Primary Element, 3 Micron			Y
70351-38801-103	Filter, Secondary Element, 75 Micron			Y
70361-03018-101	Nut			Y
70361-08014-041	Engine Output Shaft			Y
70361-08015-101	Gimbal, Elastomeric			Y
70361-10003-043	Engine Shaft Support Tube			Y
70400-00514-101	PIN		Y	
70400-06660-048	Spring Capsule Assy, TR Servo			Y
70450-01043-120	Nr #2 Speed Sensor, Accesory Module			Y
70550-01123-101	Air Data Air Temp Probe			Y
70550-02024-104	Windshield Anti-ice Control Unit			Y
70550-02027-104	AC CONTACTOR			Y
70550-02810-101	AC External Power Monitor Panel			Y
70551-02001-132	CLIP		Y	
70600-01829-101	Slew Control Copilot			Y
70600-01829-102	Slew Control Pilot			Y
70651-23530-101	Rotor Brake Accumulator			Y
70652-02451-135	Accumulator Pressure Switch			Y
70700-77712-111	PIN ASSY		Y	
709001-104	Landing Gear Control Panel			Y
70968-08200-101	Seal, #3 Hydraulic Pump			Y
70K1N040K502U	RHEOSTAT		Y	
71130-264	Plastic Feeler Gage			Y
712360-1	RETAINER		Y	
713260-1	FLEX SLEEVE		Y	
72079-85	Transducer, Temperature, Supply Mod			Y
72081-85	Valve, Pressure Reducing, Xfer Mod			Y
72083-85	Relief Valve, High Pressure, Xfer Mod			Y
72085-85	Switch, Fluid Level Indicating, Supply M			Y
72375-81	By-pass Valve, Return Filter, Xfer Mod			Y
72403-01379-042	ORIFICE ASSY	Y		
72441-81	Filter, Pressure & Return, Xfe			Y
72463-81	Differential Pressure Indicator, Xfer Mo			Y
72689-5	NUT	Y		
7401TZQE	SWITCH TOGGLE		Y	
7405TZQE	SWITCH,TOGGLE		Y	
74178-8-22	Bolt			Y
748-752-2-4SP	GASKET ASSY		Y	
754661-4	CONTROLLER		Y	
76000-05100-045	SHAFT ASSY		Y	
76000-06003-101	BLOCK RADIUS		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76000-26000-042	WEDGE		Y	
76000-26000-044	WEDGE ASSY		Y	
76000-26000-106	SHIM,LAMINATED		Y	
76000-26000-107	SPACER WEDGE		Y	
76010-00105-101	PLACARD		Y	
76010-00105-102	PLACARD		Y	
76010-00105-103	COVER		Y	
76010-00105-104	PLAC DR LOCK		Y	
76010-00105-105	PLACARD		Y	
76010-00105-106	PLACARD		Y	
76010-00105-107	FIRE EXT.		Y	
76010-00105-113	DECAL		Y	
76010-00105-114	DECAL		Y	
76070-00007-011	100 HR INSP		Y	
76070-00009-012	KIT		Y	
76070-10019-011	KIT		Y	
76070-15003-012	MOD KIT		Y	
76070-15003-013	TOOL KIT		Y	
76070-20005-044	LEVER ASSY.		Y	
76070-20005-045	LEVER ASSY		Y	
76070-20005-105	PLATE		Y	
76070-20005-106	GASKET		Y	
76070-20005-107	PLATE		Y	
76070-20005-110	KNOB		Y	
76070-20005-113	CLIP		Y	
76070-20005-114	ANGLE		Y	
76070-20005-124	PIN		Y	
76070-20005-125	PIN		Y	
76070-20022-104	ANGLE		Y	
76070-20022-105	ANGLE		Y	
76070-20035-104	GASKET		Y	
76070-20046-118	BASE		Y	
76070-20058-042	LEVER ASSY		Y	
76070-20058-045	SCREW JACK		Y	
76070-20058-104	SHAFT		Y	
76070-20058-111	KNOB		Y	
76070-20071-013	HTD WIND L/H		Y	
76070-20071-014	HTD WIND R/H		Y	
76070-20086-101	STRAP L/H		Y	
76070-20086-102	RH STRAP		Y	
76070-20086-103	FILLER		Y	
76070-20094-012	MOD KIT		Y	
76070-20094-101	STRAP		Y	
76070-20094-102	STRAP		Y	
76070-20094-103	STRAP		Y	
76070-20095-101	LATCH		Y	
76070-20097-043	LEVER ASSY		Y	
76070-20097-044	LEVER ASSY		Y	
76070-20099-013	KIT MOD		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76070-20099-014	KIT MOD		Y	
76070-20099-015	KIT MOD		Y	
76070-20099-016	KIT MOD		Y	
76070-20099-017	KIT MOD		Y	
76070-20100-014	MOD KIT		Y	
76070-20100-015	MOD KIT		Y	
76070-20101-011	MOD KIT		Y	
76070-20101-012	MOD KIT		Y	
76070-20511-120	STRAP		Y	
76070-20511-122	ANGLE		Y	
76070-20511-124	STRAP		Y	
76070-20511-126	STRAP		Y	
76070-20511-128	STRAP		Y	
76070-20511-139	ANGLE		Y	
76070-20511-140	DOUBLER		Y	
76070-20526-102	CAP ANGLE		Y	
76070-20527-167	ANGLE		Y	
76070-20527-168	BRACKET		Y	
76070-20527-212	COVER		Y	
76070-20527-219	ANGLESUP		Y	
76070-20527-220	FILLER		Y	
76070-20527-260	LONGERON		Y	
76070-20529-102	STRAP		Y	
76070-20532-103	SPACER		Y	
76070-20537-103	FITTING		Y	
76070-20537-105	FAIRLEAD		Y	
76070-20537-106	FAIRLEAD		Y	
76070-20537-107	FAIRLEAD		Y	
76070-20537-108	FAIRLEAD		Y	
76070-20537-109	FAIRLEAD		Y	
76070-20553-041	L/H PANEL		Y	
76070-20553-042	R/H PANEL		Y	
76070-20553-101	WINDOW		Y	
76070-20553-102	WINDOW		Y	
76070-20553-103	SEAL		Y	
76070-20553-104	FILLER STRIP		Y	
76070-20554-011	PANEL KIT L/H		Y	
76070-20554-012	FIELD KIT R/H		Y	
76070-20555-101	DECAL		Y	
76070-20555-102	STRAP		Y	
76070-20555-103	DECAL		Y	
76070-20561-101	SEAL		Y	
76070-20561-102	SEAL		Y	
76070-25007-011	MOD KIT		Y	
76070-30009-102	GASKET		Y	
76070-30013-041	BRACKET		Y	
76070-30013-042	RETAINER ASY		Y	
76070-30013-101	RETAINER		Y	
76070-30015-108	GAUGE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76070-30018-102	CLAMP		Y	
76070-30019-041	TUBE ASSY		Y	
76070-30019-105	CLAMP		Y	
76070-30028-026	FUEL LINE KT		Y	
76070-30031-056	CHANNEL ASSY		Y	
76070-30517-101	SPACER		Y	
76070-30518-041	DUCT ASSY		Y	
76070-30518-046	COVER ASSY		Y	
76070-30518-105	BRACKET		Y	
76070-30518-108	BUSHING		Y	
76070-30518-110	GASKET		Y	
76070-30603-011	FIELD KIT		Y	
76070-30663-011	KIT.QUAD		Y	
76070-30664-011	SPLIT DUCT KIT		Y	
76070-35010-011	MAIN DUCT KIT		Y	
76070-35011-011	MOD KT		Y	
76070-55002-108	BRACKET		Y	
76070-55002-109	BRACKET		Y	
76070-55002-111	STIFFENER		Y	
76070-55014-041	HARNESS ASSY		Y	
76070-55014-042	CABLE ASSY		Y	
76070-55034-011	RELAY KIT		Y	
76070-55034-012	RELAY KIT		Y	
76070-55034-013	RELAY KIT		Y	
76070-55046-045	AUX POWER ES		Y	
76070-55046-106	LENS		Y	
76070-55055-042	DIODE BRD AY		Y	
76070-55055-043	RELAY ASSY		Y	
76070-65006-101	BLOCK		Y	
76070-65010-042	MANIFOLD		Y	
76071-20000-012	S76B FITTING KIT		Y	
76071-21000-011	KIT		Y	
76072-15001-011	KIT, BLADE REPAIR		Y	
76072-15001-012	SKIN PATCH		Y	
76072-15001-013	SKIN PATCH		Y	
76072-15001-021	T.E. PATCH		Y	
76076-02001-101	TUBE VENT		Y	
76076-02002-101	WASHER		Y	
76076-02002-102	SLEEVE		Y	
76076-02002-104	WASHER		Y	
76076-30005-041	NOZZLE ASSY		Y	
76076-30005-042	NOZZLE ASSY		Y	
76076-30005-103	CAP		Y	
76076-30501-110	SEAL		Y	
76076-30501-117	SEAL		Y	
76076-55021-041	BRACKET		Y	
76076-55021-104	CONTACT		Y	
76076-55021-106	SWEEP		Y	
76076-55035-041	PLUG ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76076-55035-042	PLUG ASSY		Y	
76076-85002-110	PENDANT		Y	
76080-20038-041	ROD ASSY		Y	
76080-20038-104	ROD		Y	
76080-20039-048	ROD		Y	
76080-20039-088	CAM ASSY		Y	
76080-20039-109	HANDLE		Y	
76080-20039-116	FITTING		Y	
76080-20039-117	STRIP		Y	
76080-20039-120	SPRING		Y	
76080-20039-122	SPRING		Y	
76080-20039-130	ZEE R/H		Y	
76080-20039-140	BOLT		Y	
76080-20041-101	ANGLE		Y	
76080-20041-103	PLATE		Y	
76080-20041-106	ANGLE		Y	
76080-20042-102	ANGLE R/H		Y	
76080-20042-103	STRAP		Y	
76080-20042-104	FILLER		Y	
76080-20042-105	FILLER		Y	
76080-20042-106	FILLER		Y	
76080-20043-043	LH ASSY		Y	
76080-20043-044	BRACKET ASSY		Y	
76080-20043-104	ATTACH BKT		Y	
76080-20043-105	LAM SHIM		Y	
76080-20043-106	ATTACH BRKT		Y	
76080-20046-101	ANGLE LH		Y	
76080-20046-102	ANGLE		Y	
76080-20047-106	WASHER		Y	
76080-20047-109	BLOCK		Y	
76080-20047-110	RADIUS BLOCK		Y	
76080-20047-111	BLOCK		Y	
76080-20048-101	SKIN		Y	
76080-20048-102	SKIN		Y	
76080-20048-107	SKIN		Y	
76080-20052-050	WELD ASSY		Y	
76080-20052-104	SHIM		Y	
76080-20052-110	PLATE		Y	
76080-20063-045	WEDGE		Y	
76080-20063-052	WEDGE ASSY		Y	
76080-20063-107	WEDGE		Y	
76080-20063-108	WEDGE		Y	
76080-20063-118	SHIM		Y	
76080-20063-121	WEDGE		Y	
76080-20063-128	SHIM, LAM.		Y	
76080-20063-129	WEDGE		Y	
76080-20067-055	GUSSET ASSY		Y	
76080-20067-136	SEAL		Y	
76080-20501-043	ABSORB ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76080-20501-102	WEIGHT		Y	
76080-30006-053	RECEPT ASSY		Y	
76080-30006-057	RECEPT ASSY		Y	
76080-30006-058	RECEPT ASSY		Y	
76080-30006-108	STRAP		Y	
76080-30006-110	DOUBLER		Y	
76080-30009-046	BRACKET		Y	
76080-30009-047	BRACKET		Y	
76080-30009-048	BRACKET		Y	
76080-30501-110	SEAL		Y	
76080-30601-101	FLANGE		Y	
76080-55005-052	SUPPORT ASSY		Y	
76088-20002-102	ROD		Y	
76088-20002-105	ROD		Y	
76088-20002-106	ROD		Y	
76088-20002-107	SPRING		Y	
76088-20003-042	LOCK ASSY		Y	
76088-20003-051	HANDLE		Y	
76088-20003-052	HANDLE		Y	
76088-20003-053	LEVER ASSY		Y	
76088-20003-054	LEVER ASSY		Y	
76088-20003-104	PLATE		Y	
76088-20003-109	STRIKER		Y	
76088-20003-110	STRIKER		Y	
76088-20003-117	RETAINER		Y	
76088-20003-118	RETAINER		Y	
76088-20016-107	ROD		Y	
76088-20016-115	RECESS PLATE		Y	
76088-20062-041	CABLE ASSY		Y	
76088-40001-014	GUARD INSTL.KIT		Y	
76088-61070-044	SUPT WIRE ASSY		Y	
76088-61070-101	ADAPTER PLATE		Y	
760B10012-13	TUBE TORQUE		Y	
76101-05001-102	CAP		Y	
76101-05005-101	BRACKET		Y	
76101-05006-042	HORN ASSY		Y	
76101-05007-115	LEAD STRIP		Y	
76101-05008-101	BOOT		Y	
76101-05010-102	STRIP		Y	
76101-05010-103	ABRASION STR		Y	
76101-05011-101	STRIP		Y	
76101-05011-102	STRIP		Y	
76101-05016-101	LAMINAR PAD		Y	
76101-05020-049	DOUBLER ASSY		Y	
76101-05021-101	PLUG		Y	
76101-05022-103	PILOT		Y	
76101-05023-105	NUT		Y	
76101-05023-106	NUT		Y	
76101-05023-107	WASHER		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76101-05023-108	BOLT		Y	
76101-05023-109	WASHER		Y	
76101-05023-110	NUT		Y	
76101-05024-101	SHIM		Y	
76101-05025-043	FAIRING		Y	
76101-05030-041	TIP CAP		Y	
76101-05039-042	PIVOT RETAIN		Y	
76101-05041-041	BRACKET		Y	
76101-05042-101	CLIP		Y	
76101-05042-105	BUMPER		Y	
76101-05043-052	STIFFENER		Y	
76101-05044-041	BRACKET ASSY		Y	
76101-05045-101	BUSHING		Y	
76101-05045-102	BUSHING		Y	
76101-05101-042	T/R PADDLE		Y	
76101-05501-042	T/R PADDLE		Y	
76101-08000-043	PITCH ROD AY		Y	
76101-08001-045	ROD END		Y	
76101-08001-047	ROD END ASSY		Y	
76101-08001-048	ROD END		Y	
76101-08003-102	LINK		Y	
76101-08004-104	NUT		Y	
76101-08005-102	DECAL		Y	
76101-08005-103	DECAL		Y	
76102-05001-047	PLATE ASSY		Y	
76102-05004-109	PRESSURE PAD		Y	
76102-05004-110	PRESSURE PAD		Y	
76102-05004-111	PLATE		Y	
76102-05006-102	BOLT		Y	
76102-08000-060	BEARING ASSY		Y	
76102-08000-061	SPINDLE		Y	
76102-08003-103	SPINDLE NUT		Y	
76102-08004-101	BOLT		Y	
76102-08004-102	BOLT		Y	
76102-08011-046	HORN		Y	
76102-08012-102	LINER		Y	
76102-08015-101	SHIM		Y	
76102-08050-107	COUNTERWGT.		Y	
76102-08051-105	BOLT		Y	
76102-08055-101	SLEEVE		Y	
76102-08055-103	STRAP		Y	
76102-08055-105	SLEEVE		Y	
76102-08600-041	SPINDLE AY (FOLDING)		Y	
76102-08600-043	SPDL SUB AY (FOLDING)		Y	
76102-08605-042	HORN ASSY		Y	
76102-08606-101	SHIM		Y	
76102-08608-101	BOLT HORN		Y	
76102-08608-102	BOLT HORN		Y	
76102-08612-041	PIN ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76102-08612-043	PIN ASSY		Y	
76103-05001-041	PITCH BEAM		Y	
76103-05002-043	ROD END		Y	
76103-05002-044	ROD END ASSY		Y	
76103-05002-101	ROD END		Y	
76103-05003-042	PITCH CHANGE		Y	
76103-05014-101	NUT		Y	
76103-05015-102	SCREW		Y	
76103-05015-103	WASHER		Y	
76103-05015-104	WASHER		Y	
76103-05018-104	SUPPORT		Y	
76103-08002-106	LINER		Y	
76103-08003-101	PILOT-HUB		Y	
76103-08003-102	PILOT		Y	
76103-08005-101	BUSHING		Y	
76103-08007-101	SHIM		Y	
76103-08010-049	HUB ASSY		Y	
76103-08011-101	WASHER		Y	
76103-08012-102	BUSHING		Y	
76103-08012-104	SPACER		Y	
76103-08012-105	BUSHING		Y	
76103-08013-102	SPACER		Y	
76103-08014-101	BRACKET		Y	
76103-08014-102	BRACKET		Y	
76103-08016-042	JUMPER		Y	
76103-08016-045	BOND.JUMPER		Y	
76103-08801-102	PLUG COVER		Y	
76103-08801-103	PLUG		Y	
76103-09701-101	BOLT		Y	
76103-09701-102	BOLT		Y	
76104-08001-041	SWASHPLATE, ROTATING		Y	
76104-08003-101	LINER		Y	
76104-08003-102	LINER		Y	
76104-08004-101	BUSHING		Y	
76104-08004-102	BUSHING		Y	
76104-08004-103	BUSHING		Y	
76104-08005-101	BUSHING		Y	
76104-08005-102	BUSHING		Y	
76104-08006-101	SHIELD		Y	
76104-08007-101	SHIM		Y	
76104-08007-102	SHIM		Y	
76104-08007-103	SHIM		Y	
76104-08008-101	SPACER		Y	
76104-08008-102	SPACER		Y	
76104-08010-043	SWASHPLATE, STATIONARY		Y	
76104-08011-102	SWASHPLATE		Y	
76104-08012-101	SHROUD		Y	
76104-08012-102	LINER		Y	
76104-08012-104	LINER		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76104-08012-105	LINER		Y	
76104-08013-043	RETAINER		Y	
76104-08013-044	RETAINER		Y	
76104-08013-101	RETAINER		Y	
76104-08013-103	LINER		Y	
76104-08014-101	RETAINER		Y	
76104-08014-102	RETAINER		Y	
76104-08015-103	PIN		Y	
76104-08020-047	ROT.SCISSORS		Y	
76104-08021-048	UPPER LINK		Y	
76104-08023-045	LINK MOD AY		Y	
76104-08040-042	STAT SCISSOR		Y	
76104-08042-042	LINK ASSY		Y	
76104-08043-042	LINK ASSY		Y	
76104-08044-101	BUSHING		Y	
76104-08048-042	BRACKET		Y	
76104-08500-044	SWASHPLATE AY		Y	
76104-08520-041	SCISSORS ASY		Y	
76104-08523-041	LINK ASSY		Y	
76105-08000-043	DROOP STOP		Y	
76105-08001-042	CAM ASSY		Y	
76105-08002-101	BUSHING		Y	
76105-08003-102	BUSHING		Y	
76105-08004-102	STOP		Y	
76105-08004-103	ANTI FLAP		Y	
76105-08005-101	BUSHING		Y	
76105-08006-101	SPRING		Y	
76105-08051-041	CAM ASSY		Y	
76105-08051-102	BUMPER		Y	
76105-08052-101	PIN		Y	
76105-08053-101	BUSHING		Y	
76105-08054-103	SPRING CLIP		Y	
76105-08054-104	SPRING CLIP		Y	
76105-08055-101	LOCK WASHER		Y	
76105-08055-102	TANG WASHER		Y	
76105-08057-101	NUT		Y	
76105-08058-101	WASHER		Y	
76105-08058-102	WASHER		Y	
76105-08061-042	BRACKET		Y	
76105-08062-101	WASHER		Y	
76105-08064-101	LEVER RH		Y	
76105-08064-103	LEVER R/H		Y	
76105-08064-104	LEVER L/H		Y	
76105-08065-102	WEIGHT		Y	
76105-08065-103	WEIGHT		Y	
76105-08066-101	SHIM		Y	
76105-08067-101	SPRING		Y	
76106-00701-101	BOLT		Y	
76106-00701-102	BOLT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76106-08000-050	M/R DAMPER		Y	
76106-08000-101	FILTER		Y	
76106-08001-054	CYLINDER AY		Y	
76106-08001-102	RETAINER		Y	
76106-08001-105	SPACER		Y	
76106-08001-106	BUSHING		Y	
76106-08001-111	BUSHING		Y	
76106-08002-047	CYL HEAD ASSY		Y	
76106-08002-103	BUSHING		Y	
76106-08002-107	BUSHING		Y	
76106-08003-042	ROD ASSY		Y	
76106-08003-104	PLATE ORIFIC		Y	
76106-08004-042	ROD ASSY		Y	
76106-08004-102	ROD END		Y	
76106-08005-041	CAP		Y	
76106-08015-101	PLUG		Y	
76106-08015-102	PLUG		Y	
76106-08016-104	WASHER		Y	
76106-08016-105	WASHER		Y	
76106-08016-106	WASHER		Y	
76106-08016-108	WASHER		Y	
76106-08017-101	RET RING		Y	
76106-08017-102	RET RING		Y	
76106-08017-103	RET. RING		Y	
76106-08050-042	STRAINER AY		Y	
76106-08050-043	RESERVOIR		Y	
76106-08050-104	DECAL		Y	
76106-08051-041	TUBE ASSY		Y	
76106-08602-041	PIN		Y	
76106-08701-102	BOLT		Y	
76107-08001-045	SUPPORT ASSY		Y	
76107-08001-104	BIFILAR SUPPORT		Y	
76107-08002-111	BUSHING		Y	
76107-08002-112	BUSHING		Y	
76107-08002-113	BUSHING		Y	
76107-08002-114	BUSHING		Y	
76107-08004-057	WEIGHT ASSY.		Y	
76107-08004-107	WEIGHT		Y	
76107-08004-108	WEIGHT		Y	
76107-08004-113	BUMPER		Y	
76107-08004-119	BUMPER		Y	
76107-08004-122	PLATE		Y	
76107-08006-139	PIN		Y	
76107-08006-140	PIN		Y	
76107-08006-143	PIN		Y	
76107-08006-144	PIN		Y	
76107-08006-152	PIN		Y	
76107-08006-153	PIN		Y	
76107-08006-154	PIN		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76107-08006-155	PIN		Y	
76107-08006-156	PIN		Y	
76107-08007-103	WASHER		Y	
76107-08007-104	WASHER		Y	
76107-08008-102	SPACER		Y	
76107-08009-101	BUSHING		Y	
76107-08100-042	BIFILAR ASSY		Y	
76107-08100-043	BIFILAR ASSY		Y	
761111-3	SLICE AMP		Y	
761112-3	AMPLIFIER		Y	
761113-3	AMPLIFIER		Y	
76150-005-7-101	WASHER		Y	
76150-09012-106	BUSHING		Y	
76150-09012-107	BUSHING		Y	
76150-09012-110	WASHER		Y	
76150-09012-113	BUSHING		Y	
76150-09013-101	ABRASION STR		Y	
76150-09013-103	ABRASION		Y	
76150-09015-047	STIFFENER		Y	
76150-09015-048	STIFFENER		Y	
76150-09015-050	TIP RIB		Y	
76150-09015-116	STRAP		Y	
76150-09016-043	TIP BLOCK		Y	
76150-09017-102	ROOT CAP		Y	
76150-09025-103	SHIM		Y	
76150-09025-104	SHIM		Y	
76150-09025-105	SHIM		Y	
76150-09025-109	SHIM		Y	
76150-09025-110	SHIM		Y	
76150-09029-103	TAB		Y	
76150-09029-104	TAB		Y	
76150-09030-045	TIP PLATE		Y	
76150-09030-105	TIP BLOCK		Y	
76150-09031-108	TIP BRACKET		Y	
76150-09033-105	SKIN PATCH		Y	
76150-09034-102	WASHERS		Y	
76150-09034-103	WASHER		Y	
76150-09038-114	DOUBLER		Y	
76150-09041-041	SHIM ASSY		Y	
76150-09041-042	SHIM		Y	
76150-09043-052	COVER		Y	
76150-09043-104	DOUBLER		Y	
76150-09043-105	DOUBLER		Y	
76150-09043-108	DOUBLER STRP		Y	
76150-09043-118	COVER, TIP		Y	
76150-09100-053	M/R BLADE		Y	
76150-09112-101	BUSHING		Y	
76150-09124-041	PLATE ASSY		Y	
76150-09143-041	TIP CAP		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76150-09145-102	PLUG		Y	
76150-09160-101	PLATE		Y	
76150-09601-041	CUFF ASSY (FOLDING)		Y	
76200-01001-261	WINDOW LH		Y	
76200-01001-262	WINDOW RH		Y	
76200-01003-102	STRIKER		Y	
76200-01007-044	TUBE		Y	
76200-01007-109	TUBE		Y	
76200-01007-121	TUBE		Y	
76200-01011-104	CONVERTER		Y	
76200-01012-044	SCREWJACK ASSY		Y	
76200-01012-110	SEAL		Y	
76200-01012-119	SEAL		Y	
76200-01019-124	ANGLE		Y	
76200-01032-104	PLATE		Y	
76200-01032-105	PLATE		Y	
76200-01034-104	TUBE		Y	
76200-01034-105	HOSE		Y	
76200-01035-043	BONDING ASSY		Y	
76200-01035-105	FILLER		Y	
76200-01036-105	HOSE		Y	
76200-01812-102	PUMP		Y	
76200-01901-104	WIPER BLADE		Y	
76200-01901-107	FLEX DRIVE		Y	
76200-03002-110	DOUBLER		Y	
76200-06003-055	STABILIZER ASSY		Y	
76200-21003-106	STRAP		Y	
76201-01003-101	BRACE&SHELF		Y	
76201-02001-101	INTERCOSTAL		Y	
76201-02006-043	FRAME		Y	
76201-02007-541	BULKHEAD ASS		Y	
76201-02007-542	BULKHEAD ASS		Y	
76201-02008-142	CAP ANGLE		Y	
76201-03008-103	CAP ANGLE		Y	
76201-03008-176	L/H STRAP		Y	
76201-03008-179	BRACKET		Y	
76201-03008-180	BRACKET		Y	
76201-03009-106	FORMER		Y	
76201-03009-109	FORMER		Y	
76201-03009-110	FORMER		Y	
76201-03009-111	FORMER		Y	
76201-03009-112	FORMER		Y	
76201-03009-113	DOUBLER		Y	
76201-03009-114	FORMER		Y	
76201-03009-115	FORMER		Y	
76201-03011-048	FORMER ASY		Y	
76201-03011-049	LH FORMER		Y	
76201-03011-050	SUPPORT ASSY		Y	
76201-03011-051	SUPPORT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76201-03011-104	FORMER		Y	
76201-03011-141	TEE		Y	
76201-03011-152	FORMER		Y	
76201-03012-101	FRAME		Y	
76201-03012-102	FRAME		Y	
76201-03012-103	LH FORMER		Y	
76201-03012-104	RH FORMER		Y	
76201-03012-109	FORMER		Y	
76201-03012-110	FORMER		Y	
76201-03012-111	RIB		Y	
76201-03013-103	TEE		Y	
76201-03013-109	CHANNEL		Y	
76201-03013-114	FRAME		Y	
76201-03014-108	ANGLE		Y	
76201-03014-135	STRAP		Y	
76201-03014-139	WEB		Y	
76201-03017-116	FITTING		Y	
76201-04008-102	STRAP		Y	
76201-04008-103	FRAME		Y	
76201-04011-041	SUPPORT ASSY		Y	
76201-04011-042	SUPPORT ASSY		Y	
76201-05001-104	ANGLE		Y	
76201-05001-110	CAP		Y	
76201-05001-112	FITTING		Y	
76201-05002-042	ANGLE		Y	
76201-05002-043	ANGLE		Y	
76201-05002-105	DOUBLER		Y	
76201-05002-109	STRAP		Y	
76201-05002-110	STRAP		Y	
76201-05002-114	CAP ANGLE/ UNDRILLED		Y	
76201-05002-116	CAP ANGLE		Y	
76201-05002-118	SPAR		Y	
76201-05002-127	CAP ANGLE		Y	
76201-05002-128	CAP ANGLE		Y	
76201-05002-129	CAP ANGLE		Y	
76201-05501-118	DOUBLER ANGLE		Y	
76201-08001-104	BRACKET		Y	
76201-08001-106	FRAME		Y	
76201-08001-109	CLIP		Y	
76201-08002-041	CHANNEL		Y	
76201-08002-044	FRAME ASSY.		Y	
76201-08002-045	FRAME ASSY		Y	
76201-08002-046	FRAME ASSY		Y	
76201-23014-105	TEE		Y	
76201-23014-106	ANGLE		Y	
76201-23014-125	BRACKET		Y	
76201-23014-130	BULKHEAD		Y	
76201-23014-137	TEE		Y	
76201-23014-138	TEE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76201-24009-101	BULKHEAD		Y	
76201-24010-101	BULKHEAD		Y	
76201-24010-102	BRACKET		Y	
76201-25002-101	WEB		Y	
76201-28001-543	FRAME ASSY		Y	
76202-02001-051	TUBE ASSY		Y	
76202-02001-106	TEE CAP		Y	
76202-02001-132	ANGLE		Y	
76202-02002-079	PLATE ASSY		Y	
76202-02003-101	LOWER CAP		Y	
76202-02003-103	UPPER CAP		Y	
76202-02003-138	UPPER CAP		Y	
76202-02003-140	BRACKET		Y	
76202-02005-107	BEAM		Y	
76202-02005-108	BEAM		Y	
76202-02005-111	ANGLE		Y	
76202-02005-112	ANGLE BRACKE		Y	
76202-02005-113	FILLER		Y	
76202-02005-114	FILLER		Y	
76202-02005-115	STRAP		Y	
76202-02005-116	STRAP		Y	
76202-02007-124	ANGLE		Y	
76202-02009-123	INTERCOASTAL		Y	
76202-02009-125	BEAM		Y	
76202-02009-127	BRACKET		Y	
76202-02012-060	PAD		Y	
76202-03002-145	STRAP		Y	
76202-03006-042	ATTACH ANGLE		Y	
76202-03031-102	ANGLE		Y	
76202-03041-043	BRACKET		Y	
76202-03041-103	CAM		Y	
76202-03041-107	CAM		Y	
76202-04001-101	STRINGER		Y	
76202-04001-107	ANGLE		Y	
76202-04001-121	LONGR-8 LH		Y	
76202-04001-136	ANGLE		Y	
76202-04001-146	ANGLE		Y	
76202-04001-147	LONGERON		Y	
76202-04002-102	WEB		Y	
76202-04002-110	ANGLE		Y	
76202-04002-111	ANGLE		Y	
76202-04002-117	WEB		Y	
76202-04002-120	ATTACH ANGLE		Y	
76202-04002-121	ANGLE		Y	
76202-04002-124	ANGLE		Y	
76202-04003-101	SUPPORT BKT		Y	
76202-04004-044	CHANNEL		Y	
76202-04004-101	CHANNEL		Y	
76202-04004-105	BRACKET		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76202-04011-118	FITTING		Y	
76202-04011-119	FITTING		Y	
76202-04011-120	FITTING		Y	
76202-05001-101	RIB		Y	
76202-05001-102	RIB		Y	
76202-05001-104	RIB		Y	
76202-05001-106	RIB		Y	
76202-05001-108	RIB		Y	
76202-05001-109	RIB		Y	
76202-05001-110	RIB		Y	
76202-05002-103	RIB		Y	
76202-05002-105	ANGLE		Y	
76202-05002-107	ANGLE		Y	
76202-05002-108	RIB		Y	
76202-05002-109	RIB		Y	
76202-05002-112	WEB		Y	
76202-05002-113	RIB		Y	
76202-22003-101	POST		Y	
76202-22003-546	KEEL BEAM AY		Y	
76202-23002-101	STRAP		Y	
76202-23002-102	STRAP		Y	
76202-23003-101	LONGERON		Y	
76202-23003-102	LONGERON		Y	
76202-23003-145	CLIP		Y	
76202-24001-104	ANGLE-21 AFT		Y	
76202-24001-105	ANGLE		Y	
76202-24003-101	DOUBLER		Y	
76202-24061-041	BRKT ASSY LH		Y	
76202-24061-042	BRKT ASSY RH		Y	
76202-25002-101	BRACKET		Y	
76202-25002-103	RIB		Y	
76203-02003-125	LONGERON, AFT		Y	
76203-02003-126	LONGERON		Y	
76203-02003-151	PLUG FITTING		Y	
76203-02004-107	FORMER		Y	
76203-02004-116	STRAP		Y	
76203-02004-117	STRAP		Y	
76203-02004-119	STRAP		Y	
76203-02007-044	PANEL ASSY		Y	
76203-03003-131	WINDOW LH		Y	
76203-03003-132	WINDOW RH		Y	
76203-03006-053	RECEPTACLE		Y	
76203-03006-125	WINDOW CABIN		Y	
76203-03006-126	WINDOW AFT C		Y	
76203-03006-127	WINDOW AFT		Y	
76203-03006-128	WINDOW AFT R		Y	
76203-03012-044	HINGE		Y	
76203-03012-101	DOOR		Y	
76203-03012-106	BRACKET		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76203-03013-107	STRIP		Y	
76203-03013-108	HINGE COVER		Y	
76203-03014-054	FAIRING		Y	
76203-03015-101	ANGLE		Y	
76203-03021-103	COVER LH		Y	
76203-03021-104	COVER		Y	
76203-03022-041	L/H PANEL		Y	
76203-03022-042	R/H PANEL		Y	
76203-03022-101	COVER LH		Y	
76203-03022-102	COVER RH		Y	
76203-04000-047	PLTG ASSY TO		Y	
76203-04000-121	FENCE		Y	
76203-04000-122	FENCE		Y	
76203-04000-123	PLATING,T.C.		Y	
76203-04000-130	FENCE		Y	
76203-04000-131	SKIN		Y	
76203-05001-125	SKIN		Y	
76203-22005-050	R/H TUB PANEL		Y	
76203-23003-547	BOND ASSY LH		Y	
76203-23014-041	L/H SHROUD		Y	
76203-23014-042	R/H SHROUD		Y	
76203-23015-047	L/H SHROUD		Y	
76203-23022-042	LH, SHROUD ASSY		Y	
76203-23031-541	ROOF PANEL L/H		Y	
76203-23031-542	ROOF PANEL R/H		Y	
76203-23033-047	PANEL ASSY		Y	
76203-23033-048	PANEL ASSY, KIT		Y	
76203-24000-101	SKIN, BOTTOM		Y	
76203-24001-106	WINDOW		Y	
76203-25002-043	SKIN PANEL A		Y	
76204-02002-051	FLOOR ASSY		Y	
76204-02004-125	ANGLE		Y	
76204-02005-042	PANEL ASSY		Y	
76204-02005-043	PANEL ASSY		Y	
76204-02005-044	PANEL		Y	
76204-02005-117	ANGLE		Y	
76204-02005-120	ZEE SECTION		Y	
76204-02005-125	SEAL		Y	
76204-02006-049	PANEL ASSY		Y	
76204-02006-051	PAN BOND ASSY.		Y	
76204-02008-101	LONGERON		Y	
76204-02008-103	WEB		Y	
76204-02008-105	BEAM L/H		Y	
76204-02008-106	BEAM RH		Y	
76204-02008-107	BEAM L/H		Y	
76204-02008-110	STRAP		Y	
76204-02008-111	ANGLE		Y	
76204-02008-113	L/H TEE		Y	
76204-02008-115	L/H BRACE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76204-02008-119	BEAM L/H		Y	
76204-02008-120	BEAM R/H		Y	
76204-02008-121	ANGLE, LH		Y	
76204-02008-123	ANGLE		Y	
76204-02008-125	ANGLE L/H		Y	
76204-02008-127	ANGLE, LH		Y	
76204-02008-129	ANGLE L/H		Y	
76204-02008-134	STRAP		Y	
76204-02008-135	STRAP		Y	
76204-02008-136	N.D.		Y	
76204-02008-138	FILLER		Y	
76204-02008-153	DOUBLER		Y	
76204-02009-101	PLATE		Y	
76204-02012-104	ANGLE		Y	
76204-02021-117	SILL		Y	
76204-02021-118	CHANNEL		Y	
76204-03001-104	SHIM LAMINATE		Y	
76204-03001-105	GASKET		Y	
76204-03001-113	FITTING		Y	
76204-03001-150	CHANNEL		Y	
76204-03001-151	CHANNEL		Y	
76204-03001-159	ENGINE DECK		Y	
76204-22002-041	FLOOR ASSY		Y	
76204-22007-043	PANEL ASSY		Y	
76204-22021-041	PNL ASSY		Y	
76204-22021-042	PANEL		Y	
76204-23001-107	BRACKET		Y	
76204-23001-108	BRACKET		Y	
76204-23001-111	LONGERON		Y	
76204-23001-112	LONGERON		Y	
76204-23001-113	ANGLE		Y	
76204-23001-114	LONGERON		Y	
76204-23001-115	DOUBLER		Y	
76204-23001A115	DOUBLER		Y	
76204-23003-041	BLOCK ASSY		Y	
76205-01002-042	ASSY BRACKET		Y	
76205-01901-101	RADOME		Y	
76205-03005-043	BRACKET		Y	
76205-03005-045	BRACKET		Y	
76205-03006-101	RAIN GUTTER		Y	
76205-04001-101	ANGLE		Y	
76205-04104-041	FAIRING ASSY.		Y	
76205-05001-102	ANGLE ATTACH		Y	
76205-05001-107	ANGLE		Y	
76205-05001-108	ANGLE		Y	
76205-05002-043	FAIRING ASSY		Y	
76205-08001-058	DOOR ASSY RH		Y	
76205-08001-075	DOOR ASSY		Y	
76205-08001-119	SEAL		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76205-08001-121	SEAL		Y	
76205-08001-122	STRIKER		Y	
76205-08001-128	HINGE R/H		Y	
76205-08001-129	HINGE L/H		Y	
76205-08001-130	HINGE		Y	
76205-08001-131	SEAL		Y	
76205-08001-132	SEAL		Y	
76205-08001-133	HINGE		Y	
76205-08001-134	SEAL		Y	
76205-08001-136	DRAIN VENT		Y	
76205-08001-137	DOOR STOP		Y	
76205-10001-101	SEAL		Y	
76205-10001-105	SEAL		Y	
76205-10001-106	SEAL		Y	
76205-10001-107	SEAL		Y	
76205-28001-108	STRIKER		Y	
76205-28001-109	PLATE		Y	
76206-01004-101	WINDOW		Y	
76206-10001-049	HANDLE ASSY		Y	
76206-10001-050	PILOT WINDOW		Y	
76206-10001-053	CAM ASSY		Y	
76206-10001-107	HINGE		Y	
76206-10001-111	WINDOW		Y	
76206-10001-112	SEAL		Y	
76207-01022-041	WINDOW ASSY		Y	
76207-01022-042	WINDOW ASSY		Y	
76207-01191-041	RC ASSY LHS		Y	
76207-01191-042	RC ASSY RHS		Y	
76207-02001-104	SEAL		Y	
76207-02001-105	SEAL		Y	
76207-02001-106	SEAL		Y	
76207-02001-107	SEAL		Y	
76207-02001-108	SEAL		Y	
76207-02001-109	SEAL		Y	
76207-02001-110	SEAL		Y	
76207-02001-111	SEAL		Y	
76207-02001-112	SEAL		Y	
76207-02001-113	SEAL		Y	
76207-02001-114	SEAL		Y	
76207-02002-118	SHIM		Y	
76207-02002-119	SHIM		Y	
76207-03002-045	RETAINER		Y	
76207-03002-110	SEAL		Y	
76207-03002-111	SEAL		Y	
76207-03002-112	SHIM		Y	
76207-03005-103	SEAL		Y	
76207-03010-101	BUSHING		Y	
76207-03010-102	WASHER		Y	
76207-03010-103	BOLT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76207-03011-160	COVER		Y	
76207-03011-179	SEAL		Y	
76207-03011-180	SEAL		Y	
76207-03012-112	WINDOW		Y	
76207-03013-043	SUPPORT		Y	
76207-03013-104	COVER		Y	
76207-03013-108	DISH		Y	
76207-03015-045	LH UPPER ASSY		Y	
76207-03020-041	PLATE ASSY		Y	
76207-03020-042	PIN ASSY		Y	
76207-03020-101	PLATE BASE		Y	
76207-03020-103	LUG		Y	
76207-03020-104	MOUNTING		Y	
76207-03020-106	MOUNTING		Y	
76207-03020-110	PAD		Y	
76207-03030-047	VALVE		Y	
76207-03030-101	HOUSING		Y	
76207-03032-129	COVER		Y	
76207-03033-108	RECEIVER		Y	
76207-03033-146	SEAL		Y	
76207-03033-169	STOP		Y	
76207-03033-170	SPACER		Y	
76207-03037-045	EXHAUST AY.		Y	
76207-03037-046	EXHAUST ASSY		Y	
76207-04001-106	PANEL DBLR		Y	
76207-10002-083	WELD ASSY		Y	
76207-10002-095	WINDOW ASSY		Y	
76207-10002-113	WINDOW		Y	
76207-10002-157	DOOR SEAL		Y	
76207-10002-169	PANEL		Y	
76207-10002-170	PANEL		Y	
76207-10002-173	PANEL		Y	
76207-10002-402	WINDOW		Y	
76207-10002-403	WINDOW ASSY		Y	
76207-10002-404	ROD ASSY		Y	
76207-10004-101	SEAL		Y	
76207-10004-115	WINDOW,TINT		Y	
76207-10004-125	SEAL		Y	
76207-10004-126	SEAL		Y	
76207-10004-127	SEAL		Y	
76207-10004-128	SEAL		Y	
76207-10004-129	SEAL		Y	
76207-10004-130	SEAL		Y	
76207-10004-131	SEAL		Y	
76207-10004-134	RET. PLATE		Y	
76207-10005-045	DOOR ASSY		Y	
76207-10005-107	ANGLE		Y	
76207-10005-108	ANGLE		Y	
76207-10005-110	HINGE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76207-10005-111	LH PLATE		Y	
76207-10005-112	HINGE HALF		Y	
76207-10005-113	LH PLATE		Y	
76207-10005-114	RH PLATE		Y	
76207-10005-115	SEAL		Y	
76207-10005-116	SEAL		Y	
76207-10005-123	SEAL		Y	
76207-10009-051	WELD ASSY		Y	
76207-10009-061	L/H HANDLE		Y	
76207-10009-062	R/H HANDLE		Y	
76207-10009-067	REMOTE CNTRL RH		Y	
76207-10009-068	REMOTE CNTRL LH		Y	
76207-10009-075	ROD ASSY		Y	
76207-10009-096	ROD ASSY		Y	
76207-10009-116	PLATE		Y	
76207-10009-127	BEAM		Y	
76207-10009-128	DOUBLER		Y	
76207-10009-133	BELLCRANK		Y	
76207-10009-134	BELLCRANK		Y	
76207-10009-147	TUBE		Y	
76207-10009-151	BUSHING		Y	
76207-10009-155	PIN		Y	
76207-10009-162	SHIM		Y	
76207-10009-169	COVER		Y	
76207-10009-170	COVER		Y	
76207-10009-188	ROD		Y	
76207-10009-191	WINDOW		Y	
76207-10009-192	RH WINDOW		Y	
76207-10009-193	ROD		Y	
76207-10009-203	LINK		Y	
76207-10009-204	PIN		Y	
76207-10009-205	PIN		Y	
76207-10009-210	SEAL		Y	
76207-10009-211	SHIM		Y	
76207-10009-212	PLATE		Y	
76207-10009-213	PIN		Y	
76207-10009-240	SHIM		Y	
76207-10011-107	GASKET		Y	
76207-10011-118	STOP		Y	
76207-20009-110	ESCUTCHEON		Y	
76207-21001-041	TRAY		Y	
76207-21001-045	ROD		Y	
76207-21001-109	CLIP		Y	
76207-21001-111	RUBBER STRIP		Y	
76207-21001-112	RUBBER STRIP		Y	
76207-21001-113	STRIP		Y	
76207-23002-102	CATCH		Y	
76209-00700-101	BUSHING		Y	
76209-01001-046	BRACKET ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76209-01001-051	R/H BRACKET		Y	
76209-01001-052	HINGE ASSY		Y	
76209-01001-053	HINGE ASSY		Y	
76209-01001-054	HINGE ASSY		Y	
76209-01001-109	STOP		Y	
76209-01001-112	STOP		Y	
76209-01003-102	STUD		Y	
76209-01003-104	STUD		Y	
76209-01003-105	WASHER		Y	
76209-02003-102	PAD		Y	
76209-02005-106	FITTING		Y	
76209-02007-045	FITTING		Y	
76209-02007-046	FITTING ASSY		Y	
76209-02016-041	FITTING ASY.		Y	
76209-02016-042	FITTING		Y	
76209-02018-041	FITTING		Y	
76209-02019-042	SUPPORT		Y	
76209-02019-043	FITTING ASSY		Y	
76209-02019-048	FITTING		Y	
76209-02019-051	FITTING ASSY		Y	
76209-02019-106	FILLER		Y	
76209-02019-108	FITTING		Y	
76209-02019-110	LINER		Y	
76209-02024-042	FITTING ASSY		Y	
76209-02024-043	FITTING ASSY		Y	
76209-03001-054	FITTING		Y	
76209-03001-115	SHIM		Y	
76209-03002-113	FITTING		Y	
76209-03002-114	FITTING		Y	
76209-03002-119	FITTING		Y	
76209-03002-120	FITTING		Y	
76209-03002-123	FITTING		Y	
76209-03002-124	FITTING		Y	
76209-03002-125	FITTING		Y	
76209-03002-126	BRACKET		Y	
76209-03002-128	FITTING		Y	
76209-03003-042	HINGE		Y	
76209-03003-043	HINGE		Y	
76209-03003-102	FITTING		Y	
76209-03004-048	FITTING AY		Y	
76209-03004-051	FITTING ASSY		Y	
76209-03004-109	PLUG		Y	
76209-03004-112	PLATE		Y	
76209-03004-118	PLATE		Y	
76209-03005-043	LINK ASSY		Y	
76209-03005-044	HINGE ASSY		Y	
76209-03005-106	PLATE	Y		
76209-03005-107	PLATE		Y	
76209-03006-041	FITTING		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76209-03006-045	FITTING ASSY		Y	
76209-03006-046	FITTING		Y	
76209-03006-047	FITTING		Y	
76209-03006-049	FITTING ASSY		Y	
76209-03006-050	FITTING		Y	
76209-03006-106	FITTING		Y	
76209-03008-101	SCUPPER		Y	
76209-03008-102	CAP		Y	
76209-03008-103	STRAINER		Y	
76209-03009-112	TUBE		Y	
76209-03011-103	TRACK		Y	
76209-03012-104	SLEEVE		Y	
76209-03014-103	SPRING		Y	
76209-03014-105	SPRING		Y	
76209-03015-045	PIVOT ASSY		Y	
76209-03015-056	CABLE		Y	
76209-03015-066	STRIKER ASSY		Y	
76209-03015-070	STRIKER ASSY		Y	
76209-03015-114	BELLCRANK		Y	
76209-03015-125	STOP		Y	
76209-03015-151	ROLLER		Y	
76209-03015-154	BRACKET		Y	
76209-03016-104	HANDLE		Y	
76209-03017-108	PLATE		Y	
76209-03017-113	PLATE		Y	
76209-03017-115	FITTING		Y	
76209-03017-119	INSERT		Y	
76209-03017-123	FITTING		Y	
76209-03019-103	SPRING		Y	
76209-03024-053	FITTING ASSY		Y	
76209-03024-055	FITTING		Y	
76209-03024-056	FITTING ASSY		Y	
76209-03024-107	SPRING		Y	
76209-03024-113	SPRING		Y	
76209-03035-103	LEVER		Y	
76209-03036-103	SEAL		Y	
76209-03053-041	SUPPORT ASSY		Y	
76209-03053-042	SUPPORT ASSY		Y	
76209-03053-043	SUPPORT ASSY		Y	
76209-03053-044	SUPPORT		Y	
76209-03053-120	BRACKET		Y	
76209-03053-129	STOP		Y	
76209-03053-130	SHIM		Y	
76209-03061-042	ACTUATOR ASS		Y	
76209-03802-101	TRACK SLIDE		Y	
76209-03902-107	LATCH ASSY		Y	
76209-04004-042	FITTING		Y	
76209-04004-105	WEB		Y	
76209-04004-110	WEB		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76209-04005-103	PLATE		Y	
76209-04006-104	SHIM		Y	
76209-04006-107	SHIM		Y	
76209-04006-108	SHIM		Y	
76209-04006-109	SHIM		Y	
76209-04007-041	WEDGE ASSY.		Y	
76209-04007-102	SHIM		Y	
76209-05001-101	FITTING		Y	
76209-10001-042	HINGE ASSY		Y	
76209-10001-043	HINGE ASSY		Y	
76209-10001-104	CAM		Y	
76209-10002-042	HANDLE		Y	
76209-10002-044	ROD		Y	
76209-10002-053	FITTING ASSY		Y	
76209-10002-103	LINK		Y	
76209-10002-104	LEVER		Y	
76209-10002-109	LEVER		Y	
76209-10002-110	LEVER		Y	
76209-10002-111	PLATE		Y	
76209-10002-112	PLATE		Y	
76209-10002-113	PLATE		Y	
76209-10002-114	PLATE		Y	
76209-10002-115	SHIM		Y	
76209-10002-116	SHIM		Y	
76209-10002-129	L/H ROD		Y	
76209-10002-130	ROD		Y	
76209-10002-131	BELLCRANK		Y	
76209-10002-132	RH BELLCRANK		Y	
76209-10002-133	TUBE ASSY		Y	
76209-10002-134	TUBE		Y	
76209-10002-135	ROD		Y	
76209-10002-136	Rod R/H		Y	
76209-10002-141	STUD		Y	
76209-10002-142	SPRING		Y	
76209-10002-161	STUD		Y	
76209-10002-162	HANDLE		Y	
76209-10002-164	PLATE		Y	
76209-23024-048	FITTING ASSY		Y	
76209-23700-103	FITTING FWD		Y	
76209-23700-104	FITTING FWD		Y	
76209-23700-105	FITTING		Y	
76209-23700-106	FITTING		Y	
76209-24004-047	S76A FITTING		Y	
76209-24004-048	FITTING ASSY		Y	
76209-24004-049	S76C FITTING		Y	
76209-24004-103	SHIM		Y	
76209-24004-104	WEDGE AY		Y	
76209-24004-109	PLATE		Y	
76209-24004-110	SHIM		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76209-24004-111	SHIM		Y	
76210-01800-102	CREWSEAT		Y	
76210-02003-101	BRACKET ASSY		Y	
76211-03012-059	DUCT SUPPORT		Y	
76211-03013-196	WINDOW		Y	
76211-03017-043	DOOR REVEAL		Y	
76211-03017-044	DOOR TRIM		Y	
76211-03023-157	COVER		Y	
76211-03041-126	REVEAL		Y	
76211-03043-046	SUPPORT ASSY		Y	
76211-03043-126	SUPPORT ASSY		Y	
76212-03003-109	SPACER		Y	
76212-03004-119	KNOB		Y	
76212-03006-110	DUCT		Y	
76212-03027-101	TUBE		Y	
76213-03010-108	SILL		Y	
76213-03025-124	KNOB		Y	
76217-03002-064	COVER ASSY		Y	
76217-03002-158	COVER		Y	
76217-03002-159	COVER		Y	
76217-03002-161	COVER		Y	
76217-03002-172	COVER		Y	
76217-03029-106	SEAL		Y	
76250-01101-102	CYLINDER		Y	
76250-01103-053	TUBE ASSY		Y	
76250-01103-054	TUBE		Y	
76250-01103-055	TUBE ASSY		Y	
76250-01103-076	TUBE ASSY		Y	
76250-01103-088	TUBE ASSY		Y	
76250-01103-089	TUBE ASSY		Y	
76250-01501-101	PIN		Y	
76250-01700-042	TUBE ASSY		Y	
76250-01700-043	NOSE GEAR AY		Y	
76250-01700-103	BRACKET		Y	
76250-02102-041	TUBE ASSY		Y	
76250-02103-104	DAMPER		Y	
76250-02103-106	DAMPER		Y	
76250-02104-044	FITTING		Y	
76250-02104-101	BUMPER		Y	
76250-02108-041	BELLCRANK		Y	
76250-02502-041	TUBE		Y	
76250-02502-042	ROD ASSY		Y	
76250-02503-101	PIN, PIVOT		Y	
76251-00702-043	LINK ASSY		Y	
76251-01101-103	FLANGE		Y	
76251-01101-104	FLOAT		Y	
76251-01101-105	FLOAT, NOSE		Y	
76251-01102-105	COVER ASSY		Y	
76251-01102-106	COVER ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76251-01102-109	LHMAIN FLOAT		Y	
76251-01102-110	RHMAIN FLOAT		Y	
76251-01103-102	VALVE/CYL AY		Y	
76251-01105-041	PAD ASSY		Y	
76251-01105-101	WASHER		Y	
76251-01105-102	WASHER		Y	
76251-01105-103	WASHER		Y	
76251-01105-105	WASHER		Y	
76251-01105-106	STRIP		Y	
76251-01105-108	WASHER		Y	
76251-01105-109	WASHER		Y	
76251-01105-111	SLEEVE		Y	
76251-01105-112	SLEEVE		Y	
76251-01105-113	SLEEVE		Y	
76251-01105-114	SLEEVE		Y	
76251-01105-115	TAPE HOOK		Y	
76251-01105-118	WASHER STRIP		Y	
76251-01105-119	WASHER STRIP		Y	
76251-01105-120	WASHER STRIP		Y	
76251-01105-121	SLEEVE		Y	
76251-01107-045	TUBE		Y	
76251-01107-046	TUBE		Y	
76251-01107-056	TUBE		Y	
76251-01107-072	TUBE		Y	
76251-01107-074	TUBE ASSY		Y	
76251-01107-081	TUBE ASSY		Y	
76251-01107-082	TUBE		Y	
76251-01107-083	TUBE		Y	
76251-01107-084	TUBE		Y	
76251-01107-085	TUBE		Y	
76251-01107-086	TUBE		Y	
76251-01108-047	BRACKET		Y	
76251-01108-063	CLIP ASSY		Y	
76251-01108-114	GASKET		Y	
76251-01108-116	GASKET		Y	
76251-01108-137	RETAINER		Y	
76251-01108-147	SUPPORT		Y	
76251-01108-148	SUPPORT		Y	
76251-01108-149	SPRING		Y	
76251-01108-150	SPRING		Y	
76251-01108-151	SPRING		Y	
76251-01108-152	SPRING		Y	
76251-01108-153	SPRING		Y	
76251-01108-159	RETAINER		Y	
76251-01108-160	GASKET		Y	
76251-01108-163	RETAINER		Y	
76251-01108-164	FITTING		Y	
76251-01108-165	FITTING		Y	
76251-01108-166	CLIP		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76251-01108-167	CLIP		Y	
76251-01108-169	BLOCK		Y	
76251-01108-170	BLOCK		Y	
76251-01108-176	WASHER STRIP		Y	
76251-01109-053	RING ASSY		Y	
76251-01109-054	CLAMP		Y	
76251-01109-101	SUPPORT		Y	
76251-01109-105	GASKET		Y	
76251-01109-112	GASKET		Y	
76251-01109-113	SPACER		Y	
76251-01109-116	SUPPORT		Y	
76251-01109-117	RETAINER		Y	
76251-01114-041	COVER		Y	
76251-01116-101	COVER		Y	
76251-02701-101	ROD END		Y	
76251-02702-041	HOSE		Y	
76251-02702-042	HOSE		Y	
76251-02702-043	HOSE ASSY		Y	
76251-02702-044	HOSE		Y	
76255-02003-045	CABLE ASSY		Y	
76255-02003-047	FITTING ASSY		Y	
76255-02003-104	PULLEY		Y	
76255-02003-105	PULLEY		Y	
76255-02003-112	TUBE		Y	
76255-02003-120	SHIM		Y	
76300-07002-101	COVER		Y	
76300-07002-102	GASKET		Y	
76300-07500-451	CLIP		Y	
76300-07500-454	CLIP		Y	
76300-07502-041	CLIP		Y	
76300-07502-042	CLIP		Y	
76300-07662-041	DUCT ASSY UP		Y	
76300-07663-041	DUCT ASSY LH		Y	
76300-07663-042	DUST ASSY RH		Y	
76300-07663-105	BKT		Y	
76300-07954-106	FITTING		Y	
76300-07954-107	BOLT		Y	
76300-07954-109	BOLT		Y	
76301-01003-042	LEVER ASSY		Y	
76301-01003-102	BUSHING		Y	
76301-01005-103	LEVER		Y	
76301-01006-047	COVER AY		Y	
76301-01007-042	COVER ASSY		Y	
76301-01008-002	CLEVIS		Y	
76301-01014-102	ROLLER		Y	
76301-01015-001	ARM ASSY		Y	
76301-01015-002	RADIAL ARM		Y	
76301-01015-101	SEGMENT		Y	
76301-01015-102	RADIAL ARM		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76301-01016-050	LEVER ASSY		Y	
76301-01017-101	BUSHING		Y	
76301-01017-105	CLIP		Y	
76301-01017-106	PIN		Y	
76301-01017-114	WASHER		Y	
76301-01503-050	LATCH ASSY		Y	
76301-01503-051	BRACKET		Y	
76301-01503-052	BRACKET		Y	
76301-01503-111	LEVER		Y	
76301-01503-112	LEVER		Y	
76301-01503-123	PIVOT		Y	
76301-01504-101	SPRING		Y	
76301-01601-045	TRIGGER.		Y	
76301-01601-046	TRIGGER		Y	
76301-01601-101	LH SETTING		Y	
76301-01601-102	RH SETTING		Y	
76301-01601-103	CAM		Y	
76301-01601-104	RH CAM		Y	
76301-01601-105	LH TRIGGER		Y	
76301-01601-106	RH TRIGGER		Y	
76301-01601-108	ROLLER		Y	
76301-01601-109	SPRING LH		Y	
76301-01601-110	SPRING RH		Y	
76301-01601-113	STOP PIN		Y	
76301-01601-114	STOP PIN		Y	
76301-01601-119	HALF CAM		Y	
76301-01601-120	CAM		Y	
76301-01601-123	LH IDLE STOP		Y	
76301-01661-055	COVER ASSY L		Y	
76301-01667-042	TRIGGER ASSY		Y	
76301-01667-101	BOLT TRIGGER		Y	
76301-01667-102	PIN FLY SW		Y	
76301-01667-105	ROLLERSLEEVE		Y	
76301-01667-117	CLIP		Y	
76301-01910-112	CABLE		Y	
76301-01910-116	CABLE ASSY		Y	
76301-01910-117	CABLE		Y	
76301-01910-118	CABLE		Y	
76301-03003-103	LEVER		Y	
76301-03004-042	TORQUE SHAFT		Y	
76301-03027-102	CAM		Y	
76301-03028-043	BRACKET ASY		Y	
76301-03028-047	BRACKET ASSY		Y	
76301-03029-102	LINK		Y	
76301-03031-101	ROLLER		Y	
76301-03032-101	WASHER		Y	
76301-03033-043	IDLER ASSY		Y	
76301-03034-042	ARM ASSY		Y	
76301-03035-102	SUPPORT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76301-03038-044	PLATE ASSY		Y	
76301-03039-101	ROLLER		Y	
76301-03039-102	ROLLER PIN		Y	
76301-03041-101	SPRING		Y	
76301-03042-041	BRACKET		Y	
76301-03045-101	LEVER		Y	
76301-03046-101	PIN		Y	
76301-03047-101	SWITCH		Y	
76301-03911-106	CABLE		Y	
76301-07960-102	THROTTLE CABLE		Y	
76302-07001-139	PLATE		Y	
76302-07001-152	PLATE		Y	
76302-07001-153	PLATE		Y	
76302-07003-111	HINGE		Y	
76302-07005-104	RELEASE		Y	
76302-07006-041	FITTING ASSY.		Y	
76302-07007-123	SEAL		Y	
76302-07007-124	SEAL		Y	
76302-07007-145	BRACKET		Y	
76302-07007-146	BRACKET		Y	
76302-07007-147	GUIDE		Y	
76302-07007-153	CLAMP		Y	
76302-07007-156	RETAINER		Y	
76302-07007-157	SEAL		Y	
76302-07007-166	SEAL		Y	
76302-07007-168	SEAL		Y	
76302-07008-105	SEAL		Y	
76302-07009-103	PANEL		Y	
76302-07009-104	RAW MATERIAL		Y	
76302-07009-107	SEAL		Y	
76302-07009-108	SEAL		Y	
76302-07009-109	SEAL		Y	
76302-07009-110	CHAFE STRIP		Y	
76302-07009-111	RAW MATERIAL		Y	
76302-07010-041	COVER		Y	
76302-07010-042	COVER ASSY.		Y	
76302-07010-044	COVER ASSY		Y	
76302-07014-052	HINGE		Y	
76302-07014-061	DOOR		Y	
76302-07014-062	PANEL ASSY		Y	
76302-07016-044	COVER ASSY		Y	
76302-07024-101	SPACER		Y	
76302-07024-102	SPACER		Y	
76302-07027-112	SEAL		Y	
76302-07028-063	SCREEN ASSY		Y	
76302-07028-064	SCREEN ASSY		Y	
76302-07028-065	SCREEN ASSY		Y	
76302-07028-066	SCREEN ASSY		Y	
76302-07029-102	BOOT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76302-07030-102	BOOT		Y	
76302-07031-101	SEAL		Y	
76302-07031-105	SEAL		Y	
76302-07031-106	SEAL		Y	
76302-07032-041	PIN ASSY.		Y	
76302-07039-049	SCREEN		Y	
76302-07039-050	SCREEN INLET		Y	
76302-07040-101	NOZZLE		Y	
76302-07040-102	UNION		Y	
76302-07500-106	COLUMN		Y	
76302-07500-162	SEAL		Y	
76302-07500-181	SEAL		Y	
76302-07501-124	FITTING		Y	
76302-07501-132	BUSHING		Y	
76302-07501-135	FITTING		Y	
76302-07502-045	SUPPORT ASSY		Y	
76302-07502-046	SUPPORT ASSY		Y	
76302-07502-047	STUD		Y	
76302-07502-065	FTG AS AFT		Y	
76302-07502-103	TUBE		Y	
76302-07502-105	FITTING		Y	
76302-07502-106	FITTING		Y	
76302-07502-115	BUSHING		Y	
76302-07502-116	WASHER		Y	
76302-07502-125	FITTING		Y	
76302-07503-111	SEAL		Y	
76302-07503-112	SEAL		Y	
76302-07504-106	SEAL		Y	
76302-07504-107	SEAL		Y	
76302-07506-050	SEAL ASSY		Y	
76302-07506-054	SEAL		Y	
76302-07506-056	SEAL ASSY		Y	
76302-07506-057	SEAL ASSY		Y	
76302-07506-062	SEAL ASSY		Y	
76302-07506-118	SEAL		Y	
76302-07506-123	SEAL		Y	
76302-07506-124	DIVIDER		Y	
76302-07506-126	SEAL		Y	
76302-07511-041	STRUT		Y	
76302-07512-045	CHANNEL ASSY		Y	
76302-07512-046	CHANNEL ASSY		Y	
76302-07512-103	HINGE HALF		Y	
76302-07512-110	CHANNEL		Y	
76302-07512-116	WASHER		Y	
76302-07513-107	RECEPTABLE		Y	
76302-07513-110	RECEPTACLE		Y	
76302-07514-047	ROD ASSY		Y	
76302-07515-044	LEVER ARM		Y	
76302-07517-042	LEVER ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76302-07517-104	BOLT		Y	
76302-07520-101	DUCT		Y	
76302-07522-041	DUCT ASSY		Y	
76302-07522-105	BOOT		Y	
76302-07523-103	COVER INLET		Y	
76302-07525-052	PIN HOLDER A		Y	
76302-07525-053	PIN HOLDER A		Y	
76302-07525-147	HINGE		Y	
76302-07526-103	FIREWALL SEA		Y	
76302-07526-104	FIREWALL SEA		Y	
76302-07528-044	GUIDE		Y	
76302-07528-045	GUIDE ASSY		Y	
76302-07528-048	GUIDE ASSY		Y	
76302-07530-103	PLATE/STRIKE		Y	
76302-07530-104	PIN		Y	
76302-07530-105	PIN		Y	
76302-07532-101	SEAL		Y	
76302-07532-102	SEAL		Y	
76302-07532-109	HINGE		Y	
76302-07532-114	HINGE PIN		Y	
76302-07532-124	RETAINER		Y	
76302-07532-125	SEAL		Y	
76302-07535-045	FWD DOOR		Y	
76302-07535-051	AFT DOOR		Y	
76302-07535-109	SEAL		Y	
76302-07536-103	SEAL		Y	
76302-07601-117	PLATE		Y	
76302-07701-101	CLAMP		Y	
76302-07800-107	PRESS TRANSDUCER		Y	
76302-07800-108	IBF MONITOR/DISPLAY		Y	
76302-07905-104	SEAL		Y	
76302-07905-105	SEAL		Y	
76302-07905-106	SEAL		Y	
76302-07950-104	EMI FILTER		Y	
76302-07952-105	AFT LATCH		Y	
76302-07952-106	FWD LATCH		Y	
76302-07953-102	CABLE		Y	
76302-07955-101	DUCT FLEX		Y	
76303-07000-102	PIN		Y	
76303-07001-103	SEAL BULB		Y	
76303-07008-043	TUBE		Y	
76303-07009-049	STRUT ASSY		Y	
76303-07009-114	PAD		Y	
76303-07010-005	FITTING		Y	
76303-07010-006	LATCH AFT RH		Y	
76303-07012-042	PIN ASSY		Y	
76303-07013-043	CATCH		Y	
76303-07013-044	CATCH ASSY		Y	
76303-07016-102	LATCH		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76303-07017-105	SPRING		Y	
76303-07019-042	LATCH		Y	
76303-07020-042	LATCH ASSY		Y	
76303-07020-043	LATCH ASSY		Y	
76303-07022-104	PLATE		Y	
76303-07513-041	MOUNT		Y	
76303-07513-042	ASSY OF		Y	
76303-07513-045	WELD ASSY		Y	
76303-07516-104	ACT BUSHING		Y	
76303-07516-109	FITTING		Y	
76303-07608-043	STRUT ASSY F		Y	
76303-07608-105	EYEBOLT		Y	
76303-07609-041	WELD ASSY.		Y	
76303-07609-043	WELD ASSY.		Y	
76303-07609-044	WELD ASSY		Y	
76303-07800-104	DEFLECTOR		Y	
76304-07003-136	SEAL ENG COW		Y	
76304-07003-137	SEAL		Y	
76304-07003-138	SEAL		Y	
76304-07006-137	FITTING		Y	
76304-07008-045	SHIELD ASSY		Y	
76304-07008-148	RETAINER		Y	
76304-07008-149	SEAL		Y	
76304-07008-152	SEAL FX		Y	
76304-07008-153	SEAL		Y	
76304-07008-157	SEAL FIREWAL		Y	
76304-07008-158	SEAL		Y	
76304-07008-166	SUPPORT RH		Y	
76304-07008-167	SUPPORT LH		Y	
76304-07009-049	INLET ASSY		Y	
76304-07012-101	CLAMP		Y	
76304-07012-102	CLAMP		Y	
76304-07015-045	TUBE		Y	
76304-07016-041	TUBE		Y	
76304-07020-050	SHIELD ASSY		Y	
76304-07020-052	SHIELD AY		Y	
76304-07020-108	STRIP		Y	
76304-07022-101	PLATE		Y	
76304-07024-102	GASKET		Y	
76304-07025-041	BRACKET ASSY		Y	
76304-07500-065	BRACKET ASSY		Y	
76304-07503-103	SEAL		Y	
76304-07504-116	SEAL		Y	
76304-07507-044	DUCT ASSY		Y	
76304-07507-106	SEAL		Y	
76304-07608-127	SEAL		Y	
76304-07608-128	SEAL		Y	
76304-07900-111	HEATER FW LH		Y	
76304-07900-112	HEATER FW RH		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76304-07900-114	INLET HEATER		Y	
76305-07001-044	EXHAUST ASSY		Y	
76305-07003-044	EXHAUST EJECTOR		Y	
76305-07500-043	DUCT ASSY		Y	
76305-07501-046	RETAINER AY		Y	
76305-07501-153	LOWER PANEL		Y	
76305-07503-104	LINK		Y	
76305-07503-105	SHIM		Y	
76305-07507-142	SEAL		Y	
76305-07509-101	MOUNT PLATE		Y	
76305-07509-102	SHIM		Y	
76305-07509-103	SHIM		Y	
76305-07509-104	SHIM		Y	
76305-07510-043	BRACKET		Y	
76305-07510-044	BRACKET		Y	
76306-07000-045	TUBE		Y	
76306-07004-043	TUBE		Y	
76306-07004-044	TUBE ASSY		Y	
76306-07004-056	TUBE		Y	
76306-07004-057	TUBE ASSY		Y	
76306-07004-059	TUBE		Y	
76306-07004-069	TUBE		Y	
76306-07004-070	TUBE		Y	
76306-07004-079	TUBE		Y	
76306-07004-080	TUBE ASSY		Y	
76306-07004-082	TUBE ASSY		Y	
76306-07004-095	TUBE		Y	
76306-07602-043	TUBE		Y	
76306-07602-060	TUBE ASSY		Y	
76306-07602-061	TUBE ASSY		Y	
76306-07602-062	VENT PIPE		Y	
76306-07602-064	TUBE ASSY		Y	
76306-07603-042	TUBE		Y	
76306-07603-043	TUBE		Y	
76306-07603-044	TUBE ASSY		Y	
76306-07901-106	FIRE BOTTLE		Y	
76306-07902-104	FLAME DETEC		Y	
76307-00701-041	HOSE ASSY		Y	
76307-00701-042	HOSE ASSY		Y	
76307-02003-071	TUBE		Y	
76307-02003-072	TUBE		Y	
76307-02003-073	TUBE		Y	
76307-02003-075	TUBE		Y	
76307-02003-083	TUBE		Y	
76307-02003-091	TUBE		Y	
76307-02010-104	SUPPORT ASSY		Y	
76307-02500-101	BRACKET		Y	
76307-02904-101	CHECK VALVE		Y	
76307-03002-102	TUBE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76307-03002-105	TUBE		Y	
76307-03002-109	TUBE ASSY		Y	
76307-03002-113	TUBE		Y	
76307-03002-114	TUBE, DRAIN		Y	
76307-03002-115	HOSE		Y	
76307-03002-123	TUBE		Y	
76307-03002-124	TUBE		Y	
76307-03003-101	TUBE ASSY		Y	
76307-03004-045	TUBE		Y	
76307-03004-046	TUBE ASSY		Y	
76307-03005-050	TUBE		Y	
76307-03005-058	TUBE ASSY		Y	
76307-03005-059	WELD ASSY		Y	
76307-03005-061	TUBE		Y	
76307-03006-043	TUBE ASSY		Y	
76307-03006-045	TUBE ASSY.		Y	
76307-03006-047	TUBE		Y	
76307-03006-049	TUBE		Y	
76307-03006-061	TUBE ASSY		Y	
76307-03006-065	TUBE ASSY		Y	
76307-03006-070	TUBE ASSY.		Y	
76307-03006-071	TUBE		Y	
76307-03006-072	TUBE		Y	
76307-03006-088	TUBE ASSY		Y	
76307-03006-150	TUBE		Y	
76307-03006-151	TUBE		Y	
76307-03006-152	TUBE		Y	
76307-03006-153	TUBE		Y	
76307-03006-154	TUBE		Y	
76307-03006-155	HOSE		Y	
76307-03007-101	SHIELD		Y	
76307-03502-142	TUBE		Y	
76307-03502-167	TUBE		Y	
76307-03503-041	TEE ASSY		Y	
76307-03503-043	TEE ASSY		Y	
76307-03506-053	TUBE ASSY		Y	
76307-03506-059	TUBE ASSY		Y	
76307-03602-102	TUBE		Y	
76307-03602-103	TUBE		Y	
76307-03602-104	TUBE		Y	
76307-03602-111	TUBE		Y	
76307-03602-113	TUBE		Y	
76307-03602-114	TUBE		Y	
76307-03602-117	TUBE		Y	
76307-03602-120	TUBE		Y	
76307-03602-122	TUBE		Y	
76307-03602-123	TUBE		Y	
76307-03900-101	VALVE CHECK		Y	
76307-07004-101	ORIFICE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76307-07661-104	GASKET		Y	
76307-07700-041	FILLER CAP A		Y	
76307-07700-042	FILLER CAP A		Y	
76307-07700-101	HINGE		Y	
76307-07700-102	SPACER		Y	
76307-07700-104	SHIM		Y	
76307-07901-102	VALVE		Y	
76307-07903-101	CHECK VALVE		Y	
76308-07000-101	DRAIN TUBE		Y	
76308-07001-101	ADAPTER		Y	
76308-07001-102	SPACER		Y	
76308-07004-101	ADAPTER		Y	
76308-07005-101	FITTING		Y	
76308-07005-102	ADAPTER		Y	
76308-07500-101	TUBE		Y	
76308-07501-045	OIL RSVR		Y	
76308-07504-047	FTG BREATHER		Y	
76308-07504-109	GASKET		Y	
76308-07662-041	TUBE		Y	
76308-07662-042	TUBE		Y	
76308-07900-101	PRESS SWITCH		Y	
76308-07901-106	OIL COOLER		Y	
76308-07901-107	RESERVOIR		Y	
76308-07951-101	ENG.OIL COOL		Y	
76308-07954-103	FILLER IND.		Y	
76309-07002-109	WASHER		Y	
76309-07002-115	NUT		Y	
76309-07002-118	CLEVIS		Y	
76309-07002-119	ROD END		Y	
76309-07007-048	TUBE ASSY		Y	
76309-07007-053	SUPPORT ASSY		Y	
76309-07007-054	SUPPORT		Y	
76309-07015-102	TRUNION		Y	
76309-07017-043	TRIPOD ASSY		Y	
76309-07017-044	SUPPORT ASSY.		Y	
76309-07504-041	MOUNT ASSY		Y	
76309-07507-102	MOUNT		Y	
76309-07510-102	BRACKET		Y	
76310-07010-044	VALVE ASSY		Y	
76310-07015-041	LEVER ASSY		Y	
76350-01111-042	ABSORBER ASS		Y	
76350-01120-101	SPACER		Y	
76350-01120-102	BUSHING		Y	
76351-09004-118	LINER		Y	
76351-09004-119	LINER		Y	
76351-09004-120	LINER THRUST		Y	
76351-09004-124	LINER		Y	
76351-09004-125	LINER		Y	
76351-09004-128	LINER		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76351-09013-105	SPACER		Y	
76351-09014-102	NUT		Y	
76351-09017-101	SHIM		Y	
76351-09026-109	SHAFT SPLINE		Y	
76351-09029-102	SWASHPLATE GUIDE		Y	
76351-09036-101	NUT		Y	
76351-09041-044	BLOWER		Y	
76351-09044-041	GEN DRIVE AY		Y	
76351-09049-101	TUBE		Y	
76351-09050-045T094	WRENCH		Y	
76351-09057-043	ASSY		Y	
76351-09058-102	HELICAL PINION		Y	
76351-09061-101	PLUG		Y	
76351-09063-101	SHIM		Y	
76351-09064-101	SLEEVE		Y	
76351-09078-049	TRANS TUBE A		Y	
76351-09079-041	SLEEVE		Y	
76351-09081-103	LUBE PUMP		Y	
76351-09082-105	CHIP DETECT.		Y	
76351-09083-103	FILTER		Y	
76351-09084-101	SEAL		Y	
76351-09085-101	BOOT ASSY		Y	
76351-09085-102	SHIELD		Y	
76351-09093-042	COVER		Y	
76351-09102-101	PLATE		Y	
76351-09102-102	DECAL		Y	
76351-09105-051	JETTING		Y	
76351-09105-054	JET		Y	
76351-09105-055	JET		Y	
76351-09105-056	JET ASSY		Y	
76351-09105-066	OIL JET		Y	
76351-09105-067	JET		Y	
76351-09105-068	JET		Y	
76351-09142-101	NUT		Y	
76351-09143-101	PLATE		Y	
76351-09144-101	SPACER		Y	
76351-09144-102	SPACER		Y	
76351-09600-045	QT MAIN GEARBOX		Y	
76351-09615-102	PLATE,LOCKING		Y	
76351-09615-104	PLATE,LOCKING		Y	
76351-09616-101	LOCK NUT		Y	
76351-09617-101	PLATE-LOCKNG		Y	
76351-09626-104	SPLINE SHAFT		Y	
76351-09671-101	COVER		Y	
76351-09672-101	COVER PLATE		Y	
76351-09674-042	JET ASSY		Y	
76351-09677-041	JET ASSY		Y	
76351-09682-101	RING, SPACER		Y	
76351-09685-101	RETAINER RING		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76357-05011-103	BREATHER		Y	
76357-05600-041	GEARBOX ASY.		Y	
76357-05611-101	INPUT GEAR		Y	
76358-05100-047	TAIL GEARBOX		Y	
76358-05109-045	HOUSING ASSY		Y	
76358-05116-101	CONE		Y	
76358-05119-101	LOCK PLATE		Y	
76358-05120-101	PLATE		Y	
76358-05122-101	SHIM		Y	
76358-05123-101	SHIM		Y	
76358-05127-101	BUSHING		Y	
76358-05128-101	BOLT		Y	
76358-05129-101	KEYWAY		Y	
76358-05130-101	RET. LOCK		Y	
76358-05600-042	TAIL GEARBOX ASSY		Y	
76361-04002-101	FLANGE		Y	
76361-04003-041	STUB SHAFT		Y	
76361-04004-046	T/R SHAFT		Y	
76361-04004-049	T/R SHAFT		Y	
76361-04007-042	BEARING SUPT		Y	
76361-04008-101	COUPLING		Y	
76361-04008-103	COUPLING		Y	
76361-04008-104	COUPLING		Y	
76361-04009-101	SHIM		Y	
76361-04009-102	SHIM		Y	
76361-04009-103	SHIM		Y	
76361-04009-104	SHIM		Y	
76361-04009-105	SHIM		Y	
76361-04009-106	SHIM		Y	
76361-04009-107	SHIM		Y	
76361-04009-108	SHIM		Y	
76361-04012-103	HOUSING		Y	
76361-04028-101	SHAFT		Y	
76361-04604-044	TRDS 2,3,4		Y	
76361-05201-048	T/R SHAFT		Y	
76361-05201-051	SECT 1 TRDS		Y	
76361-05601-041	SECT. 5 T.R.D.S.		Y	
76361-09103-102	PLUG		Y	
76361-09103-104	FLANGE		Y	
76362-09202-103	BLOWER		Y	
76362-09202-104	IMPELLER		Y	
76362-09203-102	COOLER		Y	
76362-09204-101	SCREEN		Y	
76362-09206-102	SPACER		Y	
76362-09209-041	ISOLATOR		Y	
76362-09212-101	REDUCER		Y	
76362-09809-101	GROMMET		Y	
76363-09101-102	DISC		Y	
76363-09101-108	ROTOR BRAKE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76363-09103-101	R/B CALIPER		Y	
76363-09103-102	GOODRICH ROTOR BRAKE DISC		Y	
76363-09103-105	PARKER DISC		Y	
76363-09104-041	SHIM		Y	
76363-09105-044	SHIELD		Y	
76400-00014-043	PUSH ROD AY		Y	
76400-00014-055	PUSHROD ASSY		Y	
76400-00014-063	PUSHROD ASSY		Y	
76400-00014-071	PUSHROD ASSY		Y	
76400-00014-074	PUSH ROD		Y	
76400-00014-075	PUSH ROD AY		Y	
76400-00014-076	PUSH ROD AY		Y	
76400-00014-077	PUSH ROD AY		Y	
76400-00014-080	PUSHROD ASSY		Y	
76400-00024-045	PUSHROD ASSY		Y	
76400-00024-049	ROD ASSY		Y	
76400-00024-052	PUSHROD ASSY		Y	
76400-00024-053	PUSH ROD ASS		Y	
76400-00024-054	PUSH ROD		Y	
76400-00024-055	PUSH ROD		Y	
76400-00024-060	PUSHROD ASSY		Y	
76400-00034-046	FLT CONTROLS		Y	
76400-00034-054	CLEVIS ASSY		Y	
76400-00034-057	PUSH ROD ASS		Y	
76400-00034-059	PUSHROD ASSY		Y	
76400-00034-122	WASHER		Y	
76400-00034-123	WASHER		Y	
76400-02000-041	DAMPER ASSY		Y	
76400-02000-042	DAMPER ASSY		Y	
76400-02000-044	DAMPER		Y	
76400-02101-041	CONNECTING A		Y	
76400-02101-043	CONNECTING A		Y	
76400-02102-102	COVER		Y	
76400-03001-043	BELLCRANK AY		Y	
76400-03003-041	BELL CRANK A		Y	
76400-03005-044	LEVER ASSY D		Y	
76400-03005-046	LEVER ASSY		Y	
76400-03005-047	LEVER ASSY		Y	
76400-03005-049	LEVER ASSY		Y	
76400-03006-047	LINK ASSY		Y	
76400-03006-048	LINK ASSY		Y	
76400-03006-049	IDLER LINK ASSY.		Y	
76400-03006-050	LINK ASSY		Y	
76400-03006-053	LINK ASSY		Y	
76400-03006-055	IDLER LINK		Y	
76400-03013-048	CLEVIS ASSY		Y	
76400-03013-049	CLEVIS ASSY		Y	
76400-03013-111	SPACER		Y	
76400-03013-112	WASHER		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76400-03014-049	BRACKET		Y	
76400-03014-114	ARM		Y	
76400-03014-127	BRACKET		Y	
76400-03014-129	BRACKET		Y	
76400-03014-133	ANGLE		Y	
76400-03015-041	LEVER ASSY		Y	
76400-03015-042	FRCTN LVR AS		Y	
76400-03016-104	BUSHING		Y	
76400-03016-105	BUSHING		Y	
76400-03016-106	BUSHING		Y	
76400-03018-101	BUSHING		Y	
76400-03190-102	SPACER		Y	
76400-03190-105	BUSHING		Y	
76400-03191-043	CABLE ASSY.		Y	
76400-03191-046	CABLE,FWD RH		Y	
76400-03191-050	CABLE		Y	
76400-03191-051	CABLE		Y	
76400-03191-052	CABLE		Y	
76400-03191-053	CONTRL CABLE		Y	
76400-03191-058	CABLE		Y	
76400-03191-059	CABLE ASSY		Y	
76400-03192-101	COLLAR		Y	
76400-03192-102	FAIRLEAD		Y	
76400-03192-103	FAIRLEAD		Y	
76400-03192-104	FAIRLEAD		Y	
76400-03192-105	FAIRLEAD		Y	
76400-03192-106	FAIRLEAD		Y	
76400-03192-107	FAIRLEAD		Y	
76400-03192-109	SHIM		Y	
76400-03192-117	PACKER		Y	
76400-03192-120	STRIP		Y	
76400-03192-121	FAIRLEAD		Y	
76400-03201-041	BELLCRANK AY.		Y	
76400-03202-042	BELLCRANK ASSY		Y	
76400-03203-041	BELL CRANK A		Y	
76400-03206-041	BELLCRANK AY		Y	
76400-03207-041	FLT CONTROLS		Y	
76400-03209-041	BELLCRANK		Y	
76400-03210-043	BELLCRANK AY		Y	
76400-03213-041	BELL CRANK A		Y	
76400-03215-041	SUPPORT ASSY.		Y	
76400-03219-043	BELL CRANK A		Y	
76400-03221-101	TUBE		Y	
76400-03221-102	TORQUE TUBE		Y	
76400-03222-041	SUPPORT AY		Y	
76400-03222-105	SHIM		Y	
76400-03223-046	BRACE ASSY		Y	
76400-03223-049	BRACE ASSY		Y	
76400-03224-102	PLATE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76400-03224-104	LOCK PLATE		Y	
76400-03224-105	SPACER		Y	
76400-03310-068	CYLINDER		Y	
76400-03310-116	SLEEVE		Y	
76400-09501-042	SUPPORT ASSY		Y	
76400-09502-044	BELLCRANK		Y	
76400-09502-046	BELLCRANK		Y	
76400-09504-042	SUPPORT ASSY		Y	
76400-09505-104	SUPPORT ASSY		Y	
76400-09506-041	BELL CRANK		Y	
76400-23005-047	BELLCRANK ASSY.		Y	
76400-23194-042	FAIRLEAD		Y	
76400-23514-044	CLEAT ASSY		Y	
76401-01106-043	SUPPORT ASSY		Y	
76401-01106-046	SUPPORT		Y	
76401-01114-105	RIVET		Y	
76401-01114-106	RIVET		Y	
76401-01115-041	BOLT ASSY		Y	
76401-01115-102	RING		Y	
76401-01115-105	PIN		Y	
76401-01125-113	BOOT COVER		Y	
76401-01126-044	BOOT ASSY		Y	
76401-01126-045	BOOT, BLACK		Y	
76401-03103-042	IDLER ASSY S		Y	
76401-03108-045	BELLCRANK AY		Y	
76401-03108-046	ROD END		Y	
76401-03108-048	BELLCRANK AY		Y	
76401-03109-101	ADAPTER		Y	
76401-03512-043	IDLER ASSY		Y	
76401-03515-043	ADAPTER ASSY		Y	
76401-03516-101	SHIM		Y	
76402-01113-101	END FITTING		Y	
76402-01114-106	CLIP		Y	
76403-01101-056	PEDAL ASSY		Y	
76403-01102-048	SUPPORT ARM		Y	
76403-01103-105	SHAFT		Y	
76403-01105-044	TUBE ASSY		Y	
76403-01108-101	KNOB PDL ADJ		Y	
76403-01110-041	SUPPORT ASSY		Y	
76403-01112-101	FITTING		Y	
76403-01124-103	LEAD SCREW		Y	
76403-01134-041	LEVER		Y	
76403-01144-101	PAD		Y	
76403-01144-102	PAD		Y	
76403-01151-102	ACTUATOR		Y	
76403-03001-041	BELL CRANK		Y	
76403-05107-101	ADAPTER		Y	
76403-05108-044	BRACKET ASSY		Y	
76403-05108-114	SPACER		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76403-05110-042	LINK ASSY		Y	
76403-05114-041	CRANK ASSY		Y	
76403-05115-041	IDLER		Y	
76403-05116-041	BRACKET		Y	
76403-05117-042	ROD END AY		Y	
76403-05117-101	ADAPTER		Y	
76403-05118-042	SUPPORT ASSY		Y	
76403-05118-104	SHIM		Y	
76403-05119-042	SUPPORT ASSY		Y	
76403-05120-043	CRANK ASSY		Y	
76403-05121-041	CRANK ASSY		Y	
76403-05123-041	BRACKET ASSY		Y	
76403-05125-101	SPACER		Y	
76403-05135-106	LEVER		Y	
76403-05139-101	RING		Y	
76403-05141-041	CASE ASSY		Y	
76403-05141-102	BUSHING		Y	
76403-05141-104	BUSHING		Y	
76403-05141-105	WASHER		Y	
76403-05142-101	T/R QUAD		Y	
76403-25125-043	QUADRANT		Y	
76450-00011-095	TUBE ASSY		Y	
76450-00014-075	TUBE ASSY		Y	
76450-00014-077	TUBE		Y	
76450-00014-079	TUBE		Y	
76450-00014-080	TUBE ASSY.		Y	
76450-00014-081	TUBE		Y	
76450-00014-082	TUBE ASSY ST		Y	
76450-00014-083	TUBE ASSY		Y	
76450-00014-085	TUBE ASSY		Y	
76450-00014-086	TUBE ASSY		Y	
76450-00014-087	TUBE ASSY		Y	
76450-00014-088	TUBE ASSY		Y	
76450-00014-089	TUBE ASSY		Y	
76450-00014-090	TUBE ASSY		Y	
76450-00014-091	TUBE ASSY.		Y	
76450-00014-096	TUBE		Y	
76450-00016-051	TUBE		Y	
76450-00017-041	TUBE		Y	
76450-00017-042	TUBE		Y	
76450-00017-044	TUBE		Y	
76450-00017-045	PIPE		Y	
76450-00017-046	TUBE ASSY		Y	
76450-00017-047	TUBE		Y	
76450-00018-054	STATIC TUBE		Y	
76450-00018-067	STATIC TUBE		Y	
76450-00018-068	TUBE		Y	
76450-00702-041	LIGHT		Y	
76450-00703-101	INST LIGHT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76450-00706-102	TRIP. TACH		Y	
76450-00706-103	DUAL TORQUE		Y	
76450-00809-101	SMART CONTACTOR		Y	
76450-00901-104	TRIPLE TACH		Y	
76450-00904-106	TEMP IND.		Y	
76450-00908-102	GRIP ASSY		Y	
76450-01005-102	LDG CONTROL PANEL		Y	
76450-01006-046	PANEL ASSY		Y	
76450-01019-101	AMPLIFIER, TONE GEN.		Y	
76450-01042-041	HEATER CONTROL PNL		Y	
76450-01061-045	PANEL ASSY		Y	
76450-01061-064	LAMP		Y	
76450-01061-069	PANEL ASSY		Y	
76450-01061-082	PANEL ASSY		Y	
76450-01061-084	PANEL ASSY		Y	
76450-01076-105	INDICATOR		Y	
76450-01076-111	POWER TURB. TEMP.		Y	
76450-01078-112	INDICATOR		Y	
76450-01078-119	TRANSMITTER		Y	
76450-01078-125	INDICATOR		Y	
76450-01078-126	OIL TEMP IND		Y	
76450-01078-127	PRESS. TRANSMITTER		Y	
76450-01078-128	PRESS XMTR		Y	
76450-01078-129	PRESSURE XMTR		Y	
76450-01082-112	PLACARD		Y	
76450-01082-121	PLACARD VNE		Y	
76450-01082-126	PLACARD		Y	
76450-01082-128	PLACARD		Y	
76450-01082-130	PLACARD VNE		Y	
76450-01084-110	PADDING BOND		Y	
76450-01096-108	GAS TACH N1		Y	
76450-01106-102	CHANNEL		Y	
76450-01106-105	BRACKET		Y	
76450-01501-042	PLACARD		Y	
76450-01501-115	PLACARD		Y	
76450-01501-116	PLACARD		Y	
76450-01601-042	ENG OVSPD		Y	
76450-01603-102	DECAL		Y	
76450-02007-101	BRACKET		Y	
76450-02010-103	GRIP		Y	
76450-02038-041	PANEL ASSY		Y	
76450-02107-042	BALANCE CHAMBER		Y	
76450-22034-044	PANEL ASSY		Y	
76500-04503-060	TUBE ASSY		Y	
76500-04503-061	TUBE ASSY		Y	
76500-04503-067	TUBE ASSY		Y	
76500-04503-077	TUBE ASSY		Y	
76500-04503-094	TUBE ASSY		Y	
76500-07050-106	GASKET		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76500-07050-112	GASKET		Y	
76500-07051-043	CONNECTION		Y	
76500-07051-045	TUBE		Y	
76500-07051-046	TUBE ASSY		Y	
76500-07051-105	GASKET		Y	
76500-07053-102	GASKET		Y	
76500-07075-042	ADAPT ASSY		Y	
76500-07501-107	GASKET		Y	
76500-07501-109	GASKET		Y	
76500-07513-045	TUBE ASSY		Y	
76500-07652-043	BRACKET ASSY		Y	
76500-07652-044	BRACKET		Y	
76500-07900-104	MIXING VALVE		Y	
76500-07900-106	MIXING VLVE		Y	
76500-07901-104	BLOWER ASSY		Y	
76500-07903-102	VALVE		Y	
76500-07903-103	VALVE		Y	
76500-07904-101	PRESS SWITCH		Y	
76500-07904-102	PRESS SWITCH		Y	
76500-07907-101	HOSE ASSY		Y	
76500-07908-102	SWITCH		Y	
76500-07909-101	SWITCH		Y	
76500-07910-105	HOSE ASSY		Y	
76500-07910-107	HOSE ASSY		Y	
76500-17901-101	VALVE, REG P		Y	
765417-1	COUPLING		Y	
76550-00704-101	SHOCK MOUNT		Y	
76550-00811-101	HOIST PENDANT		Y	
76550-00902-101	RELAY		Y	
76550-00902-102	RELAY		Y	
76550-00902-103	RELAY		Y	
76550-00902-104	RELAY		Y	
76550-00903-101	SOCKET		Y	
76550-00903-102	RELAY, SOCKET		Y	
76550-00903-104	SOCKET		Y	
76550-00903-105	SOCKET, RELA		Y	
76550-00911-101	GENERATOR		Y	
76550-00915-108	MSTR CAUT PNL		Y	
76550-01001-107	CAPSULE LENS		Y	
76550-01001-108	CAPSULE LENS		Y	
76550-01001-110	CAPSULE LENS		Y	
76550-01001-111	CAPSULE		Y	
76550-01001-112	CAPSULE LENS		Y	
76550-01001-113	CAPSULE LENS		Y	
76550-01001-114	CAPSULE LENS		Y	
76550-01001-115	CAPSULE LENS		Y	
76550-01001-116	CAPSULE LENS		Y	
76550-01001-118	CAPSULE LENS		Y	
76550-01001-121	CAPSULE LENS		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76550-01001-122	CAPSULE LENS		Y	
76550-01001-123	PLATE		Y	
76550-01001-125	CAPSULE LENS		Y	
76550-01001-126	CAPSULE LENS		Y	
76550-01001-127	CAPSULE LENS		Y	
76550-01001-129	CAPSULE LENS		Y	
76550-01001-142	LENS		Y	
76550-01001-148	LENS		Y	
76550-01001-154	CAPSULE LENS		Y	
76550-01001-155	PLATE		Y	
76550-01001-156	PLATE		Y	
76550-01008-103	LIGHT DIMMER		Y	
76550-01010-101	CONTROL UNIT		Y	
76550-01013-103	MOTOR, W/WIP		Y	
76550-02001-051	BUS BAR		Y	
76550-02001-110	BUS BAR		Y	
76550-02001-111	BUS BAR		Y	
76550-02005-104	LIGHT ASSY		Y	
76550-02009-102	PLATE		Y	
76550-02192-041	SUPPORT		Y	
76550-02507-101	TUBE		Y	
76550-02507-102	TUBE		Y	
76550-03001-041	LIGHT ASSY		Y	
76550-03004-106	BUS BAR		Y	
76550-03009-103	40 AMP BATTERY		Y	
76550-03009-105	22AMP BATTERY		Y	
76550-03010-044	ANGLE		Y	
76550-03010-045	ROD ASSY		Y	
76550-03017-101	C/BREAKER		Y	
76550-03017-102	C/BREAKER		Y	
76550-03017-105	C/BREAKER		Y	
76550-03017-107	C/BREAKER		Y	
76550-03017-108	C/BREAKER		Y	
76550-03018-041	MODULE		Y	
76550-03503-041	PROTECTION		Y	
76550-03900-101	ELBOW		Y	
76550-06001-043	LIGHT ASSY		Y	
76550-06001-044	LIGHT ASSY		Y	
76550-07500-108	SPACER		Y	
76550-09005-108	AC GEN.CTRL.		Y	
76550-09006-101	STARTER GEN		Y	
76550-09006-106	VOLT REG ONT		Y	
76550-09006-107	STARTER GEN		Y	
76550-09006-108	DC STARTGEN		Y	
76550-23010-103	TAB/TARGET		Y	
76550-23010-105	SPACER		Y	
76550-23800-102	STATIC INVERTER		Y	
76550-24001-101	METCAL		Y	
76552-00124-048	HARNESS ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76552-00191-102	CABLE		Y	
76552-00191-103	CABLE ASSY		Y	
76552-00207-043	HARNESS ASSY		Y	
76552-00500-051	ELECT.HARNESS ASSY.		Y	
76552-00904-041	CABLE ASSY		Y	
76552-00904-042	CABLE		Y	
76552-00904-043	CABLE ASSY		Y	
76552-00904-044	CABLE ASSY		Y	
76552-00904-045	CABLE SEGMENT		Y	
76552-00904-046	CABLE SEGMENT S30		Y	
76552-00904-047	CABLE ASSY S28		Y	
76552-02010-104	CABLE ASSY		Y	
76552-02010-105	HARNESS		Y	
76552-04800-103	HARNESS		Y	
76552-04800-104	HARNESS		Y	
76600-00097-041	SWITCH ASSY.		Y	
76600-00200-080	CABLE		Y	
76600-01119-102	ID PLATE		Y	
76600-02098-041	RELAY		Y	
76600-02110-102	RADOME		Y	
76600-21001-042	TRAY ASSY.		Y	
76650-00901-101	VALVE SOL OP		Y	
76650-00901-102	VALVE		Y	
76650-01801-103	EMERG.SYST.LG EXT.		Y	
76650-02001-045	BRACKET ASSY		Y	
76650-02001-047	BRACKET ASSY		Y	
76650-02001-048	BRACKET		Y	
76650-02001-049	BRACKET ASSY		Y	
76650-02001-054	BRACKET		Y	
76650-02001-057	BRACKET ASSY		Y	
76650-02001-058	BRACKET ASSY		Y	
76650-02001-060	BRACKET ASSY		Y	
76650-02001-061	BRACKET ASSY		Y	
76650-02001-107	BRACKET		Y	
76650-02001-121	BLOCK		Y	
76650-02001-122	BLOCK		Y	
76650-02001-123	BLOCK		Y	
76650-02001-135	BLOCK		Y	
76650-02001-136	BLOCK		Y	
76650-02001-138	BLOCK		Y	
76650-02001-139	BRACKET		Y	
76650-02001-159	CLIP		Y	
76650-02003-102	HANDLE		Y	
76650-02003-108	CLIP EM LDG		Y	
76650-02003-109	ADAPTER		Y	
76650-02004-046	SUB ASSY		Y	
76650-02802-104	CNTRL. VALVE		Y	
76650-05801-114	T/R SERVO		Y	
76650-09002-044	SUPPORT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76650-09003-047	TUBE ASSY.		Y	
76650-09004-042	MANIFOLD		Y	
76650-09004-044	MANIFOLD		Y	
76650-09004-047	MANIFOLD		Y	
76650-09004-048	MANIFOLD		Y	
76650-09006-103	SUPPORT		Y	
76650-09006-111	SPACER		Y	
76650-09006-113	BRACKET		Y	
76650-09006-114	STAND-OFF		Y	
76650-09006-116	BRACKET		Y	
76650-09008-042	WELD ASSY.		Y	
76650-09801-105	MODULE HYD		Y	
76650-09805-111	M/R SERVO		Y	
76650-09807-102	WASHER		Y	
76650-09807-103	WASHER		Y	
76650-09808-102	PUMP		Y	
76651-01005-042	TUBE ASSY		Y	
76651-01005-045	TUBE ASSY		Y	
76651-01005-046	TUBE ASSY		Y	
76651-01005-053	TUBE ASSY		Y	
76651-01005-055	TUBE ASSY		Y	
76651-02004-041	TUBE		Y	
76651-02004-042	HOSE		Y	
76651-02004-043	TUBE ASSY.		Y	
76651-02004-046	TUBE		Y	
76651-02004-075	VTA LINE		Y	
76651-02004-076	TUBE ASSY		Y	
76651-02004-090	TUBE ASSY		Y	
76651-02005-045	TUBE ASSY		Y	
76651-02005-046	TUBE ASSY		Y	
76651-02005-053	TUBE		Y	
76651-02005-059	TUBE ASSY		Y	
76651-02005-073	TUBE ASSY		Y	
76651-02005-076	TUBE ASSY		Y	
76651-02005-090	TUBE ASSY		Y	
76651-02005-091	TUBE ASSY		Y	
76651-02005-147	TUBE		Y	
76651-03002-051	TUBE		Y	
76651-03002-052	TUBE ASSY.		Y	
76651-03002-053	TUBE ASSY		Y	
76651-03002-054	TUBE ASSY		Y	
76651-03002-059	LINE		Y	
76651-03002-065	HYDRAULIC LI		Y	
76651-03002-067	TUBE ASSY		Y	
76651-03002-183	TUBE		Y	
76651-03002-184	TUBE		Y	
76651-03002-185	TUBE ASSY		Y	
76651-03002-186	TUBE ASSY		Y	
76651-03002-189	TUBE ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76651-03003-046	TUBE ASSY		Y	
76651-03003-047	TUBE ASSY		Y	
76651-03003-052	TUBE ASSY		Y	
76651-03003-053	TUBE ASSY		Y	
76651-03003-054	TUBE ASSY		Y	
76651-03004-041	TUBE ASSY		Y	
76651-03004-051	TUBE		Y	
76651-03004-052	TUBE		Y	
76651-03004-053	TUBE		Y	
76651-03004-056	TUBE		Y	
76651-03004-057	TUBE		Y	
76651-03004-058	TUBE		Y	
76651-03004-059	TUBE		Y	
76651-03004-061	TUBE		Y	
76651-03004-062	TUBE		Y	
76651-03004-063	TUBE		Y	
76651-03004-064	TUBE		Y	
76651-03004-065	HYD TUBE ASS		Y	
76651-03004-066	TUBE ASSY		Y	
76651-03004-067	TUBE		Y	
76651-03004-068	TUBE ASSY		Y	
76651-03004-069	TUBE ASSY		Y	
76651-03004-070	TUBE ASSY		Y	
76651-03004-071	TUBE ASSY		Y	
76651-03004-072	TUBE ASSY.		Y	
76651-03004-073	PIPE		Y	
76651-03004-074	TUBE ASSY		Y	
76651-03004-077	HYD TUBE		Y	
76651-03004-078	TUBE ASSY		Y	
76651-03004-082	TUBE ASSY		Y	
76651-04001-051	TUBE ASSY		Y	
76651-04001-052	TUBE ASSY		Y	
76651-04001-055	TUBE		Y	
76651-04001-056	TUBE		Y	
76651-04001-058	TUBE		Y	
76651-04001-063	TUBE		Y	
76651-04001-064	TUBE ASSY.		Y	
76651-04001-068	TUBE ASSY		Y	
76651-04001-071	TUBE ASSY		Y	
76651-04001-077	TUBE ASSY		Y	
76651-04001-082	TUBE ASSY		Y	
76651-09002-054	TUBE		Y	
76651-09002-059	TUBE ASSY		Y	
76651-09002-060	TUBE ASSY		Y	
76651-09002-061	TUBE		Y	
76651-09002-063	TUBE ASSY		Y	
76651-09002-064	TUBE ASSY		Y	
76651-09002-065	TUBE ASSY		Y	
76651-09002-066	TUBE ASSY.		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76651-09002-068	TUBE ASSY		Y	
76651-09002-070	TUBE ASSY		Y	
76651-09002-073	TUBE ASSY		Y	
76651-09002-074	TUBE ASSY		Y	
76683H8-10	Bolt			Y
76700-20008-045	SLING, MAIN		Y	
76700-20009-044	TABING TOOL		Y	
76700-20010-041	INDICAT. ASSY.		Y	
76700-20012-070	RIGGING SET		Y	
76700-20012-071	RIGGING SET		Y	
76700-20016-041	WRENCH		Y	
76700-20017-041	WRENCH		Y	
76700-20019-041	WRENCH ASSY		Y	
76700-20021-042	LOCKPIN, MLG		Y	
76700-20021-044	PIN ASSY NG		Y	
76700-20022-101	BRACKET, NLG		Y	
76700-20022-102	BRACKET, MLG		Y	
76700-20023-041	BOLT INSTALL		Y	
76700-20024-052	SHIELD ASSY		Y	
76700-20024-053	SHIELD ASSY		Y	
76700-20024-054	PLUG ASSY.		Y	
76700-20024-055	SHIELD		Y	
76700-20024-056	SHIELD		Y	
76700-20024-057	SHIELD		Y	
76700-20031-041	BLADE HANDLE		Y	
76700-20040-042	COVER ASSY.		Y	
76700-20040-043	COVER ASSY		Y	
76700-20041-043	MRB TIEDOWN SET		Y	
76700-20066-043	PULLER		Y	
76700-20082-041	INSTALLER ASSY.		Y	
76700-20083-041	WRENCH		Y	
76700-20084-041	TORQUE REACT		Y	
76700-20100-041	WRENCH		Y	
76700-20101-045	WRENCH		Y	
76700-20102-106	SEAL INSTALL		Y	
76700-20102-107	INSTALLER		Y	
76700-20103-041	TORQUE REACT		Y	
76700-20109-041	WRENCH		Y	
76700-20117-101	SEAL INSTALL		Y	
76700-20124-101	LIFTING EYE		Y	
76700-20125-041	BRG/SEAL		Y	
76700-20126-101	INSTALLER		Y	
76700-20132-041	BEAM PULLER		Y	
76700-20156-041	SHIM GAUGE		Y	
76700-20156-042	SHIM GAUGE		Y	
76700-20156-102	SHIM		Y	
76700-20170-041	SHIELD ASSY		Y	
76700-20171-041	SHIELD ASSY		Y	
76700-20176-041	WRENCH		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
76700-20177-041	TORQUE REACT		Y	
76700-20203-041	REMOVAL/INST		Y	
767566-1	AC WATER COL		Y	
768336-1	WASHER		Y	
768378-1	ROD WIPER		Y	
768392-1	BEARING		Y	
76850-00002-041	C/BOARD		Y	
76850-00002-045	PC BOARD ASS		Y	
76850-00003-104	BRG PLATE		Y	
76850-00003-117	BULB SEAL		Y	
76850-00005-041	DOOR ASSY		Y	
76850-00007-041	SOLENOID		Y	
76850-00009-041	DRIVE LINK		Y	
76850-00010-042	TENSION LINK		Y	
76850-00010-102	ROD		Y	
76850-00010-103	ROD END BUSH		Y	
76850-00012-102	LIMIT SWITCH		Y	
76850-00015-104	CLEVIS PIN		Y	
76850-00015-112	BUMPER		Y	
76900-01802-106	ACTUATOR AY		Y	
76900-01804-104	INDICATOR PANEL		Y	
76900-01805-102	SWITCH		Y	
76900-01806-102	SWITCH		Y	
76900-01808-103	GYRO		Y	
76900-01810-116	PEDAL DAMPER		Y	
76900-01812-102	MAG BRAKE		Y	
76900-01813-101	SENSOR		Y	
76900-01815-103	HEADING HOLD		Y	
76900-01820-101	SERVO		Y	
76900-01821-103	TRANSDUCER		Y	
76900-01821-104	TRANSDUCER		Y	
76900-01881-103	VIB ABSORB A		Y	
769131-1	DUCT		Y	
769384-1	FILTER		Y	
76CSN76200-801	KIT		Y	
7-7PIN17	LOGIC UNIT		Y	
79698-820	INSERT, SCISSORS BRKT ATTACH			Y
79790H4-5	BOLT		Y	
79790H4-6	BOLT		Y	
7G30	PRESSURE S/W	Y		
7L7F	NYRON BUSHIN		Y	
800-10	Plumb Bob			Y
80232-4-8	SCREW		Y	
80R14-1-1AA	RECEPTACLE		Y	
80RC55100000	WASHER, Wave Delta-P Retention			Y
80S28-8-1AA	STUD		Y	
811B24	CLOCK		Y	
81-2111-7	WIRE HARNESS		Y	
81-2111-8	WIRE HARNESS		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
81-2111-9	LEADMOTOR		Y	
81-21-304-3	BUSHINGROD E		Y	
81-21-401-7	RECEPTACLE		Y	
81-2140-2	BEARING BLOC		Y	
81-2140-3	BEARING BLOC		Y	
81-2140-30	KIT-BOLT		Y	
81-21-403-12	BUMPER		Y	
81-2140-4	PLATE		Y	
81-2140-5	PLATE		Y	
81-2140-5A	PLATE		Y	
81-241J	Dial Indicator			Y
8213-1	HEELS Immersion Switch			Y
822-0668-011	Radio Tuning Unit			Y
822-0668-031	Radio Tuning Unit			Y
822-1069-002	REC / Exiter			Y
822-1116-001	VHF-422 RCVR/XMITER			Y
822-1121-003	BU CONTROL			Y
822-1276-002	Receiver/Transmitter (RT 1794)			Y
822-1458-001	Multi-Function Display (MFD) Landscape			Y
822-1596-005	Multi-Function Display (MFD)			Y
822-1596-006	MFD			Y
822-1846-004	DCU			Y
831112-1	Turbine Rotor Inspection Gauge			Y
831148-1	Turbine Nozzle Holder			Y
831373-1	FIXTURE			Y
833054-1	Fuel Nozzle Holder Fixture Assy, APU			Y
8359-1	Light Strip			Y
8360-1	Light Strip			Y
8360-2	Light, Heel			Y
8360-3	Light, Heel			Y
841155-1	SQUIB		Y	
843785-1G97	CAPSULE		Y	
8444-1174-3012	PLATE-BOW		Y	
8444-1174-3070	FIREWALL-SEA		Y	
8444-1174-3072	FIREWALL-SEA		Y	
8444-1174-3074	FIREWALL-SEA		Y	
8444-1174-31410	SEAL-ANGLE R		Y	
8444-1174-31411	SEAL-ANGLE L		Y	
8444-1174-31414	SEAL-FIREWAL		Y	
8444-1174-31415	SEAL-FIREWAL		Y	
8444-1174-3144	SEAL-ANGLE-R		Y	
8444-1174-3145	SEAL-ANGLE-L		Y	
8444-1174-3148	SEAL-ANGLE-A		Y	
8444-1174-3151	SEAL-ANGLE-F		Y	
8444-1174-3152	SEAL-ANGLE-F		Y	
8444-1174-3161	DECK-AFT		Y	
8444-1174-3173	BRACKET-SUPT		Y	
8444-1174-3175	BRACKET-SUPT		Y	
8444-1174-3176	BRACKET		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
8444-1174-3177	BRACKET		Y	
8444-1174-31815	DEFLECTORLH		Y	
8444-1174-3271	SEAL		Y	
8444-1174-3273	SEAL LONGFER		Y	
8444-1174-3274	SEAL LONGERO		Y	
8444-1174-3310	SECTION-UPR		Y	
8444-1174-3311	SECTION-UPR		Y	
8444-1174-3312	SECTION CNTR		Y	
8444-1174-33510	SEAL-ANGLE R		Y	
8444-1174-33511	SEAL-ANGLE L		Y	
8444-1174-33512	SEAL-F/WALL		Y	
8444-1174-33513	SEAL-F/WALL		Y	
8444-1174-3356	SEAL-INNER R		Y	
8444-1174-3357	SEAL-INNER L		Y	
8444-1174-3359	SEAL-INNER F		Y	
8444-1174-3361	SEAL-ANGLE L		Y	
8444-1174-3363	SEAL-ANGLE L		Y	
8444-1174-3365	SEAL-ANGLE L		Y	
8444-1174-3401	BRACKET ASSY		Y	
8444-1174-3410	MEMBER TOP H		Y	
8444-1174-3502	BRACE CORNER		Y	
8444-1174-3503	BRACE-CORNER		Y	
8444-1174-3511	EJECTOR L/H		Y	
8444-1174-3512	RH EJECTOR		Y	
8444-1174-3531	BRACKET		Y	
8444-1174-3532	BRACKET		Y	
8444-1174-3590	STRIP		Y	
8444-1174-3600	STRIP		Y	
8444-1174-3613	COVER		Y	
8444-1174-3617	BLANKET ASSY		Y	
8444-1174-3620	CONNECTOR AS		Y	
8444-1174-3630	WASHER-CLAMP		Y	
8444-1174-3640	RING-SUPPORT		Y	
8444-1174-3651	RING-SUPPORT		Y	
8444-1174-3652	RING-SUPPORT		Y	
8444-1174-5021	GENERATOR-ST		Y	
8444-1174-5031	HOSE-BLEED		Y	
8444-1174-5041	SEAL LH		Y	
8444-1174-5042	SEAL		Y	
8444-1174-5050	SEAL-P		Y	
8444-1174-5060	SEAL-T		Y	
8444-1174-60117	SEAL LH		Y	
8444-1174-60118	SEAL RH		Y	
8444-1174-60122	SEAL RH		Y	
8444-1174-60123	SEAL LH		Y	
8444-1174-6014	SEAL		Y	
8444-1174-6017	SEAL		Y	
8444-1174-6020	PAD-INTERFAC		Y	
8444-1174-6031	SHIM-LATCH-F		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
8444-1174-6032	SHIM-LATCH-F		Y	
8444-1174-6160	FOIL		Y	
85-02-205-1	BLOWER		Y	
85-02-210-10	HOSE ASSY		Y	
85-02-210-9	HOSE ASSY		Y	
85-02-406-4	BLOWER COVER		Y	
855SI-MB0A	SLOAN		Y	
8800-02	ADC UNIT		Y	
8800-16	WASHER			Y
882800-1001	Solenoid Valve, SAS/Boost Manifold			Y
897776-01	SQUIB		Y	
8ES003417-00	STROBE PWR S		Y	
8GH002-473-08	Bulb			Y
8L51-2F	NYLINER		Y	
90-0163-1	DRIVE ARM		Y	
90-0164-3	BLADE		Y	
9006-409	PACKING			Y
9007-409	PACKING			Y
9008-409	PACKING			Y
9009-409	PACKING, Transducer			Y
9010-409	SEAL, O' RING			Y
9012-409	PACKING			Y
9013-409	SEAL, O' RING			Y
9014-409	SEAL, O' RING			Y
901-480-1-4ASH	BAND CLAMP			Y
901-500-4-4ASH	Clamp			Y
9016-409	PACKING			Y
9019-409	SEAL, O' RING			Y
908TS3	Accelerometer			Y
908TS5	Swashplate Accelerometer			Y
909-39-737-70	PACKING	Y		
91-0048-1	BUSHING		Y	
91035-2	Safety Chamber, Cartridge			Y
9111-409	PACKING			Y
9113-409	PACKING			Y
9116-409	PACKING			Y
9119-409	PACKING			Y
9124-10398	Relay, DTCU			Y
9129-409	SEAL, O'RING			Y
91770A829	SCREW TRUSS		Y	
92000-08202-041	Sponson, Fuel Storage, 380 Gal LH			Y
92000-08202-042	Sponson, Fuel Storage, 380 Gal RH			Y
92070-20024-041	Cover Assy			Y
92070-20024-042	Cover Assy			Y
92070-20028-044	STRUT, FWD			Y
92070-25005-041	HEADREST DEFLECTOR			Y
92080-20235-101	FITTING			Y
92080-20248-115	Bracket			Y
92080-20248-118	Angle			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92080-20249-101	SLEEVE, FWD UPPER			Y
92080-20249-102	SLEEVE, AFT UPPER			Y
92080-20249-103	SLEEVE, FWD LOWER			Y
92080-20258-041	STRUT WELD ASSY			Y
92080-20260-102	Fitting			Y
92080-20260-103	Spacer			Y
92080-20277-101	SIGN BRKT			Y
92080-20303-106	SHEAR ANGLE			Y
92080-20307-041	Switch Assy			Y
92080-20309-106	STRAKE			Y
92080-20354-104	Frame			Y
92080-20354-106	Frame			Y
92080-20910-017	Latch Cowling			Y
92080-20910-018	Latch Cowling			Y
92101-11001-042	Pitch Control Rod, Tail Rotor			Y
92101-11003-102	Barrel			Y
92101-15000-043	Pitch Control Rod, Main Rotor			Y
92101-15004-101	NUT, JAM			Y
92101-15004-102	NUT, JAM			Y
92101-15006-101	KEY, LOCK			Y
92101-15815-101	Bolt, Control Rod, Lower			Y
92101-15815-102	Bolt, Control Rod, Upper			Y
92102-11801-101	Bolt, Self Retaining			Y
92102-11801-102	Bolt, Self Retaining			Y
92102-15001-042	Yoke Assy			Y
92102-15003-102	Bushing			Y
92102-15004-101	Bolt			Y
92102-15004-102	Bolt			Y
92102-15804-106	Bushing			Y
92102-15804-107	Bushing			Y
92103-11001-042	Tail Rotor Hub Assy			Y
92103-11010-101	Balance Weights, TRB			Y
92103-15001-042	Main Rotor Hub Assy			Y
92103-15004-109	Liner			Y
92103-15004-110	Liner, Hub			Y
92103-15005-106	CLIP			Y
92103-15005-113	Clip Guide			Y
92103-15005-115	Clip			Y
92103-15005-116	Clip			Y
92103-15007-044	BONDING JUMPER			Y
92103-15008-044	Blade Attachment Pin			Y
92103-15010-042	Bracket, Damper Attachment			Y
92103-15013-101	Bolt, Inboard Damper Attach			Y
92103-15013-102	Bolt, Outboard Damper Attach			Y
92103-15013-103	BOLT			Y
92103-15020-041	Bracket, Rotating Scissor Attachment			Y
92103-15040-101	Main Rotor Retention Nut			Y
92103-15041-041	Cone Assy Upper/Lockring			Y
92103-15042-041	Thrust Plate Assy			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92103-15045-101	BOLT TENSION, M/R SHAFT NUT			Y
92103-15103-041	Fairing, MRH			Y
92104-11001-041	Pitch Beam			Y
92104-11011-101	NUT, PITCH BEAM RETENTION			Y
92104-11012-101	WASHER, PITCH BEAM RETENTION			Y
92104-11015-102	WASHER, LOCK SCREW P/BEAM NUT			Y
92104-11030-043	Bonding Jumper			Y
92104-11701-101	SCREW, LOCK PITCH BEAM NUT			Y
92104-15000-043	Swashplate Assy			Y
92104-15005-102	Bushing			Y
92104-15007-103	SHIM			Y
92104-15013-041	Retainer			Y
92104-15013-042	Retainer			Y
92104-15015-042	Trunnion, Servo Attachment			Y
92104-15016-101	SWASHPLATE ATTACH. BOLT			Y
92104-15017-101	Nut			Y
92104-15021-041	Upper Link Assy, Rotating Scissors			Y
92104-15025-041	Lower Link Assy, Rotating Scissors			Y
92104-15041-041	Upper Link Assy, Stationary Scissor			Y
92104-15805-103	Bushing			Y
92104-15817-101	BOLT			Y
92104-15830-101	BOLT, STAT SCISSOR TO SWASH			Y
92104-15830-103	BOLT, STAT SCISSOR TO MGB			Y
92104-15830-104	BOLT, STAT SCISSOR TO SWASH			Y
92105-11005-104	SHIM			Y
92105-15002-041	Bracket, Pilot Support			Y
92105-15004-101	WASHER			Y
92105-15007-041	PILOT ASSY			Y
92105-15007-042	Pilot without Bearing			Y
92105-15009-101	WT, BAL 1/2 #			Y
92105-15009-102	WT, BAL 1/4 #			Y
92105-15009-103	WT, BAL 1.5 #			Y
92105-15010-042	ANTI-FLAP CAM			Y
92105-15025-102	STOP, ANTI FLAP			Y
92105-15025-103	STOP, ANTI-FLAP			Y
92105-15052-044	Bracket, Droop Cam Support			Y
92105-15053-101	Bushing			Y
92105-15060-045	CAM ASSY			Y
92105-15061-104	SPRING, BOLT			Y
92105-15065-042	HEATER & PIN, MRH			Y
92105-15066-102	Pin			Y
92106-11005-101	WASHER, C'SUNK BLADE ATT BOLT			Y
92106-11005-102	WASHER, FLAT, BLADE ATT NUT			Y
92106-11005-103	Washer			Y
92106-11006-101	BOLT, T/R BLADE ATTCH OUTBOARD			Y
92106-11006-102	BOLT, T/R BLADE ATTACH INBOARD			Y
92106-11007-102	NUT, T/R BLADE ATTACH			Y
92107-15100-042	Bifilar, Vibration Absorber			Y
92107-15102-103	Bushing, Weight			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92107-15103-043	Weight Assembly, Bifilar			Y
92107-15105-103	BUSHING, ROLLER			Y
92107-15105-104	BUSHING, ROLLER			Y
92107-15105-105	BUSHING,ROLLER			Y
92107-15105-106	BUSHING, ROLLER			Y
92150-09000-042	Main Rotor Blade			Y
92150-09000-101	Tip Cap Assy			Y
92170-11000-045	Tail Rotor Blade			Y
92170-11003-101	BACKPLATE, HORN ATTACH T/R/B			Y
92170-11004-041	BACKING PLATE			Y
92170-11005-101	Abrasion Strip, Polyurethane			Y
92170-11006-101	Balance Weights, TRB			Y
92170-11006-102	Balance Weights, TRB			Y
92170-11009-101	Tip Cap, Tail Blade			Y
92170-11404-101	Boot			Y
92170-11404-103	BOOT TRB			Y
92171-11300-042	Horn Assembly, Tail blade			Y
92200-04678-041	Screen, APU Generator Air Inlet			Y
92201-03121-047	ANTENNA SUPPORT ASSY			Y
92202-05127-101	Aft Float Bottle Inspection Window			Y
92202-06308-103	CLIP			Y
92203-02310-102	DISC			Y
92204-02321-041	HINGE ASSY			Y
92204-02321-044	HINGE ASSY			Y
92204-02410-047	PANEL ASSY			Y
92204-02411-043	PANEL ASSY, MIDDLE			Y
92204-02412-043	PANEL ASSY, AFT			Y
92204-02440-101	COVER			Y
92204-02442-043	COVER ASSY, LH			Y
92204-02442-044	COVER ASSY, RH			Y
92204-02443-043	COVER ASSY, LH			Y
92204-02443-044	COVER ASSY, RH			Y
92204-02450-041	PANEL ASSY, FLOAT BOTTLES			Y
92205-04420-043	Fire Bottle Access Door			Y
92205-04500-045	APU Access Door, R/H			Y
92205-04510-041	Air Conditioning Access Door			Y
92205-04602-041	Oil Cooler Fairing			Y
92205-04901-105	Latch retention			Y
92205-07150-043	Fairing Tip, Horizontal Stabiliz			Y
92205-07514-103	WASHER			Y
92205-07515-041	WASHER ASSY			Y
92205-07801-041	STATIC DISCHARGE			Y
92205-08100-054	FAIRING ASSY			Y
92205-08101-043	FAIRING ASSY			Y
92205-08101-044	FAIRING ASSY			Y
92205-08125-049	BOND ASSY			Y
92206-01801-107	Windshield, LH			Y
92206-01801-108	Windshield, RH			Y
92206-01802-101	Lower Nose Window, LH			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92206-01802-102	Lower Nose Window, RH			Y
92206-01803-042	Jettison Window			Y
92206-01804-101	Upper Observation Window, LH			Y
92206-01804-102	Upper Observation Window, RH			Y
92206-01805-104	Window Seal			Y
92206-01805-106	WINDOW SEAL FILLER			Y
92206-02507-101	WINDOW			Y
92206-02507-104	WINDOW			Y
92206-02507-105	WINDOW			Y
92206-02513-103	Seal			Y
92206-02513-104	Seal			Y
92206-02518-041	WINDOW ASSY			Y
92207-01108-106	Replace Windshield Washer Converter			Y
92207-01216-133	Washer			Y
92207-01806-104	Nose Door Assy (Radome)			Y
92207-01807-103	Windshield Wiper Arm			Y
92207-01807-108	Washer Reservoir			Y
92207-01807-110	Windshield Wiper Flex Drive			Y
92207-01807-111	Windshield Wiper Motor			Y
92207-01807-112	Windshield Wiper Converter			Y
92207-01807-113	Windshield Wiper Blade Assembly			Y
92207-02130-048	COVER ASSY, FADEC			Y
92207-02202-041	FITTING ASSY			Y
92207-02315-046	COVER ASSY,RH			Y
92207-02318-044	COVER ASSY,RH			Y
92207-02318-045	COVER ASSY,LH			Y
92207-02425-103	COVER			Y
92207-02450-042	STRUT, AFT			Y
92207-02454-102	Lever			Y
92207-02520-107	..SEAL			Y
92207-02520-108	SEAL			Y
92207-02525-041	EMER EXIT-ASSY, LH			Y
92207-02525-042	EMER EXIT-ASSY, RH			Y
92207-02614-041	DOOR ASSY			Y
92207-02616-042	DOOR ASSY-LWR DOOR, CABIN			Y
92207-02617-041	BOND ASSY			Y
92207-02618-043	Bond Assy			Y
92207-02632-101	SEAL			Y
92207-02647-101	Bushing			Y
92207-02647-102	BUSHING			Y
92207-02650-101	SEAL			Y
92207-02651-103	SEAL			Y
92207-02653-106	SEAL			Y
92207-02656-045	LATCH PIN ASSY			Y
92207-02657-108	RECEPTACLE			Y
92207-02659-109	RECEPTACLE			Y
92207-02659-111	RECEPTACLE			Y
92207-02659-113	SPACER			Y
92207-02659-115	SPACER			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92207-02660-045	LATCH PIN ASSY			Y
92207-02660-046	LATCH PIN ASSY			Y
92207-03109-041	Fitting, Ramp Actuator LH/RH			Y
92207-03117-041	Latch, Fitting			Y
92207-03120-041	HINGE ASSY			Y
92207-03150-101	Latching Pin (Shoot Bolt)			Y
92207-03211-043	Hinge fitting LH			Y
92207-03211-044	Hinge fitting RH			Y
92207-03918-101	Latch Rod			Y
92207-03919-105	Handle, Upper Door, Ramp			Y
92207-03922-101	Seal, Upper Door, Ramp			Y
92207-04101-041	STUD ASSY.			Y
92207-04101-042	STUD ASSY.			Y
92207-04101-045	STUD ASSY			Y
92207-08202-041	Fuel Cell Access Door			Y
92209-01108-049	FITTING,HINGE,HALF			Y
92209-01108-050	FITTING,HINGE,HALF			Y
92209-02006-101	TIEDOWN RING			Y
92209-02007-041	CABLE ASSY LWR			Y
92209-02007-042	CABLE ASSY UPPER			Y
92209-02164-107	FITTING			Y
92209-02192-104	FITTING			Y
92209-02301-104	FITTING, SEAT			Y
92209-02352-101	FITTING, SEAT			Y
92209-02411-043	FITTING			Y
92209-02418-101	Bushing			Y
92209-02418-102	Bushing			Y
92209-02418-103	BUSHING			Y
92209-02421-045	FITTING			Y
92209-02506-101	SEAT RAIL			Y
92209-02506-102	SEAT RAIL			Y
92209-02507-101	SEAT RAIL			Y
92209-02507-102	SEAT RAIL			Y
92209-02507-103	SEAT RAIL			Y
92209-02507-104	SEAT RAIL			Y
92209-02508-101	SEAT RAIL			Y
92209-02508-102	SEAT RAIL			Y
92209-02515-048	BELLCRANK ASSY			Y
92209-02537-044	BELLCRANK ASSY			Y
92209-02538-042	ROD ASSY			Y
92209-02543-045	SUPPORT FITTING ASSY			Y
92209-02545-105	FITTING, STOPPER			Y
92209-02603-045	HINGE ASSY, FWD			Y
92209-02603-046	HINGE ASSY, AFT			Y
92209-02604-101	Spacer			Y
92209-02604-102	SPACER			Y
92209-02606-045	HINGE ASSY			Y
92209-02606-046	HINGE ASSY			Y
92209-02606-047	HINGE ASSY			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92209-02610-106	SHAFT			Y
92209-02621-102	FITTING			Y
92209-02623-045	ROD ASSY			Y
92209-02623-046	ROD ASSY			Y
92209-02623-047	ROD ASSY			Y
92209-02625-042	FITTING ASSY			Y
92209-02626-042	FITTING ASSY			Y
92209-02628-103	PIN			Y
92209-02630-102	TRIGGER			Y
92209-02635-044	ROD ASSY			Y
92209-02635-045	ROD ASSY			Y
92209-02641-051	CABLE ASSY			Y
92209-02643-103	FITTING			Y
92209-02643-104	FITTING			Y
92209-02644-101	FITTING			Y
92209-02650-043	FITTING ASSY, AFT			Y
92209-02650-044	FITTING ASSY, FWD			Y
92209-02651-045	FITTING ASSY			Y
92209-02651-047	FITTING ASSY			Y
92209-02655-101	FITTING ASSY			Y
92209-02661-103	CAM, LH			Y
92209-02661-104	CAM, RH			Y
92209-02663-045	.ROD ASSY			Y
92209-02668-045	SUPPORT ASSY, LH			Y
92209-02668-046	SUPPORT ASSY, RH			Y
92209-02668-047	SUPPORT ASSY			Y
92209-02682-105	FITTING, LH			Y
92209-02682-106	FITTING, RH			Y
92209-02685-102	HANDLE			Y
92209-02686-041	FITTING ASSY LH			Y
92209-02686-042	FITTING ASSY RH			Y
92209-02686-103	ROLLER			Y
92209-02689-041	FITTING ASSY			Y
92209-02693-041	FITTING ASSY			Y
92209-02822-101	.STRUT			Y
92209-03203-041	Sta 480 Actuator Fit. LH			Y
92209-04203-043	Engagement Pin Assy			Y
92209-04203-045	Pin Assy			Y
92209-04210-043	MAIN BRACKET ASSY			Y
92209-04210-044	MAIN BRACKET ASSY-STA 273			Y
92209-04211-043	BRACKET ASSY-VERTICAL AXI			Y
92209-04211-044	BRACKET ASSY-VERTICAL AXI			Y
92209-04216-041	BRACKET ASSY HORIZONTAL A			Y
92209-04231-103	CLAW BRACKET			Y
92209-04238-101	Pin, Locating			Y
92209-04238-103	PIN			Y
92209-04502-101	Screen, APU Generator Ventilation			Y
92209-06314-042	SUPPORT ASSY			Y
92209-07111-101	FITTING, ROOT FWD			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92209-07113-101	FITTING ROOT AFT			Y
92209-07501-041	STRUT FITTING ADJUSTABLE			Y
92209-07501-043	STRUT FITTING FIXED			Y
92209-07513-101	Washer Lock Special			Y
92214-02501-041	FWD PANEL ASSY			Y
92214-02501-042	MID PANEL ASSY			Y
92214-02501-043	AFT PANEL ASSY			Y
92214-02501-044	EMER COVER ASSY			Y
92214-02501-046	FWD PNL SUB ASSY			Y
92214-02501-049	EMER SUB ASSY			Y
92217-02514-041	UPR TRACK ASSY			Y
92217-02528-101	COVER,NO STEP			Y
92217-02533-041	COVER ASSY			Y
92217-02535-101	COVER			Y
92217-02601-041	DOOR ASSY-SLIDING DOOR, RH			Y
92217-02604-042	MECHANISM ASSY			Y
92219-02291-105	SEAT RAIL			Y
92219-02291-106	SEAT RAIL			Y
92219-02291-107	SEAT RAIL			Y
92219-02511-042	BUMPER ASSY			Y
92219-02511-043	BUMPER			Y
92219-02514-049	FITTING ASSY			Y
92219-02517-103	FITTING			Y
92219-02612-045	ROLLER ASSY			Y
92250-00800-103	MLG/NLG Retract Actuator			Y
92250-00801-102	Wheel Brake Assy			Y
92250-00801-103	WHEEL ASSY			Y
92250-00802-103	Wheel Brake Master Cylinder			Y
92250-00803-101	Parking Brake Valve			Y
92250-00804-041	...BEARING			Y
92250-00805-041	BEARING			Y
92250-00806-101	BRAKE RESERVOIR, Wheel Brakes			Y
92250-01051-067	TUBE ASSY			Y
92250-01053-101	ADAPTER-STOPER			Y
92250-01053-102	STOPPER			Y
92250-01053-103	BUMPER			Y
92250-01054-042	TUBE ASSY. PARKING B			Y
92250-01055-042	HOUSHING ASSY,PARKING Brk			Y
92250-01059-041	Slave Valve			Y
92250-01063-101	BEARING-PARKING BRAKE			Y
92250-01065-101	ADAPTER			Y
92250-01700-101	PARK BRAKE AI			Y
92250-12801-101	AFT FLOAT BAG			Y
92250-12801-107	AFT FLOAT COVER			Y
92250-12803-102	Immersion Switch			Y
92250-12805-105	Electrical Harness, MLG			Y
92250-12805-106	Electrical Harness, MLG			Y
92250-12805-109	MLG SHOCK STRUT			Y
92250-14801-101	FWD FLOAT, LH			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92250-14801-102	FWD FLOAT, RH			Y
92250-14801-103	FWD FLOAT COVERS			Y
92250-14801-104	FWD FLOAT COVERS			Y
92250-14803-103	INFLATOR, AFT			Y
92250-14803-104	INFLATOR, FWD			Y
92250-14805-103	Nose Landing Gear Shock Strut			Y
92250-14805-104	NLG Electrical Harness			Y
92250-14805-105	NLG Electrical Harness, Blowdown			Y
92301-01800-103	Engine Control Quadrant			Y
92301-01801-101	Actuator, Fuel Selector Valve			Y
92302-02164-107	FITTING,LH Aft Deck			Y
92302-02164-108	FITTING,RH Aft Deck			Y
92302-02164-109	FITTING,LH Fwd			Y
92302-02164-110	FITTING,RH Fwd			Y
92302-02165-045	FITTING ASSY,LH Lower Aft			Y
92302-02165-046	FITTING ASSY,RH Lower Aft			Y
92302-02165-047	FITTING ASSY,LH Lower Fwd			Y
92302-02165-048	FITTING ASSY,RH Lower Fwd			Y
92302-02166-041	FITTING ASSY,LH Lower Support			Y
92302-02166-042	.FITTING ASSY,RH Lower Support			Y
92302-02166-043	.FITTING ASSY,LH Fwd Lower Support			Y
92302-02166-044	.FITTING ASSY,RH Fwd Lower Support			Y
92302-02167-043	.FITTING ASSY Upper Link Fwd/Aft			Y
92302-04130-043	Hinge Fitting, Forward LH			Y
92302-04130-044	Hinge Fitting, Forward RH			Y
92302-04131-043	Hinge Fitting, Aft			Y
92302-04134-043	SHIELD COWLING ASSY			Y
92302-04140-043	Latch Fitting 1			Y
92302-04141-043	Latch Fitting 2			Y
92302-04200-045	FAIRING ASSY,AFT LH			Y
92302-04200-046	FAIRING ASSY,AFT RH			Y
92302-04200-047	FAIRING ASSY,FWD LH			Y
92302-04200-048	FAIRING ASSY,FWD RH			Y
92302-04200-049	FAIRING ASSY,FWD LH			Y
92302-04200-050	FAIRING ASSY,FWD RH			Y
92302-04803-101	Latch, Engine Cowl, LH			Y
92302-04803-103	Latch, Engine Cowl, RH			Y
92302-30800-046	AIR INLET ASSY RH			Y
92302-30800-047	AIR INLET ASSY LH			Y
92302-30800-107	ALIGNMENT PIN			Y
92302-30800-108	ECCENTRIC BUSHING			Y
92302-30800-113	Engine Inlet Anti-Ice Controller			Y
92302-30800-118	Air Inlet Crotch Assy			Y
92303-02103-101	Horseshoe Fitting			Y
92303-02305-041	MANIFOLD ASSY			Y
92303-04100-101	GASKET / AP /			Y
92303-04800-042	APU ASSY			Y
92303-04800-110	APU Check Valve			Y
92303-04800-111	Electronic Sequence Unit			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92303-04800-113	AIR INLET DUCT, APU			Y
92303-04800-114	APU EXHAUST DUCT			Y
92303-04801-102	APU Bleed Air Valve			Y
92304-04120-117	ANGLE COVER CURTAINS			Y
92304-04120-118	ANGLE COVER CURTAINS			Y
92304-04208-101	Latch/Hinge Half			Y
92304-04213-103	LATCH			Y
92304-04233-105	Hinge Assy			Y
92304-04233-107	HALF HINGE			Y
92304-04334-041	SUPPORT POST			Y
92304-04335-043	SUPPORT POST			Y
92304-04336-041	SUPPORT POST			Y
92304-04337-041	SUPPORT POST			Y
92304-04338-041	Support PostSTA360RH			Y
92304-04420-043	Curtain Fwd RH			Y
92304-04420-045	Curtain Fwd RH			Y
92304-04422-043	Aft curtain RH			Y
92304-04422-045	AFT CURTAIN			Y
92304-04423-047	CURTAIN FW LH ASSY			Y
92304-04424-045	Middle curtain RH			Y
92304-04425-047	AFT CURTAIN LH			Y
92304-04427-045	Middle curtain LH			Y
92304-04481-041	RETAINER ASSY			Y
92304-04807-047	BLANKET, STRONGBACK INSULAT R/H			Y
92304-04807-051	BLANKET, STRONGBACK INSULAT L/H			Y
92304-04807-053	BLANKET, STRONGBACK INSULAT L/H			Y
92304-04807-057	BLANKET, STRONGBACK INSULAT R/H			Y
92305-02101-101	LINK, ENGINE MOUNT			Y
92305-02105-042	Assembly, Strut			Y
92305-02106-042	Outboard Aft Eng Mount Strut Assy			Y
92305-02119-042	Strut, Engine Mount			Y
92305-02201-044	FITTING ASSY			Y
92305-04801-102	Bolt, Expandable, Engine to aft struts			Y
92305-22112-101	Bushing			Y
92305-22112-102	Bushing			Y
92305-22112-103	Bushing			Y
92306-04101-043	MANIFOLD, WELDMENT ASSY			Y
92306-04102-057	TUBE ASSY			Y
92306-04102-057	WELDMENT ASSY.			Y
92306-04106-046	Tube Assy			Y
92306-04805-104	Flex Coupling			Y
92306-04805-107	Flex Coupling			Y
92306-10101-042	ASSY,BRACKET,MOUNT,RH			Y
92306-10101-043	BRACKET ASSY			Y
92306-10101-108	PLATE,SPACER			Y
92306-10800-101	Starter, Engine			Y
92306-10801-102	Bleed Air Shutoff Valve			Y
92307-02181-403	Hose, Fuel Feed, Engine Upper Deck			Y
92307-08215-101	GASKET			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92307-08801-101	Fuel Cell Vent Valve			Y
92307-08803-103	Refuel Breakaway Valve			Y
92307-08807-103	APU Prime Valve			Y
92307-08813-101	Defuel Air Lockout Valve			Y
92307-08814-103	Engine Prime Pump			Y
92307-08815-101	Fuel Selector Valves, LH			Y
92307-08815-102	Fuel Selector Valves, RH			Y
92307-08816-101	SOLENOID VALVE. APU			Y
92307-08819-101	SHUT OFF VALVE			Y
92307-08821-101	Pressure Refuel Receptacle			Y
92307-08823-103	Engine Feed Breakaway Valve			Y
92307-08823-104	FEED VALVE			Y
92307-08825-101	ISOLATOR			Y
92307-08852-101	Solenoid Valve, Engine Prime			Y
92307-08853-101	Pressure Switch			Y
92308-02105-116	FITTING			Y
92308-02105-117	FITTING			Y
92308-02105-118	FITTING			Y
92308-02106-103	FITTING			Y
92308-02106-104	FITTING			Y
92308-02117-101	RECEPTACLE			Y
92308-02117-103	RECEPTACLE, LH			Y
92308-02117-104	RECEPTACLE, RH			Y
92308-03110-103	IPS DUCT FLNG LH			Y
92308-03110-104	IPS DUCT FLNG RH			Y
92308-04100-041	Exhaust Fairing, LH			Y
92308-04113-103	Screen, APU Inlet			Y
92308-04200-041	Exhaust Duct, LH			Y
92308-04200-042	Exhaust Duct, RH			Y
92308-04202-043	EXHAUST DUCT, LH			Y
92308-04217-043	Exhaust Duct Support (Bipod)			Y
92308-04217-044	Exhaust Duct Support (Bipod)			Y
92308-04802-102	SEALER BI			Y
92308-04802-103	SEAL			Y
92308-04802-104	SEALER			Y
92308-30100-102	IPS Blower Duct			Y
92308-30100-104	IPS Blower Duct			Y
92309-01701-041	Replace Cockpit LH Heat Ducting			Y
92309-01802-041	FAN ASSY			Y
92309-01802-103	Fan, Avionic Cooling, RH/LH Rack			Y
92309-01802-104	CHECK VALVE			Y
92309-01803-103	RH Rack Cooling Fan			Y
92309-01803-104	RH Rack Cooling Fan Detector			Y
92309-01850-104	Ejector Assy			Y
92309-01850-110	Ejector Assy			Y
92309-01850-111	Heat/Vent Ejectors			Y
92309-02000-101	SHIM			Y
92309-02000-102	Remove/Install Cabin Heat Ducting			Y
92309-02003-101	Remove/Install Cabin Heat Ducting			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92309-02101-063	SUPPORT ASSY			Y
92309-02101-065	SUPPORT ASSY			Y
92309-02101-067	SUPPORT ASSY			Y
92309-02101-071	SUPPORT ASSY			Y
92309-02101-089	SUPPORT ASSY			Y
92309-02103-043	TUBE ASSY			Y
92309-02103-044	.TUBE ASSY			Y
92309-02105-049	ANGLE ASSY, LH			Y
92309-02105-050	ANGLE ASSY, RH			Y
92309-02105-051	.ANGLE ASSY, LH			Y
92309-02105-052	.ANGLE ASSY, RH			Y
92309-02105-053	ANGLE ASSY, LH			Y
92309-02105-054	ANGLE ASSY, RH			Y
92309-02105-055	ANGLE ASSY, LH			Y
92309-02105-056	ANGLE ASSY, RH			Y
92309-02800-110	Heat/Vent Ejectors			Y
92309-02800-111	Heat/Vent Ejectors			Y
92309-02800-113	Heat/Vent Ejectors			Y
92309-02800-114	Heat/Vent Ejectors			Y
92309-02800-115	Heat/Vent Ejectors			Y
92309-02824-102	Fresh Air Valve Cabin			Y
92309-04014-045	INTAKE DUCT ASSY			Y
92309-04040-101	Replace Cabin Vent Temp Sensor			Y
92309-04041-042	ENG STRUT SEAL, LHS, inbrd diag Upr			Y
92309-04041-043	ENG STRUT SEAL, LHS, inbrd diag Lwr			Y
92309-04041-044	ENG STRUT SEAL, RHS, inbrd diag Upr			Y
92309-04041-045	ENG STRUT SEAL, RHS, inbrd diag Lwr			Y
92309-04101-101	Remove/Install Cockpit Vent Ducts			Y
92309-04802-102	Heat Modulating/Control Valve			Y
92309-04803-101	Temperature Sensor, Cabin Bleed Air			Y
92309-04804-102	Heat Control Unit			Y
92309-04806-101	Temp Sensor, Cabin Air Discharge			Y
92309-04808-101	Cockpit Vent Fan			Y
92309-04809-101	Cabin Vent Fan			Y
92309-04812-101	Cabin Hose Surface Temp Sensor			Y
92309-04818-104	Remove/Install Cockpit Vent Ducts			Y
92309-04818-105	Remove/Install Cockpit Vent Ducts			Y
92309-04851-101	Air Valve w/ Duct			Y
92309-04851-102	Ckpt Fan w/ Duct			Y
92309-04851-103	Ckpt Evap Hex			Y
92309-04851-104	CBN Evap Inlet Duct Assy			Y
92309-04851-107	DUAL COMP PLLT			Y
92309-04851-108	single Compressor Pllt			Y
92309-04851-112	Digital Temperature Control Unit (DTCU)			Y
92309-04851-113	Filter/Dryer			Y
92309-04851-114	Air Conditioner Fan Relay			Y
92309-04851-115	CKPT, CABIN SurfaceTemp Sensor			Y
92309-04851-116	DTCU			Y
92309-08851-101	Condenser Assy			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92310-04040-043	TUBE ASSY.			Y
92310-04050-048	TUBE ASSY.			Y
92310-04800-042	BOTTLE ASSY			Y
92310-04800-101	Fire Extinguisher Container			Y
92310-04800-106	Cartridge, Fire Bottle			Y
92310-04802-104	Flame Detector			Y
92312-02006-041	Tube Assy			Y
92312-02006-042	Tube Assy			Y
92351-15000-042	MAIN GEAR BOX			Y
92351-15001-042	Input Module Gearbox			Y
92351-15042-041	Quill Shaft Assy			Y
92351-15049-101	Transfer Tube			Y
92351-15055-101	PLUG			Y
92351-15080-042	Accessory Gearbox			Y
92351-15100-043	Main Gearbox Module			Y
92351-15113-101	Bushing			Y
92351-15143-102	BSHG, CHIP DET			Y
92351-15159-041	Flange, Tail Take-off, MGB			Y
92351-15202-042	Standpipe, MGB			Y
92351-15278-101	Shield, Rotor brake Spark			Y
92351-15284-101	ADAPTER,SPLINE			Y
92351-15302-041	Support Bracket			Y
92351-15503-101	SHIM			Y
92351-15800-101	Lube Scavange Pump			Y
92351-15801-103	Rotor Brake Disk			Y
92351-15801-105	Rotor Brake Caliper			Y
92351-15802-101	Lube Filter Assembly			Y
92351-15803-102	Oil Dipstick Assembly			Y
92351-15806-101	Diaphragm Coupling			Y
92351-15808-101	Switch, MGB High Temp			Y
92351-15809-102	Valve, Bypass, Main Gearbox			Y
92351-15850-101	Chip Detector/Temp Sensor, Main Module			Y
92351-15851-103	CHIP DETECTOR			Y
92357-06116-041	Intermediate Gearbox Input/Output Flange			Y
92357-06116-101	Flange, Bearing Support Assembly			Y
92357-06300-042	Intermediate Gearbox			Y
92358-06100-043	Tail Rotor Gearbox			Y
92358-06303-041	Pitch Change Shaft			Y
92358-06323-101	WASHER THRUST, HUB RETN. T/R			Y
92358-06324-101	NUT, HUB RETENTION TAIL ROTOR			Y
92358-06327-101	HOUSING, SEAL T/R P/C SHAFT			Y
92358-06343-101	SPLITCONE, INNER			Y
92358-06343-103	SPLITCONE, OUTER T/R HUB			Y
92358-06701-101	BOLT, TENSION, HUB NUT TAIL ROTOR			Y
92358-06801-102	Chip Detector, Accessory Gearbox			Y
92358-06802-101	IGB/TGB Oil Level Sensor			Y
92361-03020-041	Set Screw			Y
92361-03020-042	Set Screw			Y
92361-03030-041	TUBE AY, INLET, OIL COOLR			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92361-03801-102	Number #1 Drive Shaft			Y
92361-03804-101	MGB HEAT EXCHANG.			Y
92361-03804-105	Oil Cooler Duct			Y
92361-03806-102	Oil Hose Check Valve			Y
92361-05060-043	Bearing Support, Tail Drive Shaft			Y
92361-05060-044	BEARING SPT ASSY			Y
92361-05801-112	Number #2 Drive Shaft			Y
92361-05801-113	Number #3 and #4 Drive Shaft			Y
92361-05801-114	Number #5 Drive Shaft (TRP)			Y
92361-05801-115	Tail Drive Shaft Damper, Forward			Y
92361-05801-116	Snubber, Tail Drive Shaft			Y
92361-05811-101	Diaphragm Flex Coupling			Y
92361-05813-103	BEARING SUPPORT			Y
92400-00511-048	Yaw Control Cables, TRP			Y
92400-00511-049	Yaw Control Cables, TRP			Y
92400-00511-050	Yaw Control Cables, TRP			Y
92400-00511-051	Yaw Control Cables, TRP			Y
92400-00511-052	Yaw Control Cables, Tail Pylon			Y
92400-00800-101	Pushrod Fixed Q-Shaft to Trim Servo Yaw			Y
92400-00800-102	Pushrod Fixed, YAW			Y
92400-00800-103	Pushrod Fixed Collective RH Ckpt			Y
92400-00800-104	Pushrod Fixed Collective LH Ckpt			Y
92400-00800-106	Pushrod fixed roll			Y
92400-00800-107	Pushrod fixed pitch			Y
92400-00800-109	Pushrod Fixed, YAW			Y
92400-00800-110	Pushrod fixed roll			Y
92400-00800-111	Pushrod fixed pitch			Y
92400-00800-112	Pushrod, Trim Collective			Y
92400-00800-113	Pushrod, Trim Servo Pitch			Y
92400-00800-114	Pushrod, Trim Servo Roll			Y
92400-00800-115	Pushrod Fixed, YAW			Y
92400-00800-116	Pushrod Fixed Collective LH			Y
92400-00800-117	Pushrod fixed pitch			Y
92400-00800-118	Pushrod, Torque			Y
92400-00801-101	Pushrod Adjustable, YAW			Y
92400-00801-102	Pushrod Assy Pitch			Y
92400-00801-103	Pushrod Assy Roll			Y
92400-00801-104	Pushrod Adjustable Collective LH Ckpt			Y
92400-00801-105	Pushrod Adjustable Collective O/H LH			Y
92400-00801-106	Pushrod Adjustable Collective O/H LH			Y
92400-00801-107	Pushrod adjustable pitch			Y
92400-00801-108	Pushrod adjustable			Y
92400-00801-111	Pushrod Adjustable, YAW			Y
92400-00801-112	Pushrod Adjustable, YAW			Y
92400-00801-114	Pushrod Adjustable, YAW			Y
92400-00801-116	Pushrod Assy Adjustable			Y
92400-00801-117	Pushrod Assy Adjustable			Y
92400-00801-118	Pushrod Adjustable, YAW			Y
92400-00802-101	Pulley			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92400-01170-101	Replace Trim Servo RVDT			Y
92400-01200-041	Protective Boots, Cyclic			Y
92400-01210-041	Cockpit Roll Bellcranks			Y
92400-01213-043	Cyclic Support fitting ckpt roll			Y
92400-01213-044	Support Assy			Y
92400-01214-041	Longitudinal Lever			Y
92400-01222-042	Socket Assy, PLT/CPTL Cyclic Stick			Y
92400-01222-043	Cyclic Stick, Pilot/Co-pilot			Y
92400-01224-042	Protective Boots, Cyclic			Y
92400-01401-041	Collective Stick Assy			Y
92400-01401-043	Socket Assy Collective			Y
92400-01401-045	Upper Stick Assy Collective			Y
92400-01403-042	Plt Collective Stick Support Assy			Y
92400-01415-042	Bellcrank Assy Collective LH			Y
92400-01416-042	Support Collective LH			Y
92400-01502-043	Boxbeam Assy, L/H			Y
92400-01503-041	Collective Bellcranks			Y
92400-01505-041	Cyclic Bellcranks Roll, box beam			Y
92400-01506-041	Yaw Bellcranks			Y
92400-01508-042	Support Assy Pitch & Roll			Y
92400-01510-042	Support Collective RH			Y
92400-01511-041	Support Fitting Assy,Yaw LH			Y
92400-01513-041	Cyclic Bellcranks Pitch			Y
92400-01515-042	Cyclic bellcrank roll			Y
92400-01517-041	Bellcrank Assy Collective RH			Y
92400-01602-047	PEDAL ASSY LH			Y
92400-01602-048	PEDAL ASSY RH			Y
92400-01606-042	Bellcrank Assy, Brake Support LH			Y
92400-01612-044	Bearing Support Assy			Y
92400-01613-045	Pedal Adjuster LH			Y
92400-01613-046	Pedal Adjuster RH			Y
92400-01614-043	Yaw Levers			Y
92400-01810-102	Grip Assy, PLT /CPLTCyclic Stick, Cargo			Y
92400-01810-106	Grip Assy, PLT /CPLTCyclic Stick			Y
92400-01810-107	Grip Assy, PLT /CPLTCyclic Stick, Res. H			Y
92400-01810-108	Grip Assy, PLT /CPLTCyclic Stick			Y
92400-01820-103	Grip Assy, Collective, Pilot/Co-pilot			Y
92400-01831-101	Damper Assembly, Viscous			Y
92400-01840-104	ROTOR BRAKE MASTER CYL.			Y
92400-02136-101	Fork End Adjuster Collective Bal			Y
92400-02204-041	Support & Beam Assy			Y
92400-02207-041	Support & Crank Assy			Y
92400-02210-041	Support & Beam Assy			Y
92400-02212-041	BEAM ASSY L/H			Y
92400-02213-041	Support & Crank Assy			Y
92400-02405-045	SUPPORT ASSY,RH			Y
92400-02405-046	SUPPORT ASSY,LH			Y
92400-02800-104	Mechanical Unit, Active Vibration Contro			Y
92400-02800-105	Electronic Unit, Active Vibration Contro			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92400-04111-101	Shim			Y
92400-04111-102	Shim			Y
92400-04400-047	Mixer Assy			Y
92400-04800-103	Pushrod, Mixer			Y
92400-04800-106	Pushrod, Mixer			Y
92400-04800-109	Pushrod, Mixer			Y
92400-04800-110	Pushrod, Mixer			Y
92400-04801-104	Pushrod, RH Prim			Y
92400-04801-107	Pushrod adjustable roll			Y
92400-04801-108	PUSHROD Boost Input Yaw			Y
92400-04801-109	Pushrod adjustable pitch			Y
92400-04801-110	Pushrod adjustable			Y
92400-04801-111	Pushrod, FWD MR Servo			Y
92400-04801-112	Pushrod, RH MR Servo			Y
92400-04801-113	Pushrod, FWD Prim			Y
92400-04802-101	Pushrod, LH Prim			Y
92400-04802-104	Pushrod, LH Prim			Y
92400-04802-105	PUSHROD, UPR DECK/QUD			Y
92400-04802-106	Pushrod, RH Prim			Y
92400-04802-108	Pushrod Collective Boost output			Y
92400-04802-109	Pushrod Yaw Boost Output			Y
92400-04802-110	Pushrod, Mixer, Yaw to Collective			Y
92400-04803-101	Pushrod, Mixer, Yaw to Pitch			Y
92400-04803-102	Pushrod Assy Boost output Pitch			Y
92400-04803-103	Pushrod Assy Boost output Roll			Y
92400-04803-104	Pushrod, Mixer, Pitch to Roll			Y
92400-04803-105	Pushrod, Mixer, Roll to Pitch			Y
92400-04803-106	Pushrod, Mixer, Limiter			Y
92400-04803-107	Pushrod, Mixer, Limiter			Y
92400-04803-108	Pushrod, Mixer, Yaw to Pitch			Y
92400-04803-109	Pushrod, Mixer, Yaw to Pitch			Y
92400-04803-110	Pushrod, Mixer, Yaw to Pitch			Y
92400-04821-101	Trim Servo RVDT Sensors			Y
92400-06142-041	CRANK ASSY, AFT QUADRANT			Y
92400-06143-041	Link Assembly, Tail Quadrant			Y
92400-06144-041	Bracket, Spring Capsule Attachment			Y
92400-15801-102	Bolt			Y
92400-15801-103	BOLT			Y
92410-01807-102	Cable Assy Pedal Adjust			Y
92410-04800-108	Servo Assy Boost/SAS Yaw Collective			Y
92410-04830-105	Trim Servo, Collective			Y
92410-04830-106	Trim Servo, Roll			Y
92410-04830-107	Trim Servo, Yaw			Y
92410-04830-109	Trim Servo, Pitch			Y
92450-01018-115	STOP LH SIDE CHART			Y
92450-01019-041	UCDC 11 LH ASSY			Y
92450-01019-042	UCDC 11 RH ASSY			Y
92450-01053-101	R/I Fire Detection Panel			Y
92450-01087-042	Replace Air Data 500 Ohm Probe			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92450-01801-103	Pitot Static Probes			Y
92450-01801-104	Pitot Static Probes			Y
92450-01801-105	Pitot Static Probes, 3rd.			Y
92450-15801-101	MGB Oil Pressure Sensor			Y
92500-01210-101	Repair RH Rack			Y
92500-02101-042	PAN ASSY			Y
92500-02106-041	BARRIER ASSY,LH			Y
92500-02106-042	BARRIER ASSY,RH			Y
92500-02107-108	COVER			Y
92500-02107-111	.BARRIER			Y
92500-02107-113	BARRIER			Y
92500-02107-115	BARRIER			Y
92500-02108-041	.BARRIER ASSY			Y
92500-02108-107	COVER			Y
92500-02108-110	.BARRIER			Y
92500-02109-041	.BARRIER ASSY, LH			Y
92500-02109-042	.BARRIER ASSY, RH			Y
92500-02109-107	.COVER, LH			Y
92500-02109-108	.COVER, RH			Y
92500-02110-105	BARRIER,LH			Y
92500-02110-106	BARRIER,RH			Y
92500-02113-107	SEAL			Y
92500-02117-043	.BARRIER ASSY,LH			Y
92500-02117-044	.BARRIER ASSY,RH			Y
92500-02150-101	HOSE, DRAIN MGB			Y
92500-02150-102	HOSE			Y
92500-02210-045	LATCH, UPPER COVER			Y
92500-02259-101	Bolt Handle			Y
92500-02367-103	Diffuser spring			Y
92500-02818-043	CARGO NET			Y
92500-02830-103	Cabin Speaker Assy			Y
92500-02831-101	First Aid Kit			Y
92500-02900-103	CENTER CEILING			Y
92500-03414-101	HANDLE			Y
92550-01022-042	AC/DC RECPT.& DOOR LIMIT			Y
92550-01038-106	Vent Tube, Battery			Y
92550-01038-107	Vent Tube, Battery			Y
92550-01087-101	Remove/Install Cockpit Utility Light			Y
92550-01113-101	Replace Thermometer			Y
92550-01113-102	Replace Thermometer			Y
92550-01116-103	Remove/Install Overhead Switch Panel			Y
92550-01205-044	Support Assembly			Y
92550-01205-045	Support Assembly			Y
92550-01304-042	Standoff Assembly			Y
92550-01307-045	Lighting Balance Box Assy			Y
92550-01315-041	Thunderstorm Liight			Y
92550-01323-042	Interior Lighting Panel			Y
92550-01323-101	Post			Y
92550-01326-042	Exterior Lighting Panel			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92550-01329-042	Flotation Control Panel			Y
92550-01329-043	Aux. Flotation Control Panel			Y
92550-01332-043	Anti-Ice Control Panel			Y
92550-01335-043	Enviromental Control Panel			Y
92550-01335-044	Enviromental Control Panel			Y
92550-01341-101	Bus Bar			Y
92550-01341-103	Bus Bar			Y
92550-01341-104	Bus Bar			Y
92550-01341-118	Bus Bar			Y
92550-01344-043	Reversionary Control Panel, APU			Y
92550-01347-043	OEI Switch Panel			Y
92550-01347-044	U/A MISC SW PNL			Y
92550-01350-042	Emergency Lights Switch Panel			Y
92550-01804-102	Master Warning Panel			Y
92550-01806-102	Battery, Aircraft, 15 Amp Hour			Y
92550-01806-103	Battery, Aircraft, 24 Amp Hour			Y
92550-01807-101	Converter, DC, 400 Amp			Y
92550-01807-102	Converter, Backup, 125 Amp			Y
92550-01811-104	Anti-Ice Control Panel Info Plate			Y
92550-01812-101	Enviromental Control Panel Info Plate			Y
92550-01812-102	Enviromental Control Panel Info Plate			Y
92550-01813-106	APU Switch Panel Info Plate			Y
92550-01813-107	Hydraulic Test Info Plate			Y
92550-01817-101	Controllable Searchlight			Y
92550-01818-101	Fixed Landing Lights Lamp			Y
92550-01821-102	Flotation Switch Panel Info Panel			Y
92550-01827-102	Power Distribution Unit, DC			Y
92550-01827-104	Power Distribution Unit, Battery			Y
92550-01828-102	Fire Switch Panel			Y
92550-01829-101	VCAS Mechanical Unit Molded Cable			Y
92550-01829-102	VCAS Mechanical Unit Molded Cable			Y
92550-01833-102	Cockpit Lights Panel Info Plate			Y
92550-01835-102	AIR COND. PANEL			Y
92550-01901-101	Power Supply, Cabin Emergency Lights			Y
92550-01901-102	Battery Pack			Y
92550-01901-103	Charger			Y
92550-02017-048	Position Lights, RH Side			Y
92550-02017-049	Position Lights, LH Side			Y
92550-02017-050	LT ASSY RH SPON			Y
92550-02301-044	#1 Relay Panel Assembly			Y
92550-02302-044	#2 Relay Panel Assembly			Y
92550-02305-044	#3 Relay Panel Assembly			Y
92550-02317-042	Miscellaneous Contactor Pallet			Y
92550-02323-044	#4 Relay Panel Assy			Y
92550-02363-044	Mounting Tray, MDC			Y
92550-02806-103	Generator Control Unit, AC			Y
92550-02806-106	APU GCU			Y
92550-02806-107	Generator Control Unit, APU			Y
92550-02810-101	Power Harness, Cargo Hook			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92550-02812-101	Molded Cable, Condensor Fan			Y
92550-02813-102	RIPS CONTROLLER			Y
92550-02813-104	RIPS CONTROLLER			Y
92550-02814-103	#1 AC Power Distribution Unit			Y
92550-02814-104	#2 AC Power Distribution Unit			Y
92550-02814-106	#2 AC Power Distribution Unit			Y
92550-02815-101	RIPS JUNCTION BOX			Y
92550-03801-101	Ramp Control Panel			Y
92550-03810-101	Cargo Loading Light			Y
92550-03820-101	Baggage Compartment Light			Y
92550-03830-101	EMERG. FLOOD LIGHT			Y
92550-03835-101	Smoke Detector			Y
92550-04801-101	Main Rotor SLIP RING			Y
92550-04803-101	APU GENERATOR			Y
92550-04803-102	Q.A.D.			Y
92550-04803-104	DUCT,CORRUGATED,STRA			Y
92550-04805-102	DISTRIBUTOR, Main Rotor			Y
92550-04806-101	AC Generators			Y
92550-04806-102	AC GENERATOR			Y
92550-06005-041	BRACKET ASSEMBLY, SPEED SENSOR			Y
92550-06006-041	T/R Sensor Assy			Y
92550-06801-103	Anti-collision Light			Y
92550-06802-103	Molded Cable with Switch			Y
92550-08805-101	Molded Cable, Immersion Switch			Y
92550-08805-102	Molded Cable, Immersion Switch			Y
92550-08808-105	PROBE, FUEL QTY.			Y
92550-08810-101	FUEL CONDITIONING UNIT			Y
92550-11801-102	H/A TR DE-ICE			Y
92550-11801-103	T/R BLADE CABLE ASSY.			Y
92550-11802-108	ROTOR RING			Y
92550-11802-109	ROTOR, T/R Slip ring			Y
92550-11802-112	Brush Block Assembly			Y
92550-15801-101	H/A MR DE-ICE			Y
92550-15801-102	MRP RIPS CBL			Y
92551-00210-041	DOOR SW ASSY , Clam shell			Y
92552-02215-041	Harness, Life Raft, LH			Y
92552-02215-042	Harness, Life Raft, RH			Y
92552-04104-041	Harness w/Switch, Caliper Position, RH			Y
92552-04104-042	Harness w/Switch, Caliper Position, RH			Y
92552-04105-041	Harness w/Switch, Caliper Position, LH			Y
92552-04105-042	Harness w/Switch, Caliper Position, LH			Y
92552-04112-041	AFT RH FD HA			Y
92552-04118-043	RIPS LH INLET			Y
92552-04118-044	RIPS RH INLET			Y
92552-15101-043	Harness Assembly, MGB			Y
92600-01017-102	Spacer			Y
92600-01305-041	DCU Strapping Module			Y
92600-01801-106	DISPLAY CONTROLLER			Y
92600-01807-107	AVC COMPUTER			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92600-01808-102	Data Transfer Unit, HUMS			Y
92600-01810-104	HUMS MAIN PROCESSOR			Y
92600-01811-101	WX WAVEGUIDE			Y
92600-01812-102	Bearing Monitor Panel			Y
92600-01812-103	BEARING MONITOR PANEL			Y
92600-01815-101	DCU JUNCTION BOX			Y
92600-01816-103	Accelerometer, Engine, HUMS			Y
92600-01816-104	Accelerometer, Engine, HUMS			Y
92600-01817-103	Converter, Remote Charge			Y
92600-01817-104	Converter, Remote Charge			Y
92600-01818-107	Cable, Engine Vibration			Y
92600-01818-108	Cable, Engine Vibration			Y
92600-01818-109	Cable, Engine Vibration			Y
92600-01818-110	Cable, Engine Vibration			Y
92600-01818-111	Cable, Engine Vibration			Y
92600-01818-112	Cable, Engine Vibration			Y
92600-02801-101	Chip Detector Processor			Y
92602-01400-043	HARNESS ASSY			Y
92602-02109-043	Wire Harness, Fuel Quantity			Y
92602-02161-041	LIGHTNING SENSOR			Y
92602-15100-042	Harness, HUMS Accelerometer			Y
92650-00810-102	UNION			Y
92650-00810-104	FITTING, UNION			Y
92650-00811-101	ELBOW, 90 DEG			Y
92650-00811-102	ELBOW			Y
92650-00811-104	Fitting, 90 Degree Swage			Y
92650-00812-104	FITTING ADAPTER			Y
92650-00840-101	Switch, Pressure, System #1/#2, Xfer Mod			Y
92650-00840-102	Switch, Pressure, SAS/Boost Manifold			Y
92650-00840-103	Switch, Pressure, MR Servo, Xfer Mod			Y
92650-00840-104	Accumulator Pressure Switch			Y
92650-02800-104	APU Accumulator			Y
92650-02801-101	APU Hand Pump			Y
92650-02801-102	HANDLE, HAND PUMP			Y
92650-02802-102	APU Hydraulic Starter Motor			Y
92650-03810-103	Hydraulic Ramp Actuator			Y
92650-03811-101	Hyd Ramp Control Valve			Y
92650-03832-101	Hydraulic Pressure Hose			Y
92650-03833-101	Hydraulic Return Hose			Y
92650-04103-147	HYDRAULIC LINE			Y
92650-04103-149	Hydraulic Tube, Check-Out Pump			Y
92650-04103-150	HYDRAUL. LINE			Y
92650-04801-102	Transfer Module, Hydraulic System #1/#2			Y
92650-04820-103	Shutoff Valve, Back-up			Y
92650-04830-105	Supply Module, Hydraulic, Utility			Y
92650-04860-103	HYDRAULIC FILL VALVE/PUMP			Y
92650-04870-101	TRANSDUCER, PRESSURE			Y
92650-04900-101	Heat Exchanger Assy, #1/#2 Hydraulic Sys			Y
92650-06010-041	Manifold, Hydraulic Lines			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92650-15811-101	Pump, Hydraulic, System #1/#2			Y
92650-15820-101	Pump, Hydraulic, System #3			Y
92650-15836-101	AC Motor/Pump, Ground Check-Out			Y
92700-10050-041	LOCK ASSY			Y
92700-10051-041	Sling, Universal Lifting			Y
92700-10300-041	Seal Installer, Tail-Takeoff Seal			Y
92700-10301-041	Pitch Beam Puller			Y
92700-10302-041	Lifting Eye, Main Module			Y
92700-10303-041	Wrench, Flange Attach Nut			Y
92700-10304-041	SEAL INSTALLER INBD			Y
92700-10304-042	Seal Installer, Tail Gearbox Output Seal			Y
92700-10305-041	Seal Installer, IGB Input/Output and TG			Y
92700-10307-041	Wrench, Pitch Beam Nut			Y
92700-10308-041	Seal Installer, Input Module Input Seal			Y
92700-10309-041	Wrench, Tail Blade Nut			Y
92700-10309-042	WRENCH TAIL BLADE(DE ICE)			Y
92700-10310-041	Flange Puller			Y
92700-10311-041	Bearing Installer/Remover			Y
92700-10313-041	Trim Tab Adjustment Set, MRB			Y
92700-10314-101	Torque Reactor			Y
92700-10316-041	Holding Clamp, Spring Capsules			Y
92700-10317-041	Bushing Remover/Installer, Bifilar			Y
92700-10320-041	Puller, Servo Bracket			Y
92700-10321-041	Lifting Clamp, Main Rotor Blade			Y
92700-10322-041	Landing gear pin extractor			Y
92700-10325-041	Main Rotor Head Removal Tool			Y
92700-10328-041	ASSEMBLY			Y
92700-10329-041	Tail Rotor Hub Remover			Y
92700-10330-101	Seal Remover/Installer			Y
92700-10331-101	Main Rotor Shaft Thread Protector			Y
92700-10332-041	Seal Installer/Torque Reactor			Y
92700-10333-041	Puller, Engine Shaft			Y
92700-10334-042	Lifting Bar, Engine QCA			Y
92700-10335-101	Bracket, Photocell Mount			Y
92700-10338-041	Alignment Tool, Lower Rod End, PCR			Y
92700-10339-041	Holding Fixture, Swashplate Trunion			Y
92700-10340-101	Wrench, Droop Stop Ring Nut			Y
92700-10342-041	Installation/Removal Tool, Sump Drain Va			Y
92700-10343-101	PSU Access Tool			Y
92700-10344-041	Bleed Hose, MRH Damper			Y
92700-10345-041	WINDOW SEAL INSTALL.			Y
92700-10349-041	Seal Puller			Y
92700-10356-041	PITCH SHAFT ALIGNMENT			Y
92700-10400-041	Flight Control Rigging Kit,Mechanical			Y
92700-10500-041	Electrical Harness, Photo Cell			Y
92700-10501-041	Harness, Laptop Interface Diagnostics			Y
92700-10750-101	Torque Adapter			Y
92700-10750-102	Wrench for Input Mod Gimble attach nuts			Y
92700-10750-103	Wrench, Z-Bar, MGB Installation			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
92700-10752-101	Interior Panel Removal Tool			Y
92850-02202-104	Washer , Rescue Hoist			Y
92850-02804-102	Electrical Controller, Rescue Hoist			Y
92850-02805-101	Rescue Hoist			Y
92850-02805-104	Operators Panel			Y
92850-02805-105	Rescue Hoist Pendant			Y
92850-02805-106	Rescue Hoist			Y
92850-08801-111	N/S RAFT,ENH PLB			Y
92850-08801-112	N/S RAFT,ENH PLB			Y
92850-08801-113	FAR 135 RAFT,ENH PLB			Y
92850-08801-114	FAR 135 RAFT,ENH PLB			Y
92850-08801-115	CANADIAN RAFT			Y
92850-08801-116	CANADIAN RAFT			Y
92859-02202-042	FITTING ASSY			Y
92900-01801-106	ROLL RATE SENSOR			Y
92900-01802-107	AFCS Computer			Y
92900-01802-109	AFCS COMPUTER			Y
92900-01812-102	Computer Mount, AVC Computer			Y
92902-01810-103	Control Panel, AFCS			Y
92902-01812-103	Mode Select Panel, Flight Director			Y
92902-01812-104	FLIGHT DIRECTOR			Y
92CEO37246-042	CKPIT SIDE JETTISON WINDOW			Y
93273-4-8	SCREW, PAN HEAD		Y	
94327-1	DC External Power Monitor Panel			Y
94896-1	MOD KIT		Y	
95-40-17	BASE		Y	
95-42-11	SWITCH,PUSH-PULL		Y	
95-42-14	SWITCH BODY		Y	
95-6A11	SWITCH		Y	
95-6A14	SWITCH BODY		Y	
95-6C11	SWITCH BODY		Y	
95XX11H161248	CAPSULE		Y	
95XX14H159340	CAPSULE		Y	
95XX17B161497	LENS CAPSULE		Y	
95XX17D154798	CAPSULE		Y	
95XX17E161377	CAPSULE		Y	
95XX17H654095	CAPSULE		Y	
96307-03510-041	TUBE ASSY			Y
965-1595-022	TCAS Processor			Y
968214-18	Turbine Plenum Drain Valve			Y
973-261-10	Mount Adapter, Throttle Quadrant Switch			Y
9-794-19-025-3	O RING		Y	
9905-409	PACKING			Y
990-6000-000	PASS BRIEF SYS			Y
9906-409	PACKING			Y
9908-409	PACKING			Y
9910-409	SEAL, O' RING			Y
99-122	High Press Servicing Valve			Y
99-223	SWITCH		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
99-22P	SWITCHBD		Y	
996-261-14	Mount Adapter Push Button Switch			Y
9962B	Barometric Altimeter Clamp			Y
99E10-01	RECEPTACLE, Quarter Turn			Y
99T26720-20B24	HOSE ASSY			Y
99XXX1B1-16741	CAPSULE		Y	
99XXX1B1-16742	SWITCH		Y	
99XXX1B1-16743	SWITCH		Y	
9EL407695-00	LENS			Y
A01404-205	SCREW		Y	
A021-2-1	VENT ASSY		Y	
A021-2-2-2	HEATSHKD		Y	
A1077BB	Relay			Y
A1269	Piston Insertion Tool			Y
A13018-10	Impact Switch Assy			Y
A13018-5	Inertia Switch			Y
A13207AL	NUT,AL			Y
A13210AL	NUT			Y
A13212AL	NUT			Y
A16075-56	WASHER	Y		
A16075P56	WASHER	Y		
A166	VENT PLUG		Y	
A1D	TEMP IND 5V		Y	
A2082	Spanner Socket			Y
A2158	Spanner Wrench			Y
A24524	FILTER		Y	
A24559	FLEX HOSE AS		Y	
A2926-1	STRUT ASSY.		Y	
A29C43	Clamp			Y
A32007	RING,SPLIT			Y
A32010	RING, SPLIT			Y
A32012	RING,SPLIT			Y
A3-206-05	Vibration Switch			Y
A35557	GREASE SEAL			Y
A35559	RETAINER RING, Bearing			Y
A35560	GREASE RETAINER			Y
A35577	Tube, Torque			Y
A35579	Stator, Lateral			Y
A35580	Wheel Brake Pads (Rotors)			Y
A35581	Piston			Y
A35584	Bolt			Y
A35586	Scraper, Piston Seal			Y
A35609	Stator, Lateral			Y
A35626	Valve, Seat			Y
A35628	DRIVE BLOCK, Wheel Brake Interface			Y
A35629	PIN, Drive Block Retention			Y
A39930-2	CYLINDER AY		Y	
A413AHDACF14-28	POWER SUPPLY		Y	
A470D-R	STROBE LIGHT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
A500A-V-D28	LIGHT HEAD A		Y	
A506	FL TUBE		Y	
A508-28	LAMP		Y	
A650PG-D28	LIGHT ASSY		Y	
A650PR-D28	LIGHT ASSY		Y	
A71126-1	SEAL KIT		Y	
A9490W1	Glaresshield Light			Y
AA34-300	INTERFACE PA		Y	
AA9718E25KF1	KIT,FILTER			Y
ABU5A	CLOCK		Y	
AC131-1	A.S.I.		Y	
AC1979E8	FILTER	Y		
AC334J0147-090	Hose, Subcooler			Y
AC334K0262-090	Hose, Subcooler			Y
AC9985F30Y2	FILTR-ELEM			Y
ACA902F815	FILTER		Y	
ACA952F122Y2	ELEMENT	Y	Y	
ADSB126-4002	UNIBALL SHIM		Y	
ADTS405F	Air Data Test Set			Y
AE1010329M0214	Hose, Fuel Crossover, Cabin			Y
AE1010566K0171	HOSE ASSY		Y	
AE2460000G0102	Hose, Fuel Feed, Cabin Sidewall			Y
AE2460000G0143	Hose, Fuel Feed, APU Upper Deck			Y
AE2460000G0194	Hose, Fuel Feed, Cabin Sidewall			Y
AE2460000K0172	Hose Assy Fuel			Y
AE2460000K0185	Hose Assy Fuel			Y
AE2460100G0062	Hose, Fuel Feed, Cabin Sidewall			Y
AE2460100G0342	Hose, Fuel Feed, Cabin Sidewall			Y
AE2460200G0067	Hose, Fuel Feed, Cabin Sidewall			Y
AE2460200G0136	Hose, Fuel Feed, Cabin Sidewall			Y
AE2460200G0242	Hose, Fuel Feed, Engine Upper Deck			Y
AE2463530K0251	Hose, Fuel Feed, Engine Upper Deck			Y
AE2463530K0357	Hose, Fuel Feed, Engine Upper Deck			Y
AE2463929G0074	HOSE ASSY		Y	
AE3660001J0204	HOSE		Y	
AE3660121K0232	HOSE		Y	
AE3663161E0240	HOSE ASSY		Y	
AE3663162E0100	HOSE ASSY		Y	
AE3663162J0231	HOSE ASSY		Y	
AE3663163E0225	FUEL DUMP LH		Y	
AE3663163E0311	HOSE		Y	
AE3663163K0224	HOSE ASSY		Y	
AE3663234E0147	HYD Lines & Hoses LG Extension/Retract,			Y
AE3663833K0290	HOSE ASSY		Y	
AE4000G0152-270	Hose, Fuel Feed, APU Upper Deck			Y
AE4036G0086-180	Hose, Fuel Feed, Engine Upper Deck			Y
AE4072G0075-010	Hose, Fuel Feed, Engine Upper Deck			Y
AE4870H0200-125	HOSE ASSY		Y	
AE71274J	Fitting, Quick Disconnect, Return			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
AE71275H	Fitting, Quick Disconnect, Pressure			Y
AE71293H	QD Pump Modules 1&2 Pressure			Y
AE717765-1	Hose, Fuel Crossover, Cabin			Y
AE717766-401	Hose, Fuel Feed, Cabin Sidewall			Y
AE717766-402	Hose, Fuel Feed, Cabin Sidewall			Y
AE717769-1	Hose, Fuel Feed, Engine Upper Deck			Y
AE717770-1	Hose, Fuel Feed, Engine Upper Deck			Y
AE98921G	SWIVEL		Y	
AE99145E	QD Pump Modules 1&2 Case Drain			Y
AE99145J	QD Pump Modules 1&2 Return			Y
AG358000-02	ANT,GSKT-ELT			Y
AG477000-01	ANT,GSKT-GPS			Y
AG477000-14	ANT,GSKT-GPS			Y
AG544000-01	GASKET LTNG			Y
AG723000-03	RAD ALT GASKET			Y
AHS304B	Spanner Wrench			Y
AN121552	Nut			Y
AN121553	NUT			Y
AN173-7A	BOLT		Y	
AN174-10	BOLT		Y	
AN174-17A	BOLT		Y	
AN24-44	BOLT	Y		
AN27-36	BOLT		Y	
AN310C12	NUT	Y		
AN3-23A	BOLT		Y	
AN3-25A	BOLT		Y	
AN3-26A	BOLT		Y	
AN3-30A	BOLT		Y	
AN3-33A	BOLT		Y	
AN3-3A	BOLT	Y		
AN3-4	BOLT		Y	
AN3-5A	Bolt			Y
AN386-3-10	PIN		Y	
AN386-3-14	TAPER PIN		Y	
AN3C12A	Bolt			Y
AN3C14A	Bolt			Y
AN3C21A	BOLT		Y	
AN3C27A	Bolt			Y
AN3C5	Bolt			Y
AN3CH4A	BOLT		Y	
AN3DD6A	BOLT		Y	
AN3H15A	BOLT		Y	
AN3H4A	BOLT		Y	
AN416-3	Pin, Lock			Y
AN4-34	BOLT	Y		
AN4-36	Nut			Y
AN43B-C4A	BOLT,EYE		Y	
AN44C11	EYE BOLT		Y	
AN4C15	Bolt			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
AN4C21	Bolt			Y
AN4C27	Bolt			Y
AN4C6A	Bolt			Y
AN4CH6A	Bolt			Y
AN4H23A	BOLT		Y	
AN4H3A	Bolt			Y
AN4H41A	Bolt			Y
AN4H5A	Bolt			Y
AN502-416-28	SCREW		Y	
AN5-32	BOLT	Y	Y	
AN5-55	BOLT	Y	Y	
AN565D6H3	SCREW		Y	
AN5CH5A	Bolt			Y
AN5H16A	BOLT	Y		
AN5H4A	BOLT		Y	
AN6204-2	Valve, bleeder			Y
AN6227B33	PACKING	Y		
AN6227B39	PACKING	Y		
AN6227B5	PACKING	Y		
AN6227B7	PACKING		Y	
AN6227B9	PACKING		Y	
AN6236-1	FILTER	Y		
AN6270-4D0210	HOSE ASSY		Y	
AN6270-4D0240	HOSE		Y	
AN6289J5	NUT		Y	
AN6289T6	Nut			Y
AN6DD12A	BOLT		Y	
AN6H25A	BOLT	Y		
AN6H6A	BOLT		Y	
AN7-10A	BOLT		Y	
AN735C10	Clamp			Y
AN735C15	Clamp			Y
AN735C18	Clamp			Y
AN735C27	Clamp			Y
AN735C28	Clamp			Y
AN735C7	Clamp			Y
AN735C8	Clamp			Y
AN735C9	Clamp			Y
AN735D4	Clamp			Y
AN737TW22	CLAMP		Y	
AN784D4	TEE		Y	
AN804D4	TEE PIECE UN		Y	
AN806D4	FITTING		Y	
AN814-8DL	PLUG		Y	
AN815-12D	UNION		Y	
AN815-8D	UNION		Y	
AN816-4D	NIPPLE		Y	
AN818-16W	NUT	Y		
AN818-3D	COUPLING		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
AN818-4J	NUT		Y	
AN818-4W	NUT		Y	
AN833-12D	ELBOW		Y	
AN833-8D	ELBOW		Y	
AN834-6D	Tee			Y
AN894D4-3	PLUG	Y	Y	
AN919-16	REDUCER	Y		
AN919-3D	REDUCER		Y	
AN919-5J	Reducer			Y
AN924-10D	NUT		Y	
AN924-3	NUT		Y	
AN924-5D	NUT		Y	
AN929-12S	CAP		Y	
AN929-16J	CAP		Y	
AN929A6	CAP ASSY		Y	
AN938T6	Tee			Y
AN960PD516	WASHER		Y	
AN970-10	WASHER		Y	
AN970-5	WASHER		Y	
ANL100	Fuse			Y
ANL150	FUSE			Y
ANL200	FUSE LIMITER			Y
ANL400	Current Limiter			Y
ANL50	Current Limiter			Y
ANN100	Fuse, Engine			Y
ANN150	Fuse, Engine			Y
AP1002J04	UNION		Y	
AP2806J04	ELBOW		Y	
AP391T04	Nut			Y
AP391T06	Nut			Y
AQS2023	CONNECTOR AY		Y	
AR1290	REL/B1 VALVE		Y	
AR1291	PUMP CASE		Y	
AR1292	SPRING KIT		Y	
AR1293	3-WAY VALVE		Y	
AR1398	SWITCH		Y	
AR209-11	FLOW RATE IN		Y	
AS1003J060406	TEE, REDUCER		Y	
AS1031D121208	TEE		Y	
AS1035D161212	Tee, Replace Cockpit LH Heat Ducting			Y
AS1035J100808	Tee, R/I Fire Ext Tubing LH Engine			Y
AS1097-10	SEALRINGER			Y
AS115-12-1440	HOSE ASSY		Y	
AS1986-04	HYDRAULIC ADAPTER			Y
AS1986-06	HYDRAULIC ADAPTER			Y
AS1986-08	HYDRAULIC ADAPTER			Y
AS1986-10	HYDRAULIC ADAPTER			Y
AS3084-05	PACKING	Y	Y	
AS3085-126	PACKING	Y	Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
AS3208-04	PACKING		Y	
AS3208-08	PACKING	Y	Y	
AS3209-005	PACKING	Y	Y	
AS3209-009	PACKING	Y	Y	
AS3209-012	PACKING	Y	Y	
AS3209-014	PACKING	Y	Y	
AS3209-015	PACKING	Y	Y	
AS3209-110	PACKING	Y	Y	
AS3209-111	PACKING	Y	Y	
AS3209-112	O-RING	Y	Y	
AS3209-113	PACKING	Y	Y	
AS3209-114	PACKING	Y	Y	
AS3209-121	PACKING	Y	Y	
AS3209-131	PACKING	Y	Y	
AS3209-137	O-RING		Y	
AS3209-152	PACKING	Y	Y	
AS3209-214	PACKING		Y	
AS5018D08-32K	WASHER,FLAT			Y
AS5018D10-32K	WASHER,FLAT			Y
AS5019T04	NUT,BULKHEAD			Y
AS5019T06	NUT, BULKHEAD			Y
AS5019T08	NUT,BULKHEAD			Y
AS5019T10	NUT,BULKHEAD			Y
AS5174J0605	Union, Fitting			Y
ASXD021	CLAMP		Y	
ATS260	Acoustic Test Set			Y
AV225-3	ANTENNA,VHF COM			Y
B107716	SEAL	Y		
B1516	BEARING		Y	
B362-06192-2	Battery, Underwater Locator Beacon			Y
B40-926377	SCREW		Y	
B4750B328	LIGHT INSTR.		Y	
B6563	CHIP DETECT	Y		
BA1172A05	Nut			Y
BAS243N3	CLIP		Y	
BC407	INVERTER		Y	
BDS3115-009C	SEAL,TEFLON			Y
BDS3115-010C	BACK UP RING			Y
BL4648	GASKET	Y		
BL8-2	BOLT		Y	
BP394	AC Contactor			Y
BPF3-8-3	Button Plug, Remove/Install Cockpit Vent			Y
BR7070	PUSH BUTTON		Y	
BWT26012-1	DUCT FLEXIBLE			Y
BWT26012-3	DUCT FLEXIBLE			Y
C10-118	CABL SAF-T.02		Y	
C10-218	CABL SAF-T.03		Y	
C156805-1	CBN Evaporator Pressure Regulator			Y
C17263-001	Initiator Squib. Inflator			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
C2006	SWITCH		Y	
C29565-002	TEMP. SWITCH		Y	
C3-908	PACKING		Y	
C3-910	PACKING		Y	
C3-912	PACKING		Y	
CB100-23	SEAL	Y		
CB104-4	SEAL	Y		
CB142-23	SEAL	Y		
CB4022C3CR8-750	Nutplate, Replace Battery Vent Tube			Y
CB50-4	SEAL	Y		
CB64-4	SEAL	Y		
CB66-4	SEAL	Y		
CB68-23	SEAL	Y		
CB69-23	SEAL	Y		
CCR244CS3-2	Rivet			Y
CCR264CS3-03	NUT, Self Locking			Y
CCR264CS4-05	Rivet			Y
CCR264CS4-06	Rivet			Y
CE200056C0001	Harness, Microswitch			Y
CE800056C0101	SOLENOID, START VALVE			Y
CEC401-213-01	SEAL		Y	
CEC401-222-01	SCRAPER	Y		
CEO67635-451	Cable			Y
CEO67635-452	Cable			Y
CEO67635-453	Cable			Y
CH127ND	SWITCH		Y	
CI193	Glideslope Antenna			Y
CL260	LOCK ASSY		Y	
CL3362-4	COUPLEX ASSY		Y	
CO425166	Potentiometer, Repair Overhead Switch			Y
CS10	SET SCREW		Y	
CTJ122E02D	MODULE		Y	
CTJ122E05E	MODULE		Y	
D10019-04	UNION		Y	
D10176-04	ELBOW		Y	
D110278	LATCH ASSY		Y	
D300-08	CAP		Y	
D51615-102	FDR/CVR			Y
D51616-102	FDR/CVR Control Panel			Y
D51620	Portable Replay Equipment			Y
D60344-1	Measuring Head			Y
D60345-1	Signal Converter/ice Detector			Y
D60350MK241105	AIRDATA COMP		Y	
D60363	Valve			Y
D60364ISS1	Bleed Air Filter			Y
D70342-1-043C	WASHERMETRIC		Y	
DA27	Bulb			Y
DAT02AEFKT4009	Hydraulic Tube Repair Kit, Titanium			Y
DBTI2002	DUALBAT TEMP		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
DD24661	PLUG SHELL		Y	
DEMA9S	CONNECTOR		Y	
DGSC20-02	GLS Coupler			Y
DK100	BEACON		Y	
DMB20-20	Marker Beacon Coupler			Y
DMC1000-20R	Safe-T-Cable Kit, .020/.032			Y
DMC1589	Electrical Connector Repair Kit			Y
DMC1595	Electrical Connector Repair Kit			Y
DM-H21-1	Coupler, VOR/ILS Antenna			Y
DMN4-4-1	Antenna, VOR/ILS			Y
DMN4-4-9	Cable & Connector kits, VOR/ILS Antenna			Y
DM-NI50-9-2	Antenna, DME			Y
DM-Q18-1A	ANTENNA		Y	
DMYNO05133-002	INDICATOR		Y	
DMYNO07418-031	BACKSHELL		Y	
DMYNO08719-013	LIGHT ASSY		Y	
DMYNO08719-014	LIGHT ASSY		Y	
DMYNO08719-015	SWITCH		Y	
DMYNO08719-016	LIGHT ASSY		Y	
DMYNO09740-008	DUCT ASSY		Y	
DMYNO32245-043	SWITCH		Y	
DMYNO38704-001	F/FLW IND		Y	
DMYNO56081-014	AUDIO		Y	
DMYNO70628-032	FLEX DUCT		Y	
DMYNO71279-022	Spacer, Repair #3 Relay Panel			Y
DMYNO71744-001	LIGHT		Y	
DMYNO71744-002	LIGHT ASSY		Y	
DMYNO72962-001	ANCHOR NUT		Y	
DMYNO72962-005	NUT		Y	
DMYNO78286A431	TOOL		Y	
DMYNO83324-104	STUD		Y	
DMYNO83324-139	STUD		Y	
DMYNO83324-196	STUD		Y	
DMYNO84971-009	CLAMP		Y	
DMYNO94697-002	WASHER		Y	
DPP5	BEARING	Y		
DR30525T	Tire			Y
DSR13251-102	TIE CABLE, Crotch Assy			Y
DSR2534-3	WASHER			Y
DSR4630-1005	CLIP,P wiring harness Crotch Assy			Y
E02C96	LEAD ASSY	Y		
E12469-8	NUT		Y	
E1DZ5421812A	LATCH ASSY RH		Y	
E1DZ5421813A	LATCH		Y	
EB064	NUT	Y		
EB080	NUT	Y		
ES02162-3	INSULATION		Y	
ES26101-1	VALVE		Y	
ES26101-5	VALVE		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
ES26104-1	VALVE		Y	
ES30014-2	TIE BLOCK		Y	
ES30015-4	CABLE		Y	
ES30015-6	CABLE TIE		Y	
ES30042-11	CLAMP		Y	
ES43030-2	RECEIVER		Y	
ES49011-1	O-RING		Y	
ES49011-2	O-RING		Y	
ES49011-3	O-RING		Y	
ES49014-1	FITTING		Y	
ES56149-1	RELAYBLOWER		Y	
ES57009-1	SWITCHPRESSU		Y	
ES70009-8	DUCT		Y	
ES73103-2	BLOWER		Y	
EWB22-8-16	BOLT	Y		
EWN22-8	NUT	Y		
EWSB22-12-32	BOLT		Y	
EWSB22-3-4	BOLT		Y	
EWSB22-7-41	BOLT		Y	
EWSB22-8-22	BOLT		Y	
F103ST	IGB OIL FILLER		Y	
F12NCFMA2-62	Clinch Nut, Repair Float Panel			Y
F401ST2	CAP, FILLER			Y
FBL10001-5	NUTPLATE			Y
FBL10002-4	RIVET, Blind			Y
FHS1909C	WASHER			Y
FHS1932-33C2	BOLT			Y
FHS1932-35C2	BOLT			Y
FHS1932-46D4	BOLT			Y
FLUKE189	Multimeter			Y
FLUKE45	Multimeter/Mili-ohmeter (Fluke)			Y
FM02A125V3A	FUSE 3 AMP		Y	
FMB10-272-1	ANTENNA		Y	
FN12M054	NUT		Y	
FRDH141	Torque Adapter, 7/16", 12-point			Y
FRX241	Socket, Flare Nut, Slotted			Y
FT1141	TRANSFORMER		Y	
FT24602	Life Raft			Y
FT25866-1	Button			Y
FT25866-2	Button			Y
FTS0816	WASHER	Y		
G06DU	WASHER		Y	
G07DU	WASHER		Y	
G10DU	WASHER		Y	
G12DU	WASHER		Y	
G1647	Test/Holding Fixture			Y
G9950-1	LAMP ASSY		Y	
GA31353	Stator Assy, Lateral			Y
GA31361	INNER WHEEL HALF ASSY			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
GA31363	OUTER WHEEL HALF ASSY			Y
GA31366	Housing Assy, Piston			Y
GA473A	Grease Gun			Y
GB2220-20H	BEARING	Y		
GMS215025-01	CAMLOC Isolated			Y
GMS230194-01	LIGHT			Y
GMS230194-02	LIGHT			Y
GMS230195-01	HOLDER, LAMP			Y
GMS290194-02	LIGHT			Y
GMS290501-01	AIR OUTLET			Y
GR10	KNOB		Y	
GR1801159SC	GASKET		Y	
GYN184	NUT,SELF-LOCKIN		Y	
GYS184C29	BOLT		Y	
GYS4-29	BOLT	Y	Y	
H1165-19	HINGE ASSY			Y
H201	Oil Drain Attachment, MGB			Y
H2719-1	LATCH		Y	
H42-08	Nut			Y
H44AA6	MOUNTS		Y	
H523-1-091-218	LATCH, ACCESS PANEL			Y
H60F2T2	RHEOSTAT	Y		
H91	Drain adapter, oil			Y
HDS1357-5-3	SEAL, O' RING			Y
HDS1357-5-4	PACKING, DELTA-P INDICATOR			Y
HL1087A8	Collar			Y
HL19PB5-11	HILOK PIN		Y	
HL19PB5-19	PIN		Y	
HL20PB5-4	Pin, Hi Lok			Y
HL22-5-4	COLLAR		Y	
HL73-10	Collar			Y
HLK10	Hi-Lock Collar Removal Kit			Y
HLK14	Hi-Lock Installation Kit			Y
HPC100124	SPRING	Y		
HR-CFA14-28R	STROBELIGHT		Y	
HR-CFA14-28W	STROBELIGHT		Y	
HTS4A	Apex Bit			Y
IFR4000	Nav/Comm Ramp Test Set			Y
IN002	Spring Scale			Y
IN060	Spring Scale			Y
IN12MRP	Scale, 12lb			Y
IT207-12-576	FLEX DUCT		Y	
IT207-16-576	FLEX DUCT		Y	
IT5537-16-06	DUCT CUFF		Y	
J06830353FLS6	O-RING		Y	
JBS11002-1	THERMISTOR		Y	
JBS201-12	CMPRS O/H KI		Y	
JBS2020-1	SWITCH ASSY		Y	
JBS221-1	COMPRESSOR		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
JBS885-3	VSO VALVE		Y	
JBS885-4	VSO VALVE		Y	
JBS889-2	REG. VALVE		Y	
J-D4N	Relay			Y
JK416A11	WASHER		Y	
JT15020	Float Bag Vacuum Adapter			Y
JX41	ACTUATOR	Y		
K300B2C	Relay			Y
K4-258-258L	Tool Kit, Screw			Y
K4567	SWITCH		Y	
K-D4N	Relay			Y
KDD400B7B	DC Power Contactor			Y
KD-D4A	RELAY		Y	
KDJ04C003-241	BEARING		Y	
KM680	CAMLOCK		Y	
KP10A-FS464	BEARING		Y	
KP12A-FS464	BEARING		Y	
KP4A-FS464	BEARING		Y	
KR4MAB	ROD END BRG.		Y	
KRJ8UDSB010	SELF-LUBRICATING BUSHING			Y
KRJ8UDSB022	SELF-LUBRICATING BUSHING			Y
KS6040	SWITCH		Y	
KSBG7N	BEARING	Y		
KSBN7-4	BEARING	Y		
KWB5D1	BEARING	Y		
KWB6D1	BEARING	Y		
L10087ND	LED ASSEMBLY		Y	
L109BBM	ACTUATOR		Y	
L109CBM	ACTUATOR		Y	
L109CDM	COLLECT TRIM SERVO		Y	
L197Q	ROLLER	Y		
L2005-501	PLUGSTAT	Y		
L2-1	CLEAT		Y	
LC016A10MW	SPRING		Y	
LC042D15MW	SPRING		Y	
LC080K1MW	SPRING		Y	
LC501-24C	Coupling 1.5", Remove/Install Cabin Heat			Y
LDH302	Wrench Socket, MGB Tail Take-off Nut			Y
LE041D9MW	SPRING		Y	
LE049D9MW	SPRING		Y	
LE063G9MW	SPRING		Y	
LE063G9SS	SPRING		Y	
LF10	Dimmer, Overhead Console			Y
LHSS8	BEARING	Y		
LM307-30	BOLT	Y		
LM307-38	BRACKET ASSY	Y		
LM307-42	WASHER	Y		
LM307-5	NUT	Y		
LM501349-2-629	BEARING CONE			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
LM67000LA9G2A1	BEARING		Y	
LRB14-56-4G	VALVE	Y		
LRB56-57-4G	FITTING	Y		
LS4	BEARING		Y	
LT100BP31	CONTROL		Y	
LT45D	Push Button/Indicator Dimmer			Y
LT48A	DC POWER CNVRTR			Y
LW3123E2BB	SWITCH		Y	
LW3128	SWITCH		Y	
LWB22-12-30	BOLT	Y		
M080032	ELEMENT. FILTER			Y
M1-15	BEARING		Y	
M25988-1-010	SEAL	Y	Y	
M25988-1-031	O-RING	Y		
M39029-30-217	CONTACT		Y	
M39029-30-218	CONTACT		Y	
M39029-4-110	PIN		Y	
M39029-4-111	CONTACT		Y	
M39029-4-113	PIN		Y	
M39029-5-116	CONTACT PIN		Y	
M6106-19-022	RELAY		Y	
M7928-1-34	TERMINAL		Y	
M7928-1-39	TERMINAL		Y	
M7928-1-43	TERMINAL		Y	
M7928-1-56	TERMINAL		Y	
M7928-1-60	TERMINAL		Y	
M7950-21	AUDIO AMP		Y	
M81934-1-12A052	BEARING	Y	Y	
M81934-2-05C008	BEARING, SLEEVE		Y	
M81934-2-08A011	BEARING		Y	
M81934-2-08A012	BEARING		Y	
M81934-2-08A014	BEARING	Y	Y	
M81934-2-08A018	BUSHING	Y	Y	
M81934-2-10C014	BEARING		Y	
M81934-2-11A012	BEARING	Y	Y	
M81934-2-12C014	BEARING	Y	Y	
M81934-2-12C018	BEARING		Y	
M81934-2-14C014	BEARING		Y	
M81934-2-14C018	BEARING		Y	
M81934-2-14C022	BEARING		Y	
M83248-1-015	PACKING		Y	
M83248-1-024	PACKING		Y	
M83248-1-039	O-RING		Y	
M83248-1-040	PACKING	Y	Y	
M83248-1-041	O-RING		Y	
M83248-1-128	PACKING		Y	
M83248-1-131	PACKING		Y	
M83248-1-133	O-RING		Y	
M83248-1-142	PACKING	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
M83248-1-169	O'RING		Y	
M83248-1-210	PACKING	Y		
M83248-1-229	O'RING	Y	Y	
M83248-1-232	PACKING		Y	
M83248-1-239	PACKING		Y	
M83248-1-242	O'RING	Y	Y	
M83248-1-245	O'RING	Y	Y	
M83248-1-251	PACKING	Y	Y	
M83248-1-332	PACKING		Y	
M83461-1-025	PACKING	Y		
M83461-1-112	PACKING		Y	
M83461-1-118	PACKING	Y	Y	
M83461-1-131	PACKING	Y		
M83461-1-134	PACKING		Y	
M83461-1-138	PACKING	Y	Y	
M83461-1-210	PACKING	Y	Y	
M83461-1-213	PACKING	Y	Y	
M83461-1-220	PACKING		Y	
M83461-1-222	PACKING	Y		
M83461-1-223	PACKING	Y		
M83461-1-225	O-RING	Y		
M83461-1-227	O-RING	Y		
M83461-1-243	PACKING		Y	
M83461-1-326	ORING	Y		
M83461-1-330	PACKING	Y		
M83461-1-345	PACKING		Y	
M83461-1-428	PACKING	Y		
M83536-15-021M	RELAY	Y	Y	
M83536-16-024L	RELAY		Y	
M83536-2-024L	RELAY		Y	
M83536-32-003L	RELAY		Y	
M83536-9-023M	RELAY	Y	Y	
M83723-84K1407N	CONNECTOR		Y	
M83723-96K1407N	CONNECTOR		Y	
M83726-28-1203P	Relay			Y
M83726-29-5000P	Relay			Y
M83796-1K210L36	HOSE ASSY		Y	
M83796-1K320J18	HOSE ASSY		Y	
M83796-1K450C	HOSE		Y	
M85049-31-12N	BACKSHELL		Y	
MA2521-06	Nut, Replace Cabin Vent Temp Sensor			Y
MA3453-120	Washer, Replace Cabin Vent Temp Sensor			Y
MB540DD	BEARING		Y	
MBC19270-293S	GROMMET		Y	
MBCS6045	FOOT ASSY, QUICK RELEASE			Y
MBCS6337	Spring, Head Rest			Y
MBCS9978I	SEAT BELTS, EXTENDED			Y
MBF3008-5-250	Fastener, Replace Windshield Washer Conv			Y
MI585436-1	FP-900 ANTENNA			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
MI585467	WX PEDESTAL			Y
MIC103	Micrometer Set			Y
MIC4A	Micrometer Set			Y
MS14103-6	BEARING		Y	
MS14103-7	BEARING		Y	
MS14104-7K	BEARING	Y		
MS14144L5	NUT		Y	
MS14144L6	NUT		Y	
MS14145-10	NUT		Y	
MS14145L4	NUT		Y	
MS14145L5	NUT		Y	
MS14145L6	NUT		Y	
MS14154-20	CIRCUIT BREAKER			Y
MS15001-2	FITTING	Y	Y	
MS15570-303	LAMP	Y	Y	
MS16555-650	PIN		Y	
MS16625-4081	LOCK RING		Y	
MS172323	NUT	Y		
MS17826-14	NUT		Y	
MS17984C404	PIN		Y	
MS17984C421	PIN,QUICK RE		Y	
MS17990C421	PINQUICK REL		Y	
MS18065-50	SET SCREW		Y	
MS18098-300	VOLT METER		Y	
MS20005-28	BOLT	Y	Y	
MS20010-10	BOLT		Y	
MS20033-2	BOLT		Y	
MS20033-3	BOLT		Y	
MS20033-4	BOLT		Y	
MS20033-5	BOLT		Y	
MS20033-6	BOLT		Y	
MS20033-7	BOLT		Y	
MS20034-1	BOLT		Y	
MS20034-2	BOLT		Y	
MS20034-3	BOLT		Y	
MS20034-4	BOLT		Y	
MS20073-03-06	BOLT		Y	
MS20073-03-21	BOLT	Y	Y	
MS20073-08-11	BOLT		Y	
MS20073-08-13	BOLT	Y	Y	
MS20253-2-600	PIN, HINGE		Y	
MS20253P2-275	PIN		Y	
MS20392-1C23	PIN		Y	
MS20392-1C31	PIN	Y		
MS20392-2C21	PIN		Y	
MS20392-2C7	PIN		Y	
MS20392-3C45	PIN		Y	
MS20392-3C53	PIN		Y	
MS20392-3C57	PIN		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
MS20392-3R43	PIN		Y	
MS20392-4C57	PIN		Y	
MS20426AD3-3	RIVET		Y	
MS20470AD5-6	PIN		Y	
MS20500-428	NUT		Y	
MS20664C4	BALL END		Y	
MS20762D12	ELBOW	Y		
MS20819-3D	SLEEVE		Y	
MS20819-4J	SLEEVE		Y	
MS20823-4D	ELBOW		Y	
MS21025-16	NUT, AXLE		Y	
MS21025-20	NUT	Y	Y	
MS21026F271	SWITCH	Y	Y	
MS21027B241	SWITCH		Y	
MS21045-4	NUT	Y		
MS21045C06	NUT		Y	
MS21049-3	NUT		Y	
MS21055-08	ANCHOR NUT		Y	
MS21059-3K	NUT PLATE		Y	
MS21061-4	NUTPLATE		Y	
MS21069-08K	NUT		Y	
MS21075-04	NUTPLATE		Y	
MS21076L3	NUT PLATE		Y	
MS21076L3N	NUTPLATE		Y	
MS21083D3	NUT		Y	
MS21086L3	NUT		Y	
MS21090-0410	SCREW		Y	
MS21090-0619	SCREW		Y	
MS21093-343	SCREW		Y	
MS21094-3012	BOLT		Y	
MS21094-6009	BOLT		Y	
MS21094-6012	BOLT		Y	
MS21095-3001	BOLT		Y	
MS21096-04008	BOLT	Y	Y	
MS21096-06010	BOLT		Y	
MS21096-3012	BOLT		Y	
MS21241-06C010	BEARING		Y	
MS21241-06C018	BUSHING		Y	
MS21256-1	PIN		Y	
MS21260S4LH	TERMINAL	Y	Y	
MS21260S4RH	TERMINAL		Y	
MS21911J5	TEE-BHD		Y	
MS21914-5J	CAP-PSL		Y	
MS21914-6J	PLUG		Y	
MS21914-8J	NUT		Y	
MS21916J12-4	REDUCER	Y		
MS21919H13	CLAMP	Y	Y	
MS21919H3	CLAMP		Y	
MS21919WCJ20	CLAMP		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
MS21919WCJ43	CLAMP		Y	
MS21919WDG34	CLAMP		Y	
MS21919WDG38	CLAMP		Y	
MS21919WDG48	CLAMP		Y	
MS21919WH12	CLAMP		Y	
MS21919WH5	CLAMP		Y	
MS21920-47R	CLAMP		Y	
MS21920-53	CLAMP		Y	
MS21926J5	ELBOW		Y	
MS24166D1	RELAY		Y	
MS24515-682	BULB	Y	Y	
MS24523-32	SWITCH		Y	
MS24524-33	SWITCH		Y	
MS24585-1283	SPRING		Y	
MS24655-231	SWITCH		Y	
MS24658-22D	SWITCH		Y	
MS24658-22G	SWITCH		Y	
MS24658-23D	SWITCH		Y	
MS24659-24M	SWITCH		Y	
MS24665-134	COTTER PIN		Y	
MS24665-159	COTTER PIN		Y	
MS24665-191	PIN		Y	
MS24665-338	PIN,COTTER		Y	
MS24678-13	SCREW	Y	Y	
MS24693BB26	SCREW		Y	
MS24693S17	SCREW		Y	
MS24693S273	SCREW		Y	
MS24693S30	SCREW		Y	
MS24693S54	SCREW		Y	
MS24694A115	SCREW		Y	
MS24694A50	SCREW		Y	
MS24694A53	SCREW		Y	
MS24694C100	SCREW		Y	
MS24694C5	SCREW		Y	
MS24694C59	SCREW		Y	
MS24694S3	SCREW		Y	
MS24694S4	SCREW		Y	
MS24694S64	SCREW		Y	
MS24694S77	SCREW		Y	
MS24694S83	SCREW		Y	
MS24694S9	SCREW		Y	
MS24694S90	SCREW		Y	
MS25036-126	TERMINAL		Y	
MS25036-127	TERMINAL		Y	
MS25036-132	TERMINAL		Y	
MS25082-19	NUT		Y	
MS25082B2	NUT		Y	
MS25083-2BB4	JUMPER		Y	
MS25089-1A	SWITCH-PUSH		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
MS25089-4F	PLUG	Y		
MS25171-4S	RUBBER BOOT		Y	
MS27039-0828	SCREW		Y	
MS27039-1-41	SCREW		Y	
MS27039-1-48	SCREW		Y	
MS27039-4-05	SCREW		Y	
MS27039-4-06	SCREW		Y	
MS27039-4-16	SCREW		Y	
MS27039C0810	SCREW		Y	
MS27111-4	WASHER	Y	Y	
MS27129-8	WASHER		Y	
MS27130A25K	RIVET		Y	
MS27130CR13	NUTPLAIN		Y	
MS27130S128K	NUT		Y	
MS27130S93K	NUT		Y	
MS27130S99K	RIVNUT		Y	
MS27409-1E	AUTO START		Y	
MS27488-16	PLUG		Y	
MS27488-20	PLUG		Y	
MS27641-16	BEARING	Y		
MS27976-22	CLEVIS		Y	
MS28034-3	BULB SENSOR		Y	
MS28042-1A	CLAMP		Y	
MS28774-112	B/U RING	Y		
MS28774-114	B/U RING	Y		
MS28774-120	B/U RING	Y	Y	
MS28774-126	RING		Y	
MS28774-128	B/U RING		Y	
MS28774-212	RING	Y		
MS28774-219	RING	Y	Y	
MS28774-222	RETAINER	Y		
MS28774-227	SEAL	Y		
MS28774-326	RETAINER	Y		
MS28774-329	RETAINER	Y		
MS28774-330	RING		Y	
MS28774-336	RING	Y		
MS28774-341	PACKING	Y		
MS28776M2-3	SCRAPER	Y		
MS28932C02-05	PACKING	Y		
MS28932C03-06	FELT SEAL	Y		
MS28932C04-11	FELT	Y		
MS28936-50	FUSE		Y	
MS29512-03	PACKING		Y	
MS29512-05	PACKING		Y	
MS29513-016	O RING	Y	Y	
MS29513-021	PACKING		Y	
MS29513-116	PACKING	Y		
MS29513-140	O RING	Y	Y	
MS29513-144	PACKING	Y	Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
MS29513-214	PACKING		Y	
MS29513-232	PACKING	Y	Y	
MS29513-284	PACKING		Y	
MS29561-114	O-RING	Y	Y	
MS29561-212	O RING	Y	Y	
MS29561-213	O-RING	Y	Y	
MS29561-218	PACKING		Y	
MS29561-230	PACKING	Y	Y	
MS29561-231	PACKING	Y	Y	
MS29561-232	PACKING		Y	
MS29561-238	PACKING	Y		
MS29561-243	PACKING	Y	Y	
MS29561-246	PACKING	Y		
MS29561-252	PACKING		Y	
MS29561-253	PACKING	Y	Y	
MS29561-274	PACKING		Y	
MS3105-32	RECEPTICLE		Y	
MS3126E14-15S	CONNECTOR	Y		
MS3187-12-2	PLUG		Y	
MS3339-6-9	PLATE		Y	
MS3416-10EN	BACKSHELL		Y	
MS3416-14EN	BACKSHELL		Y	
MS3416-22EN	BACKSHELL		Y	
MS3418-8N	STRAIN RELIE	Y		
MS3456L24-11S	CONNECTOR		Y	
MS3470L10-6P	CONNECTOR	Y	Y	
MS3472L20-16S	CONNECTOR,RC		Y	
MS3476L10-6S	CONNECTOR	Y	Y	
MS3476L20-16PX	CONNECTOR,PL		Y	
MS3476W14-19S	CONNECTOR		Y	
MS35206-223	SCREW		Y	
MS35206-224	SCREW		Y	
MS35206-233	SCREW		Y	
MS35206-264	SCREW		Y	
MS35207-260	SCREW		Y	
MS35207-266	SCREW		Y	
MS35214-27	SCREW		Y	
MS35214-28	SCREW		Y	
MS35214-29	SCREW		Y	
MS35266-61	SCREW	Y		
MS35335-29	WASHER		Y	
MS35335-35	WASHER		Y	
MS35338-157	WASHER		Y	
MS35489-5	GROMMET		Y	
MS35649-2385S	NUT		Y	
MS35650-302	NUT		Y	
MS51958-61	SCREW		Y	
MS51967-2	NUT		Y	
MS51991-109L	INSERT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
MS8005E284C	HOSE ASSY	Y		
MS8005F160C	Hose Assy			Y
MS8005H210C	HOSE ASSY		Y	
MS8005H240C	HOSE ASSY		Y	
MS8005H332C	HOSE		Y	
MS8005J060E000	HOSE ASSY.	Y		
MS8005K094E280	HOSE ASSY		Y	
MS8005K150B	HOSE ASSY		Y	
MS8006E380AL	HOSE ASSY		Y	
MS81934-2-10A012	BEARING		Y	
MS9021-010	PACKING		Y	
MS9021-144	PACKING		Y	
MS90310-241	SWITCH		Y	
MS90310-271	SWITCH		Y	
MS90311-221	SWITCH		Y	
MS90311-311	SWITCH		Y	
MS90353-0503	RIVET		Y	
MS90353-0504	RIVET		Y	
MS90353-0605	BOLT HUK		Y	
MS90354-0507	RIVET		Y	
MS90415-6	NUT		Y	
MS90451-6832	LAMP		Y	
MS91587-4	SHUNT		Y	
MS9193-04	NIPPLE	Y	Y	
MS9201-05	NUT		Y	
MS9208-08	BOLT	Y	Y	
MS9208-10	BOLT	Y	Y	
MS9226-03	LOCKWIRE		Y	
MS9320-09	WASHER		Y	
MS9372-029	GASKET	Y	Y	
MS9387-05	PACKING	Y	Y	
MS9388-007	PACKING	Y		
MS9489-09	BOLT		Y	
MS9574-05	BOLT	Y	Y	
MTEE6	Telescoping Set			Y
MV82653TJ457V	CLAMP.V-BAND			Y
MW5	ROD END		Y	
N5000-244	RET. RING		Y	
N5000-43	RETAINING RI	Y		
N5000-75	RET. RING		Y	
N5040	BOOT		Y	
NA0034C050	NUT		Y	
NA0045H050004	BOLT		Y	
NA0067A050012	BOLT		Y	
NA0089-040008	SCREW		Y	
NA0179BL050	WASHER		Y	
NAF1134-7	GASKET	Y		
NAS1057T3-100	BUSHING		Y	
NAS1057W5-162	BUSHING		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
NAS1104-26D	BOLT		Y	
NAS1105-22D	BOLT	Y	Y	
NAS1108-42D	BOLT		Y	
NAS1110-75D	BOLT		Y	
NAS1110-87D	BOLT		Y	
NAS1134-7	GASKET		Y	
NAS1149E0932P	WASHER		Y	
NAS1190-06P6	SCREW	Y		
NAS1190-06P8	SCREW		Y	
NAS1190E4P16L	SCREW		Y	
NAS1190E4P7	SCREW		Y	
NAS1190E5P7	SCREW		Y	
NAS1193E4CP	LOCKING DEV		Y	
NAS121Y125	KNOB		Y	
NAS1224-2W	BOLT		Y	
NAS1226-30L	BOLT		Y	
NAS1226-4L	BOLT		Y	
NAS1252-10L	WASHER		Y	
NAS1272H4	BOLT	Y		
NAS1272H6	BOLT	Y		
NAS1304-13	BOLT		Y	
NAS1304-14	BOLT		Y	
NAS1304-4H	BOLT		Y	
NAS1304-5H	BOLT		Y	
NAS1306-32	BOLT		Y	
NAS1307-18D	BOLT		Y	
NAS1307-48D	BOLT		Y	
NAS1307-75D	BOLT	Y		
NAS1309-80	BOLT	Y		
NAS1310-27D	BOLT	Y	Y	
NAS1310-40D	BOLT		Y	
NAS1310-84DH	BOLT		Y	
NAS1330S3K116	RIVNUT		Y	
NAS1388-1	SPLICE		Y	
NAS1443S7	RETAINER	Y		
NAS1448-11	PIN		Y	
NAS1465-08	PIN		Y	
NAS1465-12	HUCK BOLT		Y	
NAS1473A4	NUT		Y	
NAS1515H7	WASHER		Y	
NAS1523AA12Y	SEAL		Y	
NAS1523AA7F	PACKING		Y	
NAS1523C4Y	PACKING		Y	
NAS1523C5Y	PACKING		Y	
NAS1523C9W	PACKING		Y	
NAS1525-09	PIN		Y	
NAS1525-22	PIN		Y	
NAS1526-13	PIN		Y	
NAS1526-26	PIN		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
NAS1526-28	PIN,SWG LKG		Y	
NAS1564J6-4	FITTING		Y	
NAS1564J8-4	REDUCER		Y	
NAS1598D5R	SEAL		Y	
NAS1738B6-6	RIVET		Y	
NAS1738M4-4	RIVET		Y	
NAS1738M4-5	RIVET,BLIND		Y	
NAS1738M4-6	RIVET,BLIND		Y	
NAS1739B4-2	RIVET		Y	
NAS1739B4-5	RIVET		Y	
NAS1739B5-3	RIVET		Y	
NAS1785-8-25	BOLT		Y	
NAS1785-8-26	BOLT		Y	
NAS1785-8-37	BOLT		Y	
NAS1832-06-3	INSERT		Y	
NAS1832-3-5	INSERT		Y	
NAS1832-4-3	INSERT		Y	
NAS1921B04-01	RIVET		Y	
NAS1922-0400-2	CLAMP		Y	
NAS1956-16D	BOLT		Y	
NAS1956-34D	BOLT		Y	
NAS1956-42	BOLT		Y	
NAS1958-42	BOLT		Y	
NAS1958-42D	BOLT		Y	
NAS221-11	SCREW		Y	
NAS316-13-0101	CABLE		Y	
NAS326-12-347	CABLE ASSY		Y	
NAS326-12-480	CABLE ASSY.		Y	
NAS333CP10	BOLT		Y	
NAS334CPA5	BOLT		Y	
NAS391B10P	WASHER	Y		
NAS428-4A5	BOLT		Y	
NAS428H4-16	BOLT		Y	
NAS42HT8-20	SPACER		Y	
NAS43DD1-24	SPACER		Y	
NAS43DD3-90	SPACER		Y	
NAS43DD3-92	SPACER		Y	
NAS43DD4-10	SPACER		Y	
NAS43DD4-12	SPACER		Y	
NAS43DD4-28	BUSH		Y	
NAS43DD4-58	SPACER		Y	
NAS43HT3-13	SPACER		Y	
NAS43HT3-64	SPACER		Y	
NAS464-6-11	BOLT		Y	
NAS464P10-54	BOLT	Y		
NAS464P10L72	BOLT	Y		
NAS464P3A3	BOLT		Y	
NAS464P4-18	BOLT	Y		
NAS464P4-8	BOLT	Y	Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
NAS464P5-74	Bolt	Y		
NAS464P6-20	BOLT		Y	
NAS464P6LA24	BOLT		Y	
NAS464P6LA6	BOLT		Y	
NAS464P8-41	BOLT	Y	Y	
NAS464P8-42	BOLT		Y	
NAS464P8-44	BOLT		Y	
NAS509-12	NUT		Y	
NAS509-5C	JAM NUT		Y	
NAS509-8	NUT		Y	
NAS509L5C	LH JAM NUT		Y	
NAS514P1032-7	SCREW	Y	Y	
NAS517-3-2	SCREW		Y	
NAS537-10P039	BUSHING		Y	
NAS537-10P044	BUSHING		Y	
NAS537-10P050	BUSHING		Y	
NAS537-10P053	BUSHING		Y	
NAS537-12P044	BUSHING		Y	
NAS537-12P050	BUSHING		Y	
NAS537-14P100	BUSHING		Y	
NAS537-4P016	BUSHING	Y	Y	
NAS537-4P030	BUSHING		Y	
NAS537-5P021	BUSHING		Y	
NAS537-5P27	BUSHING		Y	
NAS537-9P080	BUSHING	Y		
NAS537B4P068	BUSHING		Y	
NAS538-10-043	BUSHING	Y		
NAS538-10P037	BUSHING	Y		
NAS538-12-118	BUSHING	Y		
NAS538-4P011	BUHSING		Y	
NAS538-4P21	BUSHING		Y	
NAS538-4P22	BUSHING		Y	
NAS538-4P29	BUSHING		Y	
NAS538-5P14	BUSHING		Y	
NAS538-5P24	BUSHING		Y	
NAS538-5P28	BUSHING		Y	
NAS538-5P30	BUSHING	Y	Y	
NAS538-6P017	BUSHING		Y	
NAS538-6P034	BUSHING		Y	
NAS538-6P30	BUSHING		Y	
NAS538-7P022	BUSHING		Y	
NAS558-606-3	KEY		Y	
NAS558-808-3	KEY		Y	
NAS559-3	LOCKWASHER		Y	
NAS561C7-22	PIN,SPRING		Y	
NAS563-33	BOLT		Y	
NAS566-47	BOLT		Y	
NAS568-55	BOLT		Y	
NAS578-5B	RETAINER		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
NAS591-4	COUPLING		Y	
NAS592-4E	RING		Y	
NAS593-16	NUT		Y	
NAS593-4	NUT		Y	
NAS593-8	NUT		Y	
NAS602-5	SCREW		Y	
NAS602-6	SCREW		Y	
NAS602-8	SCREW		Y	
NAS603-48P	SCREW.		Y	
NAS603-58P	SCREW		Y	
NAS604-6	SCREW		Y	
NAS607-3-6P	PIN DOWEL	Y		
NAS607-5-9	SUPPORT	Y		
NAS607-6-6P	PIN	Y		
NAS608-3LE20	SCREW		Y	
NAS617-16	PACKING		Y	
NAS617-20	O-RING		Y	
NAS6204-13D	BOLT		Y	
NAS6204-29	BOLT		Y	
NAS6205-11	BOLT		Y	
NAS6205-31D	BOLT	Y		
NAS6205-8D	BOLT		Y	
NAS6205-9D	BOLT		Y	
NAS6206-13D	BOLT		Y	
NAS6206-30	BOLT		Y	
NAS6206-32	BOLT		Y	
NAS6206-8	BOLT		Y	
NAS620-6L	WASHER		Y	
NAS623-4-7	SCREW		Y	
NAS624-3	BOLT		Y	
NAS624-46	BOLT		Y	
NAS624H6	BOLT		Y	
NAS625-10	BOLT		Y	
NAS625-12	BOLT		Y	
NAS625-16	BOLT		Y	
NAS625-20	BOLT	Y	Y	
NAS625-25	BOLT	Y		
NAS625-4	BOLT	Y	Y	
NAS625-5	BOLT		Y	
NAS625-6	BOLT		Y	
NAS625-9	BOLT		Y	
NAS625H14	BOLT		Y	
NAS625H6	BOLT		Y	
NAS626-10	BOLT		Y	
NAS626-13	BOLT		Y	
NAS626-7	BOLT		Y	
NAS626-9	BOLT		Y	
NAS626H9	BOLT	Y	Y	
NAS628-27	BOLT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
NAS6304-16D	BOLT-HEX		Y	
NAS6604-13	BOLT		Y	
NAS6605-16D	BOLT		Y	
NAS6605-8D	BOLT		Y	
NAS6608D47	BOLT		Y	
NAS679A3	NUT		Y	
NAS73-10-102	BUSHING	Y	Y	
NAS73-4-002	BUSHING		Y	
NAS74A3-012P	BUSHING		Y	
NAS75-10-017	BUSHING	Y	Y	
NAS75-10-218	BUSHING		Y	
NAS75-14-016	BUSHING	Y		
NAS75-4-008	BUSHING		Y	
NAS75-6-009	BUSHING		Y	
NAS75-7-011	BUSHING		Y	
NAS75-8-012	BUSHING		Y	
NAS76A6-005	BUSHING		Y	
NAS76A6-008P	BUSHING	Y	Y	
NAS77-14-031N	BUSHING		Y	
NAS77-3-007	BUSHING		Y	
NAS77-3-025	BUSHING		Y	
NAS77-3-10	BUSHING		Y	
NAS77-4-018	BUSHING		Y	
NAS77-4-16	BUSHING		Y	
NAS77-4-19	BUSHING		Y	
NAS77-4-25	BUSHING		Y	
NAS77-5-019	BUSHING		Y	
NAS77-6-18	BUSHING		Y	
NAS77-8-27	SPACER	Y	Y	
NAS77A3-011	BUSHING		Y	
NAS8303-8	TIPCAP SCREW		Y	
NAS8303-9	TIPCAP SCREW		Y	
NH1005580-10	CLAMP	Y	Y	
NH1008342-10	CLAMP		Y	
NH1008601-10	Coupling, Deswiler			Y
NJM317F-ND	REGULATOR		Y	
NK4-4A	BOLT	Y		
NK4-6A	BOLT		Y	
NK515-6-7	SCREW	Y	Y	
NK525D832R9	SCREW	Y		
NK526-632-5	NYLOK SCREW	Y	Y	
NK924-6D	NUT	Y		
NKN626-33	BOLT		Y	
NKS35206-213	SCREW	Y		
NP224557-2X024	BEARING CUP			Y
NPX138N500	RADIO,NPX138			Y
OX33942-05	Position Light, Tail			Y
P1-30143	Sw9 Push Button, Cargo Hook Release			Y
P1-70020	Sw8 Push Button, Emergency Release			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
P25070	Bearing, Spherical, Rod End			Y
P25071	INNER BALL			Y
P2A2600	BEARING			Y
P2A2601	Bearing, Slotted Ball			Y
P2A4480	Bearing Assembly			Y
P306ND	LED		Y	
P3-500	VALVE		Y	
P392	Enerpac Hand Pump			Y
P4-400042	Sw3 Push Button, Trim Release			Y
P4-700004	Sw7 PB, Emergency Flotation Inflation			Y
P600-14B	TEMP PROBE		Y	
P7-131128	Sw6 Mini Push Button, Voice Cancel			Y
P7300026-8	Sw1 Mini Push Button, Depart Hover			Y
P7-811121	Sw5 Mini Push Button, Flight Directional			Y
PAI700-5	Compass, Backup			Y
PBS250-1S5S92F	CMPTR,PASS BRF			Y
PBS250-2B5	CONTROL UNIT		Y	
PC3-1-2ZBB	Zus Cup, Remove/Install AFCS Control Pan			Y
PC900ECAP0001	IND/COND.UNI		Y	
PC900ECAP0002	FLOW GAUGE		Y	
PE22078L12	NUT			Y
PE22078L3	NUT			Y
PE22078L4	NUT			Y
PE22078L7	NUT			Y
PE88001-5BF57-5E	BONDING JUMPER, Lower			Y
PE88001-6DF13	Jumper, Bonding, NLG			Y
PFI008H7M015	BUSHING			Y
PLGA1250010	LEE PLUG		Y	
PLGA1560010	PLUG	Y		
PLI012H7M019	Bushing			Y
PM21402	PIN		Y	
PM21482	SWITCH	Y		
PM21495	SWITCH		Y	
PM21668	SWITCH		Y	
PM22314	GRIP ASSY		Y	
PM22569	SWITCH		Y	
PM22635	SWITCH		Y	
PM22903	SWITCH		Y	
PM23090	BUTTON PUSH		Y	
POLN1E24	NIPPLE ASSY			Y
PTA12-000	TELEPHONE ADAPT			Y
PYLB52191	VALVE		Y	
Q4554	LAMP		Y	
Q4597	Fixed Landing Lights			Y
Q50A	Relay			Y
QS100M48S	CLAMP		Y	
R1L-E2	Miliohmeter			Y
R9W1645-826	ELEMENT	Y		
RA3100H1	Circuit Breaker			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
RAWMA11-236-220	SILICONE SEA		Y	
RAWMA11-236-221	SILICONE SEA		Y	
RAWMA13-439-452	D<SEALANT		Y	
RAWMA27-407-082	WEATHER STRP		Y	
RB67-1SK7M	KNOB		Y	
RCL10R	RHEOSTAT		Y	
RDJ206TA13E0301	SLEEVE, SPEEDI			Y
REA054	NUT	Y		
RER65F2000P	RESISTOR		Y	
RER65F47ROP	RESISTOR	Y	Y	
RES9000-00	CBLE,CUTTER KIT			Y
RF5004C-D	CAP, PROTECTION			Y
RF5006C-D	CAP, PROTECTION			Y
RF5008C-D	CAP, PROTECTION			Y
RF5010C-D	CAP, PROTECTION			Y
RF80K	Battery Charger/Analyzer			Y
RJ1208SA21	INSERT		Y	
RJ1709SA9	INSERT		Y	
RJ205SA7L	INSERT		Y	
RJ208SA18	INSERT		Y	
RL24SB7E0238	LOCKING RING		Y	
RL56SB8	INSERT		Y	
RLRR24SB7E0352	LOCKRING		Y	
RMLH2577-054	BARREL NUT		Y	
RMLH2577-098	NUT,BARREL			Y
RMLH2577-108	NUT,BARREL			Y
RP234-00	PROBE, T1		Y	
RPNF10-32SM	NUT	Y		
RR185CD	RING,RETAINI		Y	
RR262	RING	Y		
RR300C	RING	Y		
RRN162	RET. RING		Y	
RRN187	RET. RING		Y	
RS196	RET. RING	Y		
RS50S	RETAINING RI	Y		
RSN2D-BNC	RELAY		Y	
RV4NAYSD502A	RESISTOR		Y	
RV6NAYSD102A	POTENTIOMETE		Y	
RZA10316	SEAT	Y		
S11065-17	RING		Y	
S11370-339	SEAL	Y		
S12223-334	CHANNEL SEAL	Y		
S12604-222	SEAL	Y		
S1435-04077-000	CAP ASSY	Y		
S1450-05133-001	SPRING	Y		
S1510-23133-000	BOLT	Y		
S1510-24063-000	BUSHING	Y		
S1510-24494-000	DECAL	Y		
S1510-26153-000	SPRING	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S1520-61987-000	SPRING	Y		
S1520-62410-004	STUD	Y		
S1525-50527-000	SPRING	Y		
S1525-51221-000	SPACER	Y		
S1535-20124-000	PLUNGER	Y		
S1535-20150-001	GASKET	Y		
S1540-61441-000	BOLT	Y		
S1555-65135-005	FIRE CONT HD	Y		
S1565-20065-000	WINDOW	Y		
S1565-20106-000	GASKET	Y		
S1565-61195-000	NAME PLATE	Y		
S1565-61308-000	LOCK RING	Y		
S1565-61317-000	RING	Y		
S1565-61734-000	BRACKET	Y		
S1565-90090-001	DECAL	Y		
S1610-24036-000	WASHER	Y		
S1610-25083-003	FLAP	Y		
S1610-25083-004	FLAP, ROTOR	Y		
S1610-31001-000	WASHER	Y		
S1610-33002-000	SPACER	Y		
S1610-33109-000	NUT	Y		
S1610-33110-000	NUT	Y		
S1610-33111-000	STOP	Y		
S1610-33114-000	PLUG	Y		
S1610-33115-000	LOCK WASHER	Y		
S1615-30007-101	TIP CAP	Y		
S1615-30113-004	SHIM	Y		
S1615-30113-005	SHIM	Y		
S1615-30113-007	SHIM	Y		
S1620-65104-011	BALL	Y		
S1625-56048-000	FITTING	Y		
S1635-61128-000	PULLEY ASSY	Y		
S1635-61129-000	PULLEY	Y		
S1635-61204-004	SUPPORT, BEARING ASSY	Y		
S1635-61205-000	BEARING RING	Y		
S1635-61206-002	HOUSING	Y		
S1635-61208-041	BUSHING	Y		
S1655-61777-000	TRANSFORMER	Y		
S1840M8A	4-WAY SWITCH	Y		
S30631-222	DOUBLE DELTA	Y		
S30651-213N	SEAL	Y		
S30652-213N	DOUBLER DELTA II	Y		
S32928-014	GLYD RING			Y
S32928-015	GLYD RING			Y
S33865-31P99	SCRAPER RING			Y
S34581-330P5N	SEAL SET	Y		
S53001-03	Standby Attitude Indicator Battery Mount			Y
S6101-20026-049	DECAL	Y		
S6105-02434-003	BUSHING	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6105-03960-001	SHIM		Y	
S6105-03960-003	SHIM	Y		
S6107-65217-001	REPAIR KT	Y		
S6107-65217-002	SERVO CYL. KIT	Y		
S6109-50104-103	COVER L/H	Y		
S6109-50104-104	COVER R/H	Y		
S6109-51548-014	INSTR SIGN	Y		
S6110-21014-000	LOCK	Y		
S6110-21018-000	SHIM	Y		
S6110-21018-001	SHIM	Y		
S6110-21034-001	JUMPER ASSY.	Y		
S6110-21034-002	JUMPER ASSY	Y		
S6110-21034-003	JUMPER ASSY	Y		
S6110-21034-041	JUMPER	Y		
S6110-21041-001	BUSHING	Y		
S6110-21059-000	CONE	Y		
S6110-21071-000	BOLT	Y		
S6110-21073-000	PRESS PLATE	Y		
S6110-21082-000	NUT	Y		
S6110-21084-000	KEY	Y		
S6110-21085-003	BOLT	Y		
S6110-21085-004	BOLT ASSY	Y		
S6110-21086-000	SHIM	Y		
S6110-21087-001	WASHER	Y		
S6110-21111-000	RING	Y		
S6110-21377-011	COVER ASSY	Y		
S6110-21377-042	COVER ASSY	Y		
S6110-23003-000	LOCK	Y		
S6110-23014-001	NUT	Y		
S6110-23017-001	LOCK WASHER	Y		
S6110-23018-000	LOCK NUT	Y		
S6110-23057-001	NUT	Y		
S6110-23058-002	LOCK	Y		
S6110-23061-000	SHIM	Y		
S6110-23061-005	SHIM	Y		
S6110-23065-000	WASHER	Y		
S6110-23067-000	SPACER	Y		
S6110-23068-001	WASHER	Y		
S6110-23075-000	RING	Y		
S6110-23079-000	LINER	Y		
S6110-23085-000	SHIM	Y		
S6110-23092-101	LOCK KEY	Y		
S6110-23096-000	LOCK WASHER	Y		
S6110-23097-000	NUT	Y		
S6110-23127-000	SPANNER	Y		
S6110-23128-000	SPACER	Y		
S6110-23312-001	LINER	Y		
S6110-23312-002	WASHER	Y		
S6110-23313-002	CAP	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6110-23314-003	CAP ASSY.	Y		
S6110-23315-002	LOCK	Y		
S6110-23316-001	SEAL	Y		
S6110-23317-103	SPACER	Y		
S6110-23318-102	SPACER	Y		
S6110-23320-101	PIN	Y		
S6110-23321-009	DOWEL PIN	Y		
S6110-23331-001	NUT	Y		
S6110-23332-001	CAP	Y		
S6110-23344-003	LINER	Y		
S6110-23349-002	SLEEVE ASSY	Y		
S6110-23350-041	SLV& SPDL AY	Y		
S6110-23386-002	PIN	Y		
S6110-23386-007	TANK ASSY	Y		
S6110-23388-003	SPACER	Y		
S6110-23395-001	SHIM	Y		
S6110-23399-003	NUT	Y		
S6110-24004-001	RET. BEARING	Y		
S6110-24005-000	SHIM	Y		
S6110-24006-003	SOCKET	Y		
S6110-24007-000	SHIM	Y		
S6110-24010-000	SHIM	Y		
S6110-24017-000	RING	Y		
S6110-24020-000	TRUNNION	Y		
S6110-24020-001	TRUNNION	Y		
S6110-24025-000	SHIM	Y		
S6110-24032-000	CAP	Y		
S6110-24032-005	CAP	Y		
S6110-24032-006	SWEEP ASSY	Y		
S6110-24033-000	BEARING	Y		
S6110-24041-000	BRACKET	Y		
S6110-24043-001	SPACER	Y		
S6110-24051-000	LINK ASSY	Y		
S6110-24051-000	LINK ASSY	Y		
S6110-24054-000	BUSHING	Y		
S6110-24058-001	BUSHING	Y		
S6110-24058-002	BUSHING	Y		
S6110-24058-003	BUSHING	Y		
S6110-24063-001	SPACER SLEEV	Y		
S6110-24064-001	SPACER	Y		
S6110-24064-002	SPACER	Y		
S6110-24064-003	SPACER	Y		
S6110-24066-000	WASHER	Y		
S6110-24066-001	FLAT WASHER	Y		
S6110-24068-000	SHIM	Y		
S6110-24070-001	BRACKET	Y		
S6110-24076-000	WASHER	Y		
S6110-24084-000	SPACER	Y		
S6110-25001-001	PLUNGER	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6110-25014-001	ADAPTER	Y		
S6110-25043-000	SHAFT	Y		
S6110-25044-000	PIN	Y		
S6110-25072-002	BOLT	Y		
S6110-25081-001	ARM CAM	Y		
S6110-25081-002	ARM	Y		
S6110-25087-101	SHAFT	Y		
S6110-25088-000	SPRING	Y		
S6110-25091-001	SPRING	Y		
S6110-26017-000	FELT WASHER	Y		
S6110-26018-001	CLIP	Y		
S6110-26019-002	ORIFICE	Y		
S6110-26019-003	ROD ASSY	Y		
S6110-26027-001	BOLT	Y		
S6110-26032-001	BOOT	Y		
S6110-26033-101	CAP	Y		
S6110-26035-000	SHIM	Y		
S6110-26038-000	BEARING	Y		
S6110-26039-000	NUT	Y		
S6110-26039-001	NUT RETAINER	Y		
S6110-26044-002	WASHER	Y		
S6110-26063-000	SHOCK ABSORB	Y		
S6110-26065-001	THRUSTWASHER	Y		
S6110-26080-000	WASHER	Y		
S6110-26081-001	FITTING	Y		
S6110-26101-000	VALVE ASSY	Y		
S6110-26101-041	VALVE ASSY	Y		
S6110-26103-101	VALVE	Y		
S6110-26104-101	VALVE	Y		
S6110-26106-002	HOUSING	Y		
S6110-26107-000	FITTING	Y		
S6110-26340-008	PLATE ASSY	Y		
S6110-26340-015	DIPSTICK ASY	Y		
S6110-26341-001	NAMEPLATE	Y		
S6110-26343-105	NAME PLATE	Y		
S6110-26344-003	SEAL	Y		
S6110-26403-041	CYLINDER	Y		
S6110-26405-001	UPPER LUG	Y		
S6110-26406-002	BRACKET ASSY	Y		
S6110-26407-007	GUIDE SHAFT	Y		
S6110-26408-001	BUSHING	Y		
S6110-26408-002	BUSHING	Y		
S6110-26409-001	SPACER	Y		
S6110-26410-001	DOWEL PLATE	Y		
S6110-26430-001	WASHER	Y		
S6110-26430-002	WASHER	Y		
S6110-31002-002	BOLT	Y		
S6110-33003-000	HUB	Y		
S6110-33007-000	SLEEVE	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6110-33406-101	SPINDLE	Y		
S6110-34203-003	LINK	Y		
S6110-34204-001	WASHER	Y		
S6110-34204-002	SHIM	Y		
S6112-21004-101	ID PLATE	Y		
S6112-21009-101	LINK	Y		
S6112-21010-081	CLEVIS ASSY	Y		
S6112-21010-082	CLEVIS ASSY	Y		
S6112-21010-103	WASHER	Y		
S6112-21010-104	SHIM	Y		
S6112-21038-002	BUSHING	Y		
S6112-21038-003	BUSHING	Y		
S6112-23022-002	HINGE	Y		
S6112-23027-041	SPINDLE ASSY	Y		
S6112-23037-102	SEAL	Y		
S6112-23038-001	PACKING	Y		
S6112-23041-102	BUMPER	Y		
S6112-23043-101	WASHER	Y		
S6112-23043-102	WASHER	Y		
S6112-23043-103	WASHER SOCKET	Y		
S6112-23044-122	BUSHING	Y		
S6112-23044-123	BUSHING	Y		
S6112-23044-124	BUSHING	Y		
S6112-23046-103	WASHER	Y		
S6112-23047-104	WINDOW	Y		
S6112-23055-101	SPACER	Y		
S6112-23055-102	SPACER	Y		
S6112-23056-042	RETAINER ASSY	Y		
S6112-23056-108	WASHER	Y		
S6112-23057-001	NUT	Y		
S6112-23062-002	SEAL	Y		
S6112-23071-042	EYEBOLT ASSY	Y		
S6112-23072-041	EYEBOLT	Y		
S6112-23072-102	STRIP	Y		
S6112-23072-103	STRIP	Y		
S6112-23090-101	WASHER	Y		
S6112-23090-102	WASHER	Y		
S6112-23090-104	WASHER	Y		
S6112-23099-101	O RING	Y		
S6112-23099-102	O RING	Y		
S6112-25003-041	HOUSING ASSY	Y		
S6112-26065-001	WASHER	Y		
S6112-33523-102	PITCH ARM	Y		
S6115-20107-012	POCKET	Y		
S6115-20107-013	POCKET	Y		
S6115-20107-017	POCKET	Y		
S6115-20222-002	SEAL	Y		
S6115-20222-003	SEAL	Y		
S6115-20222-004	POCKET SEAL	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6115-20505-006	GASKET	Y		
S6115-20515-001	CAP	Y		
S6115-20520-001	INDICATOR	Y		
S6115-20520-003	BIM IND	Y		
S6117-30014-101	CAP	Y		
S6117-30108-101	STRIP	Y		
S6120-60901-004	CABLE & CORD	Y		
S6120-60901-005	CABLE ASSY	Y		
S6120-60907-001	LATCH ASSY	Y		
S6120-60907-008	Latch	Y		
S6120-60907-011	Latch Assy	Y		
S6120-60907-012	LATCH ASSY	Y		
S6120-60908-003	STOP	Y		
S6120-60908-004	ROD END	Y		
S6120-60908-101	SPINDLE	Y		
S6120-60910-000	SPRING	Y		
S6120-60911-003	FRAME	Y		
S6120-60916-023	Fitting Assy	Y		
S6120-60918-006	FITTING ASSY	Y		
S6120-60919-006	FITTING	Y		
S6120-61004-041	INSTR. PLATE	Y		
S6120-61004-045	ROD	Y		
S6120-61014-001	PLATE	Y		
S6120-61014-002	TUNING PLATE	Y		
S6120-61188-013	SEAL WASHER	Y		
S6120-61188-014	SEAL WASHER	Y		
S6120-61188-016	SEAL	Y		
S6120-61217-007	PLATE	Y		
S6120-61217-008	PLATE	Y		
S6120-61219-003	SEAL	Y		
S6120-61219-004	Seal	Y		
S6120-61219-011	SEAL	Y		
S6120-61219-012	SEAL	Y		
S6120-61220-003	FILLER	Y		
S6120-61220-006	Seal	Y		
S6120-61220-007	SEAL	Y		
S6120-61220-010	SEAL	Y		
S6120-61220-011	SEAL	Y		
S6120-61220-016	SEAL	Y		
S6120-61220-023	SEAL	Y		
S6120-61220-024	SEAL	Y		
S6120-61221-051	FRAME RH	Y		
S6120-61226-001	TRACK ASSY	Y		
S6120-61227-003	WINDOW	Y		
S6120-61227-004	SLOG WINDOW	Y		
S6120-61228-004	WINDOW	Y		
S6120-61237-006	TRACK	Y		
S6120-61237-009	TRACK	Y		
S6120-61245-001	PANEL	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6120-61280-007	SEAL	Y		
S6120-61327-009	WINDOW	Y		
S6120-61329-007	PIN	Y		
S6120-61330-003	EDGING	Y		
S6120-61331-003	HANDLE	Y	Y	
S6120-61350-000	HANDLE ASSY	Y		
S6120-61374-000	Instr Plate	Y		
S6120-61376-004	DECAL	Y		
S6120-62113-043	SUPPORT	Y		
S6120-62114-043	FITTING	Y		
S6120-62114-044	FITTING	Y		
S6120-62126-002	BUSHING	Y		
S6120-62134-033	CABLE ASSY	Y		
S6120-62142-001	HANDLE	Y		
S6120-62142-004	RETAINER	Y		
S6120-62143-001	THUMB LATCH	Y		
S6120-62143-002	LATCH	Y		
S6120-62147-002	SPRING	Y		
S6120-62166-008	LATCH PAN	Y		
S6120-62263-004	PAN	Y		
S6120-62291-007	FITTING	Y		
S6120-62291-008	FITTING	Y		
S6120-62312-019	COVER	Y		
S6120-62404-043	BRACKET ANG	Y		
S6120-62405-001	FITTING	Y		
S6120-62405-002	FITTING	Y		
S6120-62405-003	FITTING	Y		
S6120-62406-016	STIFFENER	Y		
S6120-62511-007	STRAP ASSY	Y		
S6120-62596-006	SEAL	Y		
S6120-62611-038	HINGE	Y		
S6120-62611-054	HINGE	Y		
S6120-62620-005	PANEL	Y		
S6120-62620-015	HINGE	Y		
S6120-63002-024	SEAL	Y		
S6120-63002-025	SHIELD	Y		
S6120-63141-006	PLUG	Y		
S6120-63164-007	SEAL	Y		
S6120-63212-092	GASKET	Y		
S6120-64193-011	TEE	Y		
s6120-65103-007	Hinge	Y		
S6120-65123-001	BUSHING	Y		
S6120-65123-003	BUSHING	Y		
S6120-65164-004	Bolt	Y		
S6120-65187-002	TEE	Y		
S6120-65190-001	SUPPORT	Y		
S6120-70357-007	HOSE	Y		
S6120-70357-013	HOSE	Y		
S6120-70392-063	STRAP	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6120-71118-001	PIVOT STUD	Y		
S6120-72234-015	SEAL	Y		
S6120-72234-045	RETAINER	Y		
S6120-72234-057	FITTING	Y		
S6120-72290-001	STEP ASSY.	Y		
S6120-72333-011	SEAL	Y		
S6120-72333-012	SEAL	Y		
S6120-72333-013	SEAL	Y		
S6120-72333-014	SEAL	Y		
S6120-72333-015	SEAL	Y		
S6120-72333-019	SEAL	Y		
S6120-72333-020	SEAL	Y		
S6120-72340-011	PLATE	Y		
S6120-72401-005	CLEVIS	Y		
S6120-72500-006	CHAFING STRI	Y		
S6120-72501-012	GROMMET	Y		
S6120-72502-009	ANGLE	Y		
S6120-72502-155	ZEE	Y		
S6120-72505-041	HINGE	Y		
S6120-72505-103	BUSHING	Y		
S6120-72506-028	ROD	Y		
S6120-72506-032	SPACER	Y		
S6120-72506-036	SPINDLE	Y		
S6120-72506-041	BLOCK ASSY	Y		
S6120-72507-010	LATCH ASSY	Y		
S6120-72509-002	Bracket	Y		
S6120-72510-023	FITTING	Y		
S6120-72511-001	FITTING	Y		
S6120-72511-002	FITTING	Y		
S6120-72512-005	CABLE ASSY	Y		
S6120-72515-002	STRIKER	Y		
S6120-72518-005	ROD END	Y		
S6120-72518-006	ROD END	Y		
S6120-72518-007	ROD END	Y		
S6120-72518-023	POST ASSY.	Y		
S6120-72519-014	ROD END	Y		
S6120-72519-026	ROD END	Y		
S6120-72519-046	TUBE	Y		
S6120-72521-001	HANDLE	Y		
S6120-72521-002	SCREW	Y		
S6120-72527-004	BUMPER	Y		
S6120-72533-003	RETAINER	Y		
S6120-72535-001	SPRING	Y		
S6120-72536-007	ARBOR	Y		
S6120-72601-005	SEAL	Y		
S6120-72601-006	SEAL	Y		
S6120-72605-011	SPACER	Y		
S6120-72606-035	SHAFT ASSY	Y		
S6120-72612-007	FITTING	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6120-72612-010	BOLT RETAINER	Y		
S6120-72613-002	STOP CAM	Y		
S6120-72613-004	BOLT	Y		
S6120-72613-005	ROLLER LATCH	Y		
S6120-72614-001	LINK	Y		
S6120-72618-008	STOP	Y		
S6120-72624-013	SPINDLE	Y		
S6120-72626-003	PIN	Y		
S6120-72629-004	ANGLE	Y		
S6120-72632-016	GUIDE	Y		
S6120-72632-017	PLATE	Y		
S6120-72638-003	SPRING	Y		
S6120-73069-003	BUSHING	Y		
S6120-73425-005	BUSHING	Y		
S6120-73425-008	ROD ASSY	Y		
S6120-73441-001	GUARD	Y		
S6120-73451-002	I.D PLATE	Y		
S6120-73475-002	VENT	Y		
S6120-74167-022	FITTING ASSY	Y		
S6120-74167-024	FITTING ASSY	Y		
S6120-74167-025	FITTING ASSY	Y		
S6120-74167-026	FITTING ASSY	Y		
S6120-74168-007	FITTING	Y		
S6120-74168-008	BRACKET	Y		
S6120-76133-000	FITTING	Y		
S6120-76153-001	FITTING	Y		
S6120-76153-002	FITTING	Y		
S6120-76159-062	SHIM	Y		
S6120-76261-013	FITTING	Y		
S6120-76262-013	FITTING	Y		
S6120-76263-001	BUSHING	Y		
S6120-76263-002	BUSHING	Y		
S6120-76268-020	SHIM	Y		
S6120-76268-021	SHIM	Y		
S6120-76269-033	SHIM	Y		
S6120-76269-037	SHIM	Y		
S6120-76271-012	SHIM	Y	Y	
S6120-76287-003	BUSHING	Y		
S6120-76293-009	HINGE HALF	Y		
S6120-76293-010	Hinge Pin	Y		
S6120-76310-002	FITTING ASSY	Y		
S6120-76311-002	FITTING	Y		
S6120-76312-011	SHIM	Y		
S6120-76313-016	SHIM	Y		
S6120-76313-017	SHIM	Y		
S6121-62762-007	CABLE ASSY	Y		
S6121-62845-000	COVER	Y		
S6121-67033-002	HOUSING	Y		
S6121-67033-004	BALL	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6122-82310-022	WELD ASSY	Y		
S6122-82413-014	GASKET	Y		
S6122-82450-003	FITTING	Y		
S6122-87734-012	PLUG ASSY	Y	Y	
S6125-50104-003	LINK ASSY	Y		
S6125-50105-000	PISTON	Y		
S6125-50107-000	BOLT	Y		
S6125-50110-000	BEARING	Y		
S6125-50111-000	NUT-PACKING	Y		
S6125-50112-000	TRUNNION AY	Y		
S6125-50113-003	ARM ASSY	Y		
S6125-50115-041	AXLE	Y		
S6125-50117-000	PISTON	Y		
S6125-50119-000	NUT	Y		
S6125-50122-000	Roller Assy	Y		
S6125-50122-002	PIN	Y		
S6125-50124-000	SPACER	Y		
S6125-50138-002	ARM ASSY	Y	Y	
S6125-50155-000	SLEEVE	Y		
S6125-50157-000	RING	Y		
S6125-50174-001	BRACKET	Y		
S6125-50175-000	WASHER	Y		
S6125-50190-001	SPACER	Y		
S6125-50193-001	BUMPER	Y		
S6125-50196-001	ROLLER	Y		
S6125-50204-002	PLATE	Y		
S6125-50219-005	BRACE ASSY	Y		
S6125-50264-001	SLEEVE	Y		
S6125-50265-001	TRUNNION	Y		
S6125-50307-004	SHIM	Y		
S6125-50309-001	I.D. PLATE	Y		
S6125-50504-010	SUPPORT ASSY	Y		
S6125-50506-000	CAP	Y		
S6125-50507-000	FITTING	Y		
S6125-50508-002	INSERT	Y		
S6125-50509-000	WHEEL AXLE	Y		
S6125-50513-000	SPACER	Y		
S6125-50514-000	BUSHING	Y		
S6125-50515-000	SPACER	Y		
S6125-50517-000	COLLAR	Y		
S6125-50518-000	SLEEVE	Y		
S6125-50519-000	NAME PLATE	Y		
S6125-50522-000	PISTON ASSY	Y		
S6125-50524-000	BEARING	Y		
S6125-50529-000	ADAPTER	Y		
S6125-50534-003	PIN	Y		
S6125-50536-000	DECAL	Y		
S6125-50537-000	SHIM	Y		
S6125-50542-002	EYE BOLT	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6125-50543-001	I.D. PLATE	Y		
S6125-50546-000	WASHER	Y		
S6125-50549-001	SHIM	Y		
S6125-50585-001	ID PLATE	Y		
S6125-50587-001	CYLINDER	Y		
S6125-50588-001	BOLT RET	Y		
S6125-50589-001	PLATE, INSTR	Y		
S6125-50591-001	DISCHARGER	Y		
S6125-50601-001	BUSHING	Y		
S6125-50602-001	LOCK PIN	Y		
S6125-51217-041	FITTING	Y		
S6125-51221-001	SHIM	Y		
S6125-51221-002	WASHER	Y		
S6125-51230-101	WASHER	Y		
S6125-55004-101	FLOAT	Y		
S6125-55005-004	CLAMP	Y		
S6125-55006-010	CORD	Y		
S6125-55011-001	CYLINDER ASSY.	Y		
S6125-61004-039	TUBE	Y		
S6125-61004-041	TUBE ASSY	Y		
S6125-61806-000	CONT. ASSY	Y		
S6126-50101-004	FAIRING	Y		
S6126-50101-005	RIB	Y		
S6126-50101-006	FAIRING	Y		
S6126-61819-002	PLACARD	Y	Y	
S6127-50156-001	PIN	Y		
S6130-61051-004	FAIRLEAD	Y		
S6130-61052-001	KEY	Y		
S6130-61095-001	ROD END	Y		
S6130-61096-001	DECAL	Y		
S6130-62007-002	FAIRLEAD	Y		
S6130-62010-007	CLAMP	Y		
S6130-62017-003	PLATE	Y		
S6130-62017-004	PLATE	Y		
S6130-62029-001	SPACER	Y		
S6130-62037-001	NUT CHECK	Y		
S6130-62057-003	WASHER	Y		
S6130-62059-001	SWITCH	Y		
S6130-62141-089	TUBE ASSY	Y		
S6130-62141-093	TUBE ASSY	Y		
S6130-62141-095	TUBE ASSY	Y		
S6130-62141-105	TUBE ASSY	Y		
S6130-62150-003	HOSE ASSY	Y		
S6130-62150-004	HOSE ASSY	Y		
S6130-62171-047	TUBE	Y		
S6130-62171-057	TUBE	Y		
S6130-62205-007	HOSE ASSY	Y		
S6130-62235-000	SWITCH ASSY.	Y		
S6130-63005-277	Tube	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6130-63005-315	Tube	Y		
S6130-63008-001	GASKET	Y		
S6130-63010-002	POPPET DRAIN	Y		
S6130-63014-007	FILLER CAP	Y		
S6130-63018-000	PRESS SWITCH	Y		
S6130-63023-001	GASKET	Y		
S6130-63023-002	GASKET	Y		
S6130-63204-173	TUBE	Y		
S6130-63204-207	TUBE ASSY	Y		
S6130-80041-001	Sleeve	Y		
S6130-80041-002	PIN	Y		
S6130-80042-001	GEAR BOX ASSY	Y		
S6130-80043-002	GEAR	Y		
S6130-80043-010	BUSHING	Y		
S6130-80045-001	TUBE ASSY	Y		
S6130-80045-006	PIN	Y		
S6130-80045-015	Tube Assy	Y		
S6130-80048-004	PIN	Y		
S6130-80062-000	SPRING	Y		
S6130-80066-000	ARM	Y		
S6130-80068-000	SPRING	Y		
S6130-80070-000	SPACER	Y		
S6130-80072-000	SPRING	Y		
S6130-80073-001	SPRING	Y		
S6130-80073-002	SPRING	Y		
S6130-80075-003	SHAFT	Y		
S6130-80076-001	TUBE ASSY	Y		
S6130-80076-002	TUBE ASSY	Y		
S6130-80080-001	LINK	Y		
S6130-80082-001	HOOK	Y		
S6130-80082-002	HOOK	Y		
S6130-80083-002	PIN	Y		
S6130-80083-003	PIN	Y		
S6130-80083-004	Pin	Y		
S6130-80083-005	PIN	Y		
S6130-80085-014	COVER ASSY	Y		
S6130-80087-000	BUMPER	Y		
S6130-80096-001	PINION	Y		
S6130-80097-001	RACK	Y		
S6130-80097-002	RACK	Y		
S6130-80099-002	BRACKET	Y		
S6130-80145-009	FRAME ASSY	Y		
S6130-80148-001	SUPPORT LATC	Y		
S6130-80166-001	CLAMP ASSY	Y		
S6130-80166-002	CLAMP ASSY	Y		
S6130-80167-001	SEAL	Y		
S6130-80169-001	TAIL PIPE ASSY	Y		
S6130-80172-002	DEFLECTOR	Y		
S6130-80220-000	GASKET	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6130-80222-000	FITTING	Y		
S6130-80241-101	Snubber	Y		
S6130-80305-001	ADAPTER	Y		
S6130-80306-000	SUPPORT	Y		
S6130-80409-001	UNION	Y		
S6130-80415-001	HOSE	Y		
S6130-80506-000	WASHER	Y		
S6130-80508-000	SEAT	Y		
S6130-80515-002	SCREW	Y		
S6130-80516-001	GUIDE	Y		
S6132-61018-001	COVER	Y		
S6132-62401-113	TUBE ASSY	Y		
S6132-80170-001	Strap Assy	Y		
S6132-80205-001	OIL RING	Y		
S6134-62101-095	TUBE ASSY	Y		
S6134-62175-003	CABLE ASSY	Y		
S6135-20014-006	STUD ASSY	Y		
S6135-20027-000	SPACER	Y		
S6135-20058-000	SHIM	Y		
S6135-20058-101	SHIM	Y		
S6135-20059-101	O-RING	Y		
S6135-20059-102	O-RING	Y		
S6135-20059-103	O-RING	Y		
S6135-20059-105	O-RING	Y		
S6135-20059-106	O-RING	Y		
S6135-20059-107	O-RING	Y		
S6135-20059-109	O-RING	Y		
S6135-20072-004	SCREW	Y		
S6135-20086-000	BEARING	Y		
S6135-20108-101	FLANGE COUPL	Y		
S6135-20111-000	SHIM	Y		
S6135-20125-001	PLATE	Y		
S6135-20147-002	HOUSING	Y		
S6135-20151-001	SCREW	Y		
S6135-20198-000	WASHER	Y		
S6135-20198-101	WASHER	Y		
S6135-20242-002	BUSHING	Y		
S6135-20253-000	WASHER	Y		
S6135-20272-000	BREATHER	Y		
S6135-20273-000	SHIM	Y		
S6135-20298-000	INSULATOR	Y		
S6135-20320-000	BRG. SLEEVE	Y		
S6135-20350-001	TIP	Y		
S6135-20362-001	SPRING	Y		
S6135-20388-002	PRESS SWITCH	Y		
S6135-20407-037	TUBE ASSY	Y		
S6135-20407-203	TUBE	Y		
S6135-20407-209	TUBE	Y		
S6135-20407-210	TUBE	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6135-20407-212	TUBE ASSY	Y		
S6135-20407-216	TUBE ASSY	Y		
S6135-20407-217	TUBE	Y		
S6135-20407-218	TUBE ASSY	Y		
S6135-20407-219	TUBE	Y		
S6135-20407-220	TUBE ASSY	Y		
S6135-20407-228	TUBE	Y		
S6135-20407-267	TUBE ASSY	Y		
S6135-20407-271	TUBE ASSY	Y		
S6135-20420-000	RUBBER STRIP	Y		
S6135-20608-003	GEAR	Y		
S6135-20614-041	CAM ASSY	Y		
S6135-20623-001	SPACER	Y		
S6135-20626-001	SPACER	Y		
S6135-20642-000	SPACER	Y		
S6135-20643-002	YOKE	Y		
S6135-20648-002	RETAINER	Y		
S6135-20649-001	BEARING	Y		
S6135-20650-001	SLEEVE BRG	Y		
S6135-20653-104	SPACER	Y		
S6135-20654-102	NUT	Y		
S6135-20667-001	SHIM	Y		
S6135-20668-002	SPACER	Y		
S6135-20668-003	SPACER	Y		
S6135-20673-001	SETSCREW	Y		
S6135-20673-002	SETSCREW	Y		
S6135-20676-000	WASHER	Y		
S6135-20683-001	BEARING	Y		
S6135-20686-000	SHIM	Y		
S6135-20691-000	RET. RING	Y		
S6135-20695-003	GEAR HSG.	Y		
S6135-20697-001	O RING	Y		
S6135-20697-101	PACKING	Y		
S6135-20699-101	PIN	Y		
S6135-20704-002	COUPLING	Y		
S6135-20707-101	BOLT	Y		
S6135-20710-000	WASHER	Y		
S6135-20711-001	BOLT	Y		
S6135-20712-003	COUPLING	Y		
S6135-20713-001	COUPLING	Y		
S6135-20714-001	LOCKWASHER	Y		
S6135-20716-000	SHIELD	Y		
S6135-20721-001	TUBE	Y		
S6135-20721-003	PIPE	Y		
S6135-20721-005	TUBE ASSY	Y		
S6135-20723-000	PLUG	Y		
S6135-20724-000	PLUG	Y		
S6135-20725-000	PLUG	Y		
S6135-20727-000	PLUG	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6135-20728-000	SPRING	Y		
S6135-20730-000	RETAINER	Y		
S6135-20743-000	DECAL	Y		
S6135-20744-000	BRACKET	Y		
S6135-20746-001	SUPPORT	Y		
S6135-20747-001	SPACER	Y		
S6135-20748-001	RING	Y		
S6135-20749-001	BUSHING	Y		
S6135-20754-104	BUSHING	Y		
S6135-20755-002	PIN	Y		
S6135-20755-103	PIN, CAM	Y		
S6135-20776-001	SPRING	Y		
S6135-20783-002	SLEEVE	Y		
S6135-20787-002	RET. PLATE	Y		
S6135-20791-008	HOSE ASSY	Y		
S6135-20797-012	SEAL	Y		
S6135-20838-001	SPACER	Y		
S6135-20838-002	SPACER	Y		
S6135-20844-001	CLIP	Y		
S6135-20856-002	PLUG	Y		
S6135-20863-002	BOLT	Y		
S6135-20866-001	DECAL	Y		
S6135-20957-002	PINION	Y		
S6135-20971-001	PIN	Y		
S6135-22047-001	WASHER	Y		
S6135-22074-015	UNION	Y		
S6135-22074-016	FITTING	Y		
S6135-22077-001	PLUG/BUSHING	Y		
S6135-61040-000	SHIM	Y		
S6135-61042-001	SHIM	Y		
S6135-64013-002	FLANGE	Y		
S6135-64014-000	PLATE	Y		
S6135-64019-004	PLATE	Y		
S6135-64019-007	WASHER	Y		
S6135-64021-000	SHIM	Y		
S6135-64027-000	PLATE	Y		
S6135-64028-001	SHIM	Y	Y	
S6135-64028-002	SHIM	Y	Y	
S6135-64028-003	SHIM	Y		
S6135-64028-004	SHIM	Y		
S6135-64029-000	PULLEY	Y		
S6135-64031-000	WASHER	Y		
S6135-64032-000	PLATE	Y		
S6135-64037-000	WASHER	Y		
S6135-64042-001	SUPPORT	Y		
S6135-64210-101	COUPLING	Y		
S6135-66208-005	NAME PLATE	Y		
S6135-66232-000	SPACER	Y		
S6135-66233-000	SPACER	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6135-66235-000	BREATHER	Y		
S6135-66237-000	SHIM	Y		
S6135-66242-000	SHIM	Y		
S6135-66248-001	WINDOW	Y		
S6135-66255-000	JAW AY	Y		
S6135-66321-002	FLANGE	Y		
S6135-66324-001	BRACKET ASSY	Y		
S6135-66325-001	PLUG	Y		
S6135-66650-000	WASHER	Y		
S6135-66651-001	SHIM	Y		
S6135-66653-000	SHIM	Y		
S6135-66654-000	SHIM	Y		
S6135-66668-001	SPACER	Y		
S6135-66706-002	SHAFT ASSY	Y		
S6136-64048-001	WASHER	Y		
S6137-23040-001	MAIN SHAFT	Y		
S6137-23071-002	PLATE IDENT	Y		
S6137-23074-001	DECAL	Y		
S6137-23078-001	SPRING	Y		
S6137-23084-008	Insert	Y		
S6137-64325-102	HOUSING	Y	Y	
S6137-64329-002	TUBE ASSY	Y	Y	
S6137-66709-001	WOODRUFF KEY	Y		
S6137-66712-002	BOLT	Y		
S6140-61103-000	CYLIC TUBE	Y		
S6140-61130-001	ROD	Y		
S6140-61130-002	ROD ASSY	Y		
S6140-61130-018	ROD ASSY	Y		
S6140-61130-020	ROD ASSY	Y		
S6140-61130-021	ROD	Y		
S6140-61130-070	TUBE	Y		
S6140-61130-071	ROD	Y		
S6140-61138-002	BOOT	Y		
S6140-61418-002	FITTING	Y		
S6140-61419-002	FRICT. BLOCK	Y		
S6140-61419-003	COLLET	Y		
S6140-61422-000	DECAL	Y		
S6140-61617-001	SUPPORT ASSY	Y		
S6140-61627-003	ARM ASSY	Y		
S6140-61631-004	SHAFT ASSY.	Y		
S6140-62147-000	SHIM	Y		
S6140-62151-012	Cleat	Y	Y	
S6140-62516-002	Boot Assy	Y		
S6140-62604-005	QUADRANT ASY	Y		
S6140-62614-009	ARM ASSY	Y		
S6140-62618-001	FAIRLEAD	Y		
S6140-62618-002	FAIR LEAD	Y		
S6140-62618-010	FAIRLEAD	Y		
S6140-62619-000	ROD	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6140-62620-008	BELLCRANK AY	Y		
S6140-62701-001	CABLE ASSY	Y		
S6140-62701-002	CABLE ASSY	Y		
S6140-65602-005	QUADRANT	Y		
S6140-65612-001	CABLE ASSY	Y		
S6140-65612-002	CABLE ASSY	Y		
S6140-65612-011	CABLE ASY	Y		
S6140-65612-012	CABLE	Y		
S6140-65612-015	CABLE ASSY	Y		
S6140-65612-017	CABLE ASSY	Y		
S6140-65612-018	CABLE	Y		
S6140-65613-000	BOOT	Y		
S6140-66102-006	Support	Y		
S6140-66105-006	SUPPORT	Y		
S6140-66106-006	BELLCRANK AY	Y		
S6140-66604-006	Guide	Y		
S6140-66604-008	ADAPTOR	Y		
S6140-66604-014	PIN	Y		
S6140-66604-102	DECAL	Y		
S6140-66611-005	BELLCRANK	Y		
S6140-66613-000	OIL SEAL	Y		
S6140-66614-002	INSERT	Y		
S6140-66615-000	WASHER	Y		
S6145-61159-101	GEAR IND.	Y		
S6145-61445-001	VERTICAL IND	Y		
S6145-62023-005	GASKET	Y		
S6145-62023-017	MAST ASSY	Y		
S6145-62024-003	TUBE ASSY	Y		
S6145-62024-023	SLEEVE	Y		
S6150-60106-003	TUBE ASSY.	Y		
S6150-60106-031	TUBE	Y		
S6150-60106-033	TUBE ASSY	Y		
S6150-60106-039	Tube	Y		
S6150-60106-041	Tube Assy	Y		
S6150-60106-043	TUBE ASSY	Y		
S6150-60106-045	TUBE	Y		
S6150-60106-047	TUBE	Y		
S6150-60106-049	TUBE ASSY	Y		
S6150-60106-051	LINE	Y		
S6150-60121-005	GROMMET	Y		
S6150-61102-001	TRACK	Y		
S6150-62457-006	FLEX DUCT	Y		
S6150-62457-007	FLEX DUCT	Y		
S6150-62778-002	SHADE ASSY	Y		
S6155-61112-001	INSTRUCTION	Y		
S6155-61569-005	STANDOFF	Y		
S6155-61574-001	BLOCK	Y		
S6155-62066-005	INSERT	Y		
S6155-63044-002	PLATE, INSTR	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6155-63121-015	VENT TUBE	Y		
S6155-80109-026	THERMOCOUPLE	Y		
S6160-60073-001	MAST	Y		
S6160-60087-001	PIN	Y		
S6162-60872-102	GASKET	Y		
S6164-60082-101	BRACKET	Y		
S6165-20202-003	HOUSING ASSY	Y		
S6165-20224-000	COLLAR ASSY	Y		
S6165-20226-002	BOLT	Y		
S6165-20227-000	DECAL	Y		
S6165-20232-003	TRUNNION ASY	Y		
S6165-20233-001	ROD, PISTON	Y		
S6165-20234-000	ROD	Y		
S6165-20236-004	VALVE	Y		
S6165-20238-004	CLEVIS	Y		
S6165-20242-000	KEY	Y		
S6165-20250-000	BUSHING	Y		
S6165-20254-000	SLEEVE LINER	Y		
S6165-20262-000	SPRING	Y		
S6165-20282-102	BUSHING	Y		
S6165-20283-042	CAP	Y		
S6165-20544-000	GASKET	Y		
S6165-20564-000	SHIM	Y		
S6165-20596-000	SPRING	Y		
S6165-20609-000	PIN	Y		
S6165-20626-000	SHIM	Y		
S6165-61509-000	PISTON	Y		
S6165-61511-000	CAP	Y		
S6165-61527-000	SPACER	Y		
S6165-61530-000	VALVE	Y		
S6165-61549-000	PISTON	Y		
S6165-61561-000	SLEEVE	Y		
S6165-61568-000	ROD END	Y		
S6165-61570-001	WASHER	Y		
S6165-61570-002	WASHER	Y		
S6165-61580-000	SPRING	Y		
S6165-61581-000	SPRING	Y		
S6165-61600-001	ROD	Y		
S6165-61606-001	HOUSING	Y		
S6165-61606-002	HOUSING	Y		
S6165-61618-001	SHIM	Y		
S6165-61618-002	SHIM	Y		
S6165-61618-003	WASHER	Y		
S6165-61620-003	LINK ASSY.	Y		
S6165-61621-000	NUT	Y		
S6165-61626-000	COVER	Y		
S6165-61627-000	Cover	Y		
S6165-61628-000	SLEEVE	Y		
S6165-61664-000	SCREW	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6165-62085-117	TUBE ASSY	Y		
S6165-62085-159	TUBE	Y		
S6165-62085-179	TUBE ASSY	Y		
S6165-62085-259	TUBE	Y		
S6165-62116-101	INSTR. PLATE	Y		
S6165-62413-000	STRAINER	Y		
S6165-63103-002	CAP	Y		
S6165-63104-001	CYLINDER	Y		
S6165-63105-000	PISTON	Y		
S6165-63106-005	HOUSING	Y		
S6165-63109-000	PISTON STRAP	Y		
S6165-63110-000	Act. Rod	Y		
S6165-63113-000	SPRING	Y		
S6165-63114-000	NUT	Y		
S6165-63115-000	NUT	Y		
S6165-63116-000	PLUG	Y		
S6165-63117-000	NUT	Y		
S6165-63118-000	ROD END	Y		
S6165-63119-001	GASKET	Y		
S6165-63157-003	WASHER	Y		
S6165-63157-004	WASHER	Y		
S6165-63502-004	DECAL	Y		
S6165-63502-005	DECAL	Y		
S6165-63505-000	DECAL	Y		
S6165-63507-001	DECAL	Y		
S6165-63507-003	PLATE INSTR.	Y		
S6165-63514-001	DECAL	Y		
S6167-62501-001	SPRING	Y		
S6170-50103-000	COVER, PILOT	Y		
S6170-70070-000	PIN ASSY	Y		
S6170-70075-001	MRB TIE DOWN	Y		
S6180-63156-001	BEARING	Y		
S6180-63156-002	BUSHING	Y		
S6188-20032-016	WINDOW	Y		
S6188-20032-017	WINDOW	Y		
S6188-20032-021	WINDOW	Y		
S6188-20037-028	TUBE ASSY	Y		
S6188-20044-001	SEAL	Y		
S6188-25004-001	RING	Y		
S6188-60229-011	CLAMP	Y	Y	
S6190-60030-000	SYNCRO ASSY.	Y		
S6190-60030-001	SYNCHRO ASSY	Y		
S6190-61075-004	KNOB ASSY	Y		
S6209-25006-008	BRACKET	Y		
S6225-50129-000	WASHER	Y		
S6225-50526-001	PIN	Y		
S6225-61005-001	BOOT	Y		
S6230-62044-045	CABLE ASSY	Y		
S6230-62102-000	REDUCER	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
S6230-63046-001	VALVE FLOAT	Y		
S6230-80402-001	BUSHING	Y		
S6235-64029-003	DUCT	Y		
S6250-61069-003	DUCT	Y		
S6250-61100-003	STOP	Y		
S6410-30401-104	DECAL	Y		
S6435-66214-103	DECAL	Y		
S67-2002-4	RAD ALT ANT			Y
S8157AU87-062	Washer, Special			Y
S9094B	Seal Puller			Y
S92-723	Adapter Kit, Pitot/Static, Air Data Test			Y
S9412-672	PACKING			Y
S9413-113	Packing			Y
S9413-554	PACKING			Y
SA5-20A	BEARING	Y	Y	
SB1056-2	BEARING	Y		
SB1057-1	BEARING	Y		
SB1058-1	BEARING	Y		
SB1100-3	BEARING	Y		
SB1114-5	Bearing	Y		
SB1120-1	BEARING	Y		
SB1138-102	BEARING	Y	Y	
SB1149-101	Bearing, Tail Drive Shaft Support			Y
SB1164-101	BEARING	Y		
SB1500-1	BEARING	Y		
SB1518-1	BEARING	Y		
SB1519-2	BEARING	Y		
SB1555-102	BEARING	Y		
SB1555-201	SEAL	Y		
SB1562-101	BEARING	Y		
SB1565-101	Bearing, MR Swashplate			Y
SB2103-105	BEARING	Y		
SB2106-103	BEARING	Y		
SB2158-102	BEARING	Y		
SB2300-104	BEARING	Y		
SB2310-102	Bearing, Spherical, PC Shaft to Servo			Y
SB2405-4	BEARING	Y		
SB2500-3	BEARING	Y		
SB2501-1	BEARING	Y		
SB2505-3	BEARING	Y		
SB2604-1	BEARING	Y		
SB2605-1	ROLLER	Y		
SB2606-1	BEARING	Y		
SB3151B1	BEARING	Y		
SB3160B1	BEARING	Y		
SB3207B1	BEARING	Y		
SB3208A1	BEARING	Y		
SB3208B1	BEARING	Y		
SB3209A1	CONE,BEARING	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SB3253B1	BEARING	Y		
SB3254A1	BEARING	Y		
SB3254B1	BEARING	Y		
SB3255A1	Bearing	Y		
SB3255B1	BEARING	Y		
SB3306A1	BEARING	Y		
SB3307A1	BEARING		Y	
SB3307B1	BEARING		Y	
SB3309B1	BEARING	Y		
SB3310B1	BEARING	Y		
SB3400A1	BEARING	Y		
SB3501-103	BEARING	Y		
SB3501-202	BEARING	Y		
SB3601B1	BEARING	Y		
SB3602A1	Bearing	Y		
SB3615-203	BEARING	Y		
SB5002-1	BEARING	Y		
SB5007-102	BEARING		Y	
SB5011-102	Bearing, Uniball Inner Race			Y
SB5011-103	Bearing, Uniball Outer Race			Y
SB5063-101	BEARING	Y		
SB5064-102	BEARING		Y	
SB5079-102	BEARING		Y	
SB5080-102	BEARING		Y	
SB5081-102	BEARING		Y	
SB5089-101	Spherical Bearing, Stationary Scissor At			Y
SB5089-102	Spherical Bearing, Rotating Scissor Atta			Y
SB5103-21	BEARING	Y		
SB5103-22	BEARING	Y		
SB5200-1	BEARING		Y	
SB5200-103	BEARING		Y	
SB5206-104	INNER RACE		Y	
SB5206-202	BEARING		Y	
SB5208-103	BEARING		Y	
SB5214-101	Lower Link Bushing Pairs			Y
SB5214-102	Lower Link Bushing Pairs			Y
SB5214-103	Upper Link Bushing Pairs			Y
SB5214-104	Upper Link Bushing Pairs			Y
SB5215-101	Bearing, Pilot Droop Stop/Anti-Flap			Y
SB5301-106	BEARING		Y	
SB5303-103	BEARING		Y	
SB7003-102	BEARING		Y	
SB7006-101	Elastomeric Bearing, Focus			Y
SB7112-101	BEARING		Y	
SB7113-101	Upper Rod End Elastomeric Bearing Assy			Y
SB7113-102	ROD END			Y
SB7114-101	Lower Rod End Elastomeric Bearing Assy			Y
SB7115-102	Outboard Rod End, Pitch Control Rod			Y
SB7116-102	Inboard Rod End, Pitch control Rod			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SB7303-102	SNUBBER		Y	
SB7304-101	Damper Rod End/Bearing Assy, Inboard			Y
SB7305-102	Damper Rod End/Bearing Assy, Outboard			Y
SB7306-102	Snubber Damper, Tail Blade			Y
SB8001-101	SEAL		Y	
SB8003-101	SEAL		Y	
SB8208-102	SEAL		Y	
SB8209-101	SEAL		Y	
SB8209-103	SEAL		Y	
SB8211-101	BEARING	Y		
SB8215-101	SEAL, Standpipe			Y
SB8216-101	SEAL, OIL, OUTPUT SCRAPER			Y
SB8217-101	Seal, Tail Take-off, MGB			Y
SB8404-103	SPLIT MAST SEAL		Y	
SB8409-101	Seal, Swashplate Guide			Y
SB8410-101	Tail Gearbox Output Seal			Y
SB8504-101	Seal, Input Module Drive Shaft			Y
SC518099CLA01	Crew Chief Tool Box			Y
SC628EJ	Attitude Indicator Alarm			Y
SD130P	Relay			Y
SEL0C19EL	T-5 INDIC		Y	
SF111-14SA38A	STUD	Y		
SF111-14SA46A	STUD	Y		
SF111-14SA50A	STUD	Y		
SFHP5006L01BK	Plug, Button, Repair Overhead Circuit Br			Y
SFJ101-13SA9	STUD		Y	
SL61M1138-104	WASHER	Y		
SLR50-7A	RETAINER		Y	
SLW7080-8FM	LOCKWASHER		Y	
SLW7087PM	LOCKWASHER		Y	
SM600BA10N1	C/BREAKER		Y	
SM600BA5N1	REM CTRL C/B		Y	
SPC75B	INVERTER		Y	
SPS122881-30	BOLT		Y	
SR162L	Insert			Y
SR258L	Insert			Y
SR314L	Insert			Y
SR374L	Insert			Y
SS1032BU1964	CAPNUT		Y	
SS1052-3	CLIP		Y	
SS1057-4	CLIP	Y		
SS27576-10-24	BOLT		Y	
SS27576-4-10	Bolt			Y
SS27576-4-18	BOLT			Y
SS27576-4-23	BOLT	Y		
SS27576-4-26	BOLT		Y	
SS27576-4-29	BOLT	Y	Y	
SS27576-4-39	BOLT		Y	
SS27576-4-43	BOLT		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS27576-4-47	BOLT		Y	
SS27576-4-67	BOLT		Y	
SS27576-4-68	BOLT		Y	
SS27576-4-69	BOLTS		Y	
SS27576-5-12	BOLT		Y	
SS27576-5-26	BOLT		Y	
SS27576-5-32	BOLT		Y	
SS27576-5-51	BOLT		Y	
SS27576-6-33	BOLT		Y	
SS27576-6-78	BOLT	Y		
SS27577-4-38	BOLT		Y	
SS2910-08360	FILLER		Y	
SS2942-19	SEAL		Y	
SS2950-02	BOOT	Y		
SS3990-001	PLUG ASSY	Y		
SS3999-2	PLUG		Y	
SS3999-3	PLUG	Y	Y	
SS4004	BUSHING		Y	
SS4007-4-15	BUSHING		Y	
SS4007-4-31	BUSHING			Y
SS4007-6-39	BUSHING		Y	
SS4008A5-32	BUSHING		Y	
SS4017-6	JET	Y		
SS4017-8	JET		Y	
SS4019-6E	SEAL	Y		
SS40-1A040000	HOSE ASSY	Y		
SS4020-12E	Gasket	Y		
SS4020-17E	GASKET	Y		
SS4027-5E	SEAL	Y		
SS4031	PLUG		Y	
SS4033-16	PLUG	Y		
SS4045-4P26	BUSHING,SLV		Y	
SS4045-6P29	BUSHING, SLV		Y	
SS4059-10-103	BOLT		Y	
SS4059-14-072	SPACER		Y	
SS4059-14-107	SPACER		Y	
SS4059-15-47	SPACER,SLV		Y	
SS4059-16-166	SPACERSLV		Y	
SS4062-2	VALVE		Y	
SS4090-06DU06	BUSHING		Y	
SS4090-08DU03	BUSHING		Y	
SS40C1A084000	HOSE ASSY	Y		
SS40C1A110000	HOSE ASSY	Y		
SS40C1A350000	HOSE ASSY		Y	
SS40C1A390000	HOSE ASSY	Y		
SS40C1D300000	HOSE ASSY		Y	
SS40C27A412090	HOSE ASSY	Y		
SS40C28D146085	HOSE ASSY	Y		
SS40C6A150000	HOSE ASSY	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS40C6A196000	HOSE	Y		
SS40C6D334000	HOSE ASSY	Y		
SS40C7A082000	HOSE ASSY	Y		
SS40CF1A084000	HOSE		Y	
SS40CF1F076000	HOSE ASSY	Y		
SS40CF27A162080	HOSE ASSY	Y		
SS40CF28A390045	HOSE ASSY	Y		
SS40CF28F106356	HOSE ASSY	Y		
SS40CF6F380000	HOSE ASSY	Y		
SS40CF6F446000	HOSE ASSY	Y		
SS40CF7A107000	HOSE ASSY		Y	
SS40CF7A360000	HOSE ASSY	Y		
SS40CF7A400000	HOSE ASSY	Y		
SS40CF7A416000	HOSE ASSY	Y		
SS40CT1A040000	HOSE ASSY	Y		
SS40CT1A110000	HOSE ASSY	Y		
SS40CT1A344000	HOSE ASSY	Y		
SS40CT1C224000	HOSE AY		Y	
SS40CT1C360000	HOSE ASSY	Y		
SS40CT1D250000	HOSE ASSY	Y	Y	
SS40CT28A120270	HOSE ASSY	Y		
SS40CT28A140180	HOSE ASSY		Y	
SS40CT6C206000	HOSE ASSY	Y		
SS40CT6D260000	HOSE		Y	
SS40CT6D334000	HOSE ASSY	Y		
SS40CT7A122000	HOSE	Y		
SS40CT7C170000	HOSE ASSY	Y		
SS40D1D180000	HOSE ASSY	Y		
SS40D1G190000	HOSE ASSY	Y		
SS40D28G535182	HOSE ASSY	Y		
SS40D6D216000	Hose Assy	Y		
SS40D7D164000	HOSE ASSY	Y		
SS40D7D396000	HOSE ASSY	Y		
SS40DF6F094000	HOSE ASSY	Y		
SS40DF6F380000	HOSE ASSY	Y		
SS40DF7F164000	HOSE ASSY	Y		
SS40DF7F260000	HOSE ASSY	Y		
SS40DT1D180000	HOSE ASSY	Y		
SS40DT1G206000	HOSE	Y		
SS40DT6D216000	HOSE ASSY	Y		
SS40DT6D224000	HOSE ASSY.	Y		
SS40DT7D057000	HOSE ASSY	Y		
SS40DT7D174000	HOSE ASSY	Y		
SS40DT7D396000	HOSE ASSY	Y		
SS41-07A180000	HOSE ASSY	Y		
SS420BU1564	CAP NUT		Y	
SS42C02A154000	HOSE ASSY		Y	
SS42C02A160000	HOSE ASSY		Y	
SS42C02D154000	HOSE ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS42C02D156000	HOSE ASSY		Y	
SS42C04C092000	HOSE ASSY		Y	
SS42C04C100020	HOSE ASSY		Y	
SS42C04C100045	HOSE ASSY		Y	
SS42C04C106355	HOSE ASSY		Y	
SS42C04C134275	HOSE ASSY		Y	
SS42C06D094280	HOSE ASSY		Y	
SS43D01D254000	HOSE ASSY		Y	
SS43D01D510000	HOSE ASSY		Y	
SS43D01J430000	HOSE ASSY			Y
SS43D02A150000	HOSE		Y	
SS43D02J183000	HOSE ASSY			Y
SS43D03E046000	HOSE ASSY		Y	
SS43D03E544000	HOSE ASY		Y	
SS43D03E560000	HOSE ASSY		Y	
SS43D08F140305	HOSE ASSY		Y	
SS43D15F156265	HOSE		Y	
SS43D15F220180	HOSE		Y	
SS43D21K146160	HOSE ASSEMBLIES			Y
SS43DF01A244000	HOSE ASSY		Y	
SS43DF01F283000	HOSE ASSY		Y	
SS43DF03A286000	HOSE		Y	
SS43DF03A357000	HOSE	Y	Y	
SS43DF03F204000	HOSE ASSY	Y		
SS43DT03A360000	HOSE ASSY		Y	
SS4401-5	WASHER		Y	
SS4408-01	SHIM		Y	
SS4409-010	WASHER		Y	
SS4409-012	WASHER		Y	
SS4409-016	WASHER		Y	
SS4409-017	WASHER		Y	
SS4409-018	WASHER		Y	
SS4409-027	WASHER		Y	
SS4409-034	WASHER			Y
SS4409-037	WASHER		Y	
SS4409-055	WASHER		Y	
SS4409-063	Washer, Flat			Y
SS4410-1	SLEEVE		Y	
SS4410-2	SLEEVE		Y	
SS4410-3	SLEEVE	Y		
SS4411-08S025	WASHER		Y	
SS4411-08S025NP	WASHER		Y	
SS4411-08S026	WASHER	Y	Y	
SS4421-1	GASKET	Y		
SS4422-1	GASKET	Y		
SS48152K2215	PLUG BUTTON		Y	
SS48C1C115000	HOSE ASSY	Y		
SS48C1C210000	HOSE ASSY		Y	
SS48C2C153000	HOSE ASSY		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS48C2C165000	HOSE		Y	
SS48C2D140000	HOSE		Y	
SS48C3C111000	HOSE ASSY	Y	Y	
SS48C4A077015	HOSE ASSY		Y	
SS48C4A085340	HOSE ASSY		Y	
SS48C4A086000	HOSE ASSY		Y	
SS48C4A087000	HOSE ASSY		Y	
SS48C4A106022	HOSE ASSY		Y	
SS48C4A140340	HOSE ASSY		Y	
SS48CT1A130000	HOSE ASSY		Y	
SS48CT1C170000	HOSE		Y	
SS48CT3A132000	HOSE ASSY		Y	
SS48CT3A136000	HOSE ASSY		Y	
SS48CT3A177000	HOSE ASSY		Y	
SS48CT3A210000	HOSE ASSY		Y	
SS48CT3C106000	HOSE		Y	
SS48CT3C111000	HOSE		Y	
SS48CT3C260000	HOSE ASSY		Y	
SS48CT5A140180	HOSE ASSY		Y	
SS48CT5D130185	HOSE		Y	
SS48CT6A165270	HOSE ASSY		Y	
SS48CT6A187270	HOSE ASSY		Y	
SS48CT6D114280	HOSE		Y	
SS48CT8D144000	HOSE ASSY		Y	
SS49MC902J4-20R	RESTRICTOR		Y	
SS49MC902J4-21R	RESTRICT ASY		Y	
SS49PA804D4-21V	RESTRICTOR A		Y	
SS49PA833-4D22W	RESTRICTOR		Y	
SS49PB815-4-16W	Restrictor	Y		
SS49TC815-4J19W	Restrictor	Y	Y	
SS49TC919-2J19W	RESTRICTOR		Y	
SS5012-10-25	SCREW		Y	
SS5013-08-06	SCREW		Y	
SS5013-08-07	SCREW	Y		
SS5013-10-21	SCREW		Y	
SS5013-10-24	Screw			Y
SS5013-10-27	SCREW		Y	
SS5013-10-28	SCREW		Y	
SS5013-10-29	SCREW		Y	
SS5013-10LP21	SCREW		Y	
SS5013-10LP22A	SCREW	Y		
SS5014-04-5	BOLT		Y	
SS5014-06-39	BOLT	Y		
SS5014-06-8	BOLT	Y		
SS5017	BOLT	Y		
SS5025-06-030	BOLT	Y	Y	
SS5028-03-06	BOLT		Y	
SS5044	BUTTON	Y		
SS5053-8-6	JO BOLT	Y	Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS5072C3H	WASHER		Y	
SS5072CS4H	WASHER		Y	
SS5072T5H	WASHER		Y	
SS5074	LOCK WASHER	Y		
SS5075-11	LOCKWASHER	Y		
SS5075-6	WASHER		Y	
SS5079-04	FITTING		Y	
SS5081-12	Nut			Y
SS50-815K4J	VALVE		Y	
SS5082-01	NUT,BARREL		Y	
SS5082-02	NUT		Y	
SS5086-04	Nut			Y
SS5086-06	Nut			Y
SS5086-07	Nut			Y
SS5086-08	Nut			Y
SS5086-09	NUT		Y	
SS5086-10	NUT		Y	
SS5086C04S	Nut			Y
SS5086C05S	Nut			Y
SS5086C07S	Bolt			Y
SS5088-04	Bolt			Y
SS5088-05	Bolt			Y
SS5088-06	Bolt			Y
SS5088-07	Bolt			Y
SS5089-06	Bolt			Y
SS5091C03-2	NUT			Y
SS5091C03-4	Nut			Y
SS5093-7	NUT	Y		
SS5093N5	Nut			Y
SS5103C03	Washer			Y
SS5103C04	Washer			Y
SS5103C05	Washer			Y
SS5103C06	Washer			Y
SS5103C08	WASHER			Y
SS5111-05-008	Bolt			Y
SS5112-410	Bolt			Y
SS5112-411	Bolt			Y
SS5112-412	Bolt			Y
SS5112-415	Bolt			Y
SS5120-5-16	Bolt, Pawl			Y
SS5120-5-20	Bolt, Pawl			Y
SS5120-5-22	Bolt, Pawl			Y
SS5120-5-24	Bolt, Pawl			Y
SS5120-5-26	BOLT,PAWL			Y
SS5162-12	Nut			Y
SS5162-14	Nut			Y
SS5162-16	Nut			Y
SS5162-18	Nut			Y
SS5162-7	Nut			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS5181-10	NUT,BARREL			Y
SS5211-10-47	Bolt			Y
SS5211-10H80	Bolt			Y
SS5211-4-14	Bolt			Y
SS5211-4-6	BOLT		Y	
SS5211-4-8	Bolt			Y
SS5211-4B14	BOLT		Y	
SS5211-8H6	Bolt			Y
SS5242-2	SET SCREW	Y		
SS52A0220X1000	WASHER		Y	
SS52B4100Z4370	SHIM	Y		
SS52C0635Z1562	SHIM	Y	Y	
SS52F0350X1250	SHIM		Y	
SS52F0365X0625	Washer			Y
SS52G0250X0750	Washer, Lam			Y
SS52H0943Z1500	WASHER,LAM		Y	
SS52J0190Y0312	SHIM	Y		
SS52M0450Z1000	WASHER		Y	
SS52M0635Z1562	SHIM		Y	
SS52M0765Z1560	Shims			Y
SS52M1140Z2000	Shims			Y
SS52M1281Z1625	WASHER	Y		
SS52N0760X1037	WASHER	Y	Y	
SS52N0880X1037	WASHER	Y	Y	
SS52N1140Z2000	WASHER, LAMIN.			Y
SS52N1265Z1750	WASHER,LAM		Y	
SS52N1350X1700	SHIM		Y	
SS5300-0810	Screw, Machine			Y
SS5300-1-07	Screw, Machine			Y
SS5300-1-08	Screw, Machine			Y
SS5300-1-09	Screw, Machine			Y
SS5300-1-12	Screw, Machine			Y
SS5300C0808	Screw, Machine			Y
SS5300C1-05	Screw, Machine			Y
SS5300C1-08	Screw, Machine			Y
SS5300C1-09	Screw, Machine			Y
SS5300C1-10	Screw, Machine			Y
SS5300C1-11	Screw, Machine			Y
SS5300C1-12	Screw, Machine			Y
SS5300C1-13	Screw, Machine			Y
SS5300C1-14	Screw, Machine			Y
SS5300C1-17	SCREW, MACHINE			Y
SS5300C1-20	Bolt (AIDC)			Y
SS5300C1-23	Screw			Y
SS5300C4-12	Screw			Y
SS5302-1-12	Screw, Machine			Y
SS5302C1-10	Screw. Flat head			Y
SS5302C1-11	Screw			Y
SS5302C4-12	Screw			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS5305-1G07	TIPCAP SCREW		Y	
SS5305-1S11	Screw			Y
SS5305L4G08	TIPCAP SCREW		Y	
SS6101-01	Handle			Y
SS6124-03-070	CORD	Y		
SS69I04	VALVE		Y	
SS69I08	VALVEDRAIN		Y	
SS69I12	DRAIN VLV		Y	
SS7015-232	BUS BAR		Y	
SS7016-1	STATIC GRD		Y	
SS7036-600	SADDLE MOUNT	Y		
SS7039-2C-C09	Jumper			Y
SS7039N2D-E23	Jumper			Y
SS7072B0500S004	SLEEVE INSUL		Y	
SS7072G0125W010	SLEEVE INSUL		Y	
SS70-902K6J	VALVE		Y	
SS70-905L4J	VALVE		Y	
SS70-905N4J	CHECK VALVE		Y	
SS70-908L6J	VALVE		Y	
SS714626482ER08	BACKSHELL COMP.			Y
SS7560D12	CLAMP	Y	Y	
SS7560H10R	Clamp			Y
SS7560H10T	CLAMP		Y	
SS7560H14T	CLAMP		Y	
SS7560H16R	Clamp			Y
SS7560H16T	CLAMP		Y	
SS7560H17R	Clamp			Y
SS7560H21	CLAMP		Y	
SS7560H22T	Clamp			Y
SS7560H24T	CLAMP	Y	Y	
SS7560H3HY	Clamp			Y
SS7560H4T	CLAMP	Y		
SS7560H5T	CLAMP		Y	
SS7560H6	CLAMP		Y	
SS7560H6HY	Clamp			Y
SS7560H6T	CLAMP		Y	
SS7560H8T	Clamp			Y
SS7560H9HY	Clamp			Y
SS7560H9T	CLAMP		Y	
SS7563-13NBC	Clamp			Y
SS7563-14NBCL	Clamp			Y
SS7563-15NBCL	CLAMP		Y	
SS7563-16NBCL	Clamp			Y
SS7563-4NBCL	Clamp			Y
SS7563-6NBCL	Clamp			Y
SS7563-7NBCL	CLAMP		Y	
SS7563-8NBCL	CLAMP			Y
SS7565-22NBC	Clamp			Y
SS7565-22SC	CLAMP SADDLE	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS7567-16	CLAMP		Y	
SS76A11262SS180	HOSE, SYSTEM 3 PUMP CASE DRAIN			Y
SS76C08154SE000	HOSE, SYSTEM 3 PUMP CASE DRAIN			Y
SS76C08171RS000	HOSE ASSY.			Y
SS76C09124SS000	HOSE ASSY.			Y
SS76C10125SR344	HOSE ASSY.			Y
SS76C10140SE349	Hose, System 2 MRS Return			Y
SS76C10143SE319	HOSE ASSY.			Y
SS76C10143SR319	HOSE ASSY.			Y
SS76C11113SS204	HOSE ASSY.			Y
SS76C11117EE205	HOSE ASSY.			Y
SS76D10175SS000	HOSE			Y
SS76E08216RS000	HYDRAUL. HOSE			Y
SS76E12402SS000	HOSE			Y
SS9002S76	DECAL		Y	
SS9003-001	DECAL		Y	
SS9003-006	NAME PLATE		Y	
SS9003-011	NAME PLATE		Y	
SS9013-1191	IDENT PLATE		Y	
SS9013-1266	DECAL		Y	
SS9013-1343	DECAL		Y	
SS9013-1348	DECAL	Y	Y	
SS9013-1349	DECAL		Y	
SS9013-1352	DECAL		Y	
SS9013-1367	DECAL	Y		
SS9013-1368	DECAL		Y	
SS9013-1370	DECAL	Y	Y	
SS9013-1380	INDENT.		Y	
SS9013-1381	DECAL		Y	
SS9013-1382	I.D. PLATE		Y	
SS9013-1393	DECAL	Y	Y	
SS9013-1394	DECAL		Y	
SS9013-1401	DECAL		Y	
SS9013-1402	DECAL		Y	
SS9013-1403	DECAL		Y	
SS9013-1409	DECAL		Y	
SS9013-1410	DECAL		Y	
SS9013-1414	DECAL		Y	
SS9013-1422	DECAL	Y	Y	
SS9013-1431	DECAL	Y	Y	
SS9013-1432	DECAL		Y	
SS9013-1433	DECAL		Y	
SS9013-1434	DECAL	Y	Y	
SS9013-1435	DECAL	Y	Y	
SS9013-1436	DECAL	Y	Y	
SS9013-1439	DECAL		Y	
SS9013-1447	DECAL		Y	
SS9013-1458	DECAL		Y	
SS9013-1459	DECAL	Y	Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS9013-1467	DECAL		Y	
SS9013-1468	IDENT PLATE		Y	
SS9013-1469	DECAL		Y	
SS9013-1470	PLACARD		Y	
SS9013-1485	DECAL		Y	
SS9013-1486	METAL CAL		Y	
SS9013-1488	DECAL	Y	Y	
SS9013-1489	DECAL	Y	Y	
SS9013-1491	PLACARD		Y	
SS9013-1498	DECAL		Y	
SS9013-1499	DECAL		Y	
SS9013-1501	DECAL		Y	
SS9013-1502	DECAL		Y	
SS9013-1503	METAL CAL.		Y	
SS9013-1504	DECAL		Y	
SS9013-1505	DECAL		Y	
SS9013-1506	DECAL		Y	
SS9013-1507	METAL CAL		Y	
SS9013-1508	DECAL		Y	
SS9013-1509	DECAL	Y	Y	
SS9013-1510	DECAL	Y	Y	
SS9013-1511	DECAL		Y	
SS9013-1514	DECAL		Y	
SS9013-1516	DECAL		Y	
SS9013-1517	DECAL		Y	
SS9013-1518	DECAL	Y		
SS9013-1530	DECAL		Y	
SS9013-1571	DECAL		Y	
SS9013-1572	DECAL	Y		
SS9013-1573	DECAL		Y	
SS9013-1582	DECAL		Y	
SS9013-1583	DECAL		Y	
SS9013-1587	DECAL		Y	
SS9013-1589	DECAL	Y	Y	
SS9013-1604	ID PLATE		Y	
SS9013-1605	DECAL		Y	
SS9013-1622	DECAL		Y	
SS9013-1625	PLACARD	Y	Y	
SS9013-1626	DECAL	Y	Y	
SS9013-1628	DECAL	Y	Y	
SS9013-1647	DECAL		Y	
SS9013-1648	DECAL		Y	
SS9013-1649	DECAL		Y	
SS9013-1669	IDENT PLATE		Y	
SS9013-1804	PLACARD		Y	
SS9013-1866	IDENT PLATE		Y	
SS9013-1875	IDENT PLATE	Y	Y	
SS9013-1894	DECAL	Y	Y	
SS9013-1907	DECAL		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS9013-1917	IDENT PLATE		Y	
SS9013-1918	IDENT PLATE		Y	
SS9013-1979	DECAL	Y	Y	
SS9013-1999	DECAL		Y	
SS9013-202	IDENT PLATE	Y		
SS9013-2230	DECAL	Y	Y	
SS9013-2241	PLACARD	Y		
SS9013-2242	DECAL		Y	
SS9013-2469	DECAL		Y	
SS9013-2481	DECAL		Y	
SS9013-2504	IDENT PLATE		Y	
SS9013-2526	I.D. PLATE		Y	
SS9013-2609	PLACARD	Y		
SS9013-2625	PLACARD		Y	
SS9013-2626	PLACARD		Y	
SS9013-2628	NAMEPLATE		Y	
SS9013-2629	PLACARD	Y		
SS9013-2645	PLACARD		Y	
SS9013-2651	DECAL		Y	
SS9013-2652	DECAL		Y	
SS9013-414	I.D. PLATE		Y	
SS9013-415	I.D. PLATE		Y	
SS9013-936	DECAL	Y		
SS9014K85	DECAL		Y	
SS9019-244	DECAL	Y		
SS9019-2800	NAMEPLATE		Y	
SS9019-3032	DECAL		Y	
SS9019-3433	DECAL		Y	
SS9019-4910	DECAL		Y	
SS9021	NAMEPLATE		Y	
SS9026-1	NAMEPLATE	Y		
SS9028	NAME PLATE		Y	
SS9032-18	DECAL		Y	
SS9065-013	NAMEPLATE		Y	
SS9065-052	IDENT PLATE	Y		
SS9065-054	IDENT PLATE	Y		
SS9065-156	IDENT PLATE	Y		
SS9065-157	I.D. PLATE	Y		
SS9065-158	NAMEPLATE	Y		
SS9065-159	PLATE/IDENTI	Y		
SS9065-161	IDENT PLATE	Y		
SS9065-163	DECAL	Y		
SS9065-167	DECAL	Y		
SS9065-168	DECAL	Y		
SS9065-175	DECAL	Y		
SS9065-181	DECAL	Y		
SS9065-182	NAMEPLATE	Y		
SS9065-183	PLACARD	Y		
SS9065-252	DECAL	Y		

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS9065-253	DECAL	Y		
SS9065-267	DECAL	Y		
SS9065-269	PLACARD	Y		
SS9065-390	DECAL	Y		
SS9065-391	DECAL	Y		
SS9065-392	NAMEPLATE	Y		
SS9065-393	DECAL	Y		
SS9065-610	DECAL	Y		
SS9065-612	DECAL	Y		
SS9067-0025	IDENT PLATE	Y		
SS9067-0053	DECAL	Y		
SS9067-0084	DECAL	Y		
SS9067-0085	IDENT PLATE	Y		
SS9067-0086	DECAL	Y		
SS9067-0087	IDENT PLATE	Y		
SS9067-0088	IDENT PLATE	Y		
SS9067-0090	IDENT PLATE	Y		
SS9067-0091	DECAL		Y	
SS9067-0092	IDENT PLATE	Y		
SS9067-0094	IDENT PLATE	Y		
SS9067-0095	DECAL	Y		
SS9067-0096	I.D. PLATE	Y		
SS9067-0101	NAME PLATE	Y		
SS9067-0102	DECAL		Y	
SS9067-0132	IDENT PLATE	Y		
SS9067-0133	ID PLATE	Y		
SS9067-0265	NAMEPLATE		Y	
SS9067-0495	NAMEPLATE	Y		
SS9067-0651	DECAL	Y		
SS9067-0652	DECAL	Y		
SS9082-122	DECAL		Y	
SS9082-123	DECAL		Y	
SS9082-124	I.D. PLATE		Y	
SS9082-246	DECAL		Y	
SS9082-300	DECAL		Y	
SS9082-368	I.D. PLATE		Y	
SS9082-369	I.D. PLATE		Y	
SS9082-371	I.D. PLATE		Y	
SS9082-414	DECAL		Y	
SS9082-419	DECAL		Y	
SS9082-420	DECAL		Y	
SS9082-421	DECAL		Y	
SS9082-424	DECAL		Y	
SS9082-425	DECAL		Y	
SS9082-426	DECAL		Y	
SS9082-427	DECAL		Y	
SS9082-428	DECAL		Y	
SS9082-429	DECAL		Y	
SS9082-430	DECAL		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS9082-432	DECAL		Y	
SS9082-434	DECAL		Y	
SS9082-437	DECAL		Y	
SS9082-440	DECAL		Y	
SS9082-443	DECAL		Y	
SS9082-451	I.D DECAL		Y	
SS9082-457	DECAL		Y	
SS9082-460	DECAL		Y	
SS9082-464	DECAL		Y	
SS9082-467	I.D. DECAL		Y	
SS9082-541	DECAL		Y	
SS9083-01	COMPASS CARD		Y	
SS9092-002	TAB		Y	
SS9114-002	NAMEPLATE	Y	Y	
SS9114-004	NAMEPLATE	Y	Y	
SS9114-007	NAMEPLATE		Y	
SS9140-0053	PLACARD		Y	
SS9140-0054	PLACARD		Y	
SS9140-0138	IDENT		Y	
SS9140-0139	NAMEPLATE		Y	
SS9140-0140	DECAL		Y	
SS9140-0155	PLACARD		Y	
SS9140-0182	NAMEPLATE		Y	
SS9140-0332	NAMEPLATE		Y	
SS9140-0334	NAMEPLATE		Y	
SS9140-0346	NAMEPLATE		Y	
SS9140-0347	NAMEPLATE		Y	
SS9140-0362	NAMEPLATE		Y	
SS9140-1114	NAMEPLATE			Y
SS9140-1116	NAMEPLATE			Y
SS9140-1118	NAMEPLATE			Y
SS9140-1119	NAMEPLATE			Y
SS9140-1120	NAMEPLATE			Y
SS9140-1121	NAMEPLATE			Y
SS9140-1123	NAMEPLATE			Y
SS9140-1127	NAMEPLATE			Y
SS9140-1132	NAMEPLATE			Y
SS9140-1137	NAME PLATE, FUEL VENT			Y
SS9140-1145	PLACARD			Y
SS9140-1152	PLACARD, VENT			Y
SS9140-1155	NAMEPLATE			Y
SS9140-1157	NAMEPLATE			Y
SS9140-1158	PLACARD			Y
SS9140-1206	DECAL			Y
SS9140-1207	PLACARD			Y
SS9140-1209	NAMEPLATE			Y
SS9140-1218	NAMEPLATE			Y
SS9140-1227	NAMEPLATE			Y
SS9140-1267	NAMEPLATE			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
SS9140-1268	DECAL			Y
SS9140-1275	DECAL		Y	
SS9140-1276	NAMEPLATE			Y
SS9140-1374	DECAL		Y	
SS9614G30Z	FUEL CAP		Y	
SS9743A0101	FAIRLEAD		Y	
STD1360-380-000	TOOL		Y	
STD887-10	Nut, Replace Throttle Quadrant Switch			Y
T1-0076	Sw7 Mini 2-Way, Rescue Hoist Raise/Lower			Y
T1-0267	Sw2 Toggle, Searchlight On/Off/Stow			Y
T2-0114	Sw6 Slide/PB, OEI Select			Y
T32C62-825S	CLAMP		Y	
T4-0106	Sw1 4-Way, Collective/Heading Trim			Y
T4-0169	Sw3 4 Way, Searchlight Slew			Y
T5-2002-104-00	Tensiometer, Cable			Y
TA04C68SS26T	CLAMP			Y
TA04C68SS35T	CLAMP			Y
TA09012COR52	CLAMP		Y	
TA09112CO24CC	Clamp, Remove/Install Cabin Heat Ducting			Y
TA155S4-10D	COUPLING	Y		
TA1720H08T	CLAMP		Y	
TC813	MOUNTING		Y	
TD399UL081Y1	INDICATOR, Differential Pressure			Y
TDH6050-3001	Relay			Y
TDH7050-2002	Relay			Y
TDH7070-5001	Relay			Y
TDH8051-1401	RELAY		Y	
TDI24DL	24V TIMER		Y	
TF1072-08S	FIRESLEEVE		Y	
TF1072-10S	FIRESLEEVE		Y	
TF1072-12S	FIRESLEEVE		Y	
TJT120	PANEL MOUNT		Y	
TPL1304-1M	BOLTS		Y	
TPL4-3AM	BOLT		Y	
TPL4-5AM	BOLT, Detector Retention			Y
TR220	Test Set, DME, Transponder, TCAS			Y
TR5	BEARING		Y	
TR714-03	VALVE	Y		
TR752-03	VALVE		Y	
TRC4	VALVE CORE, Service Valve			Y
TSS20S40	Clamp, Remove/Install Cabin Heat Ducting			Y
TX1002-3-23	Bolt , 200 psi Floor			Y
TX1002C3-23	Bolt , 75 psi Floor			Y
TX1003C04-10	Screw, Replace Engine Accelerometer			Y
TX1003C08-10	Screw, Replace Engine Accelerometer			Y
TX1003C4-17	SCREW			Y
TX1003C5-13	SCREW, BAL. WT./JUMPER ATTACH			Y
TX1003C5-16	SCREW, BAL. WT./JUMPER ATTACH			Y
TX1003C5-19	SCREW, BAL. WT./JUMPER ATTACH			Y

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
TX1003C5-22	SCREW, BAL. WT./JUMPER ATTACH			Y
TX1004-3-5L	Bolt			Y
TX1004-3-6L	Bolt			Y
TX1004C08-1	Bolt			Y
TX1004C08-14	Bolt			Y
TX1004C08-17	Bolt			Y
TX1004C08-19	Bolt			Y
TX1004C08-2	Bolt, Pan Head			Y
TX1004C08-3	Bolt, Pan Head			Y
TX1004C08-4	Bolt			Y
TX1004C3-1	Bolt			Y
TX1004C3-2	Bolt			Y
TX1004C3-2L	Bolt			Y
TX1004C3-3	Bolt			Y
TX1004C3-4	Bolt			Y
TX1004C3-4L	Bolt, Remove/Install Ash Tray/Cup Holder			Y
TX1004C3-6	Bolt			Y
TX1004C3-9	Bolt			Y
TX1004V3-2	Bolt			Y
TX1004V3-20	Bolt			Y
TX1004V3-5	BOLT, Cover to Heat Exchanger			Y
TX1004V4-3	Bolt			Y
TX1009C3-2	Screw			Y
TX1009C3-3	Screw			Y
TX1009C3-6	Screw , 200 psi Floor			Y
TX1009V3-3	Screw, Remove/Install Ramp			Y
TX1351C3-10P	Screw, Remove/Install Cabin Vent Fan			Y
TX1351C3-8P	Screw Cap, Replace Sponson Refrigeration			Y
U2-016	Sw4 Trigger, ICS/Radio			Y
U2-305	Sw5 Trigger, Collective Trim Release			Y
UR200	RET. RING		Y	
US1036	ADAPTER		Y	
US1978J04	ELBOW		Y	
V110J020AB	SENSE RELAY		Y	
V110J024AB	DC VOLT SENS		Y	
V110K018AA	RELAY VOLT		Y	
V15G2FL1C26K	SWITCH-LIMIT		Y	
V2045F3	VOL CTL PNL		Y	
V4-109	RECEPTACLE			Y
VC5E25ND	RESISTOR		Y	
W101P6B	SWITCH		Y	
W301	SWITCH		Y	
WC291-2-25-44-6	HEATER HOSE		Y	
WE301K	O-Ring Installation Kit			Y
WF291-1-5-40-4	FLEX DUCT		Y	
WF291-1-5-60-4	FLEX DUCT		Y	
WF291-1-5-80-4	FLEX DUCT		Y	
WF291-2-0-24-4	FLEX DUCT		Y	
WRI050	ISOLATOR		Y	

S76&92&61 Spare Parts List

Part ID	Description	S61	S76	S92
X30295ZC5	LIGHT ASSY	Y	Y	
XX6504730	Hydraulic Contamination (Patch) Test Kit			Y
Y1265-4-1	CABLE CUTTER		Y	
Z1063-9	Tire Bead Breaker Ring			Y
Z1855-02	NUT	Y		
Z3-7	EXTERNAL RING		Y	
Z-A4N	Contactora, Pump, 120AMP			Y